


Temp Alert

Alarm for monitoring a temperature range

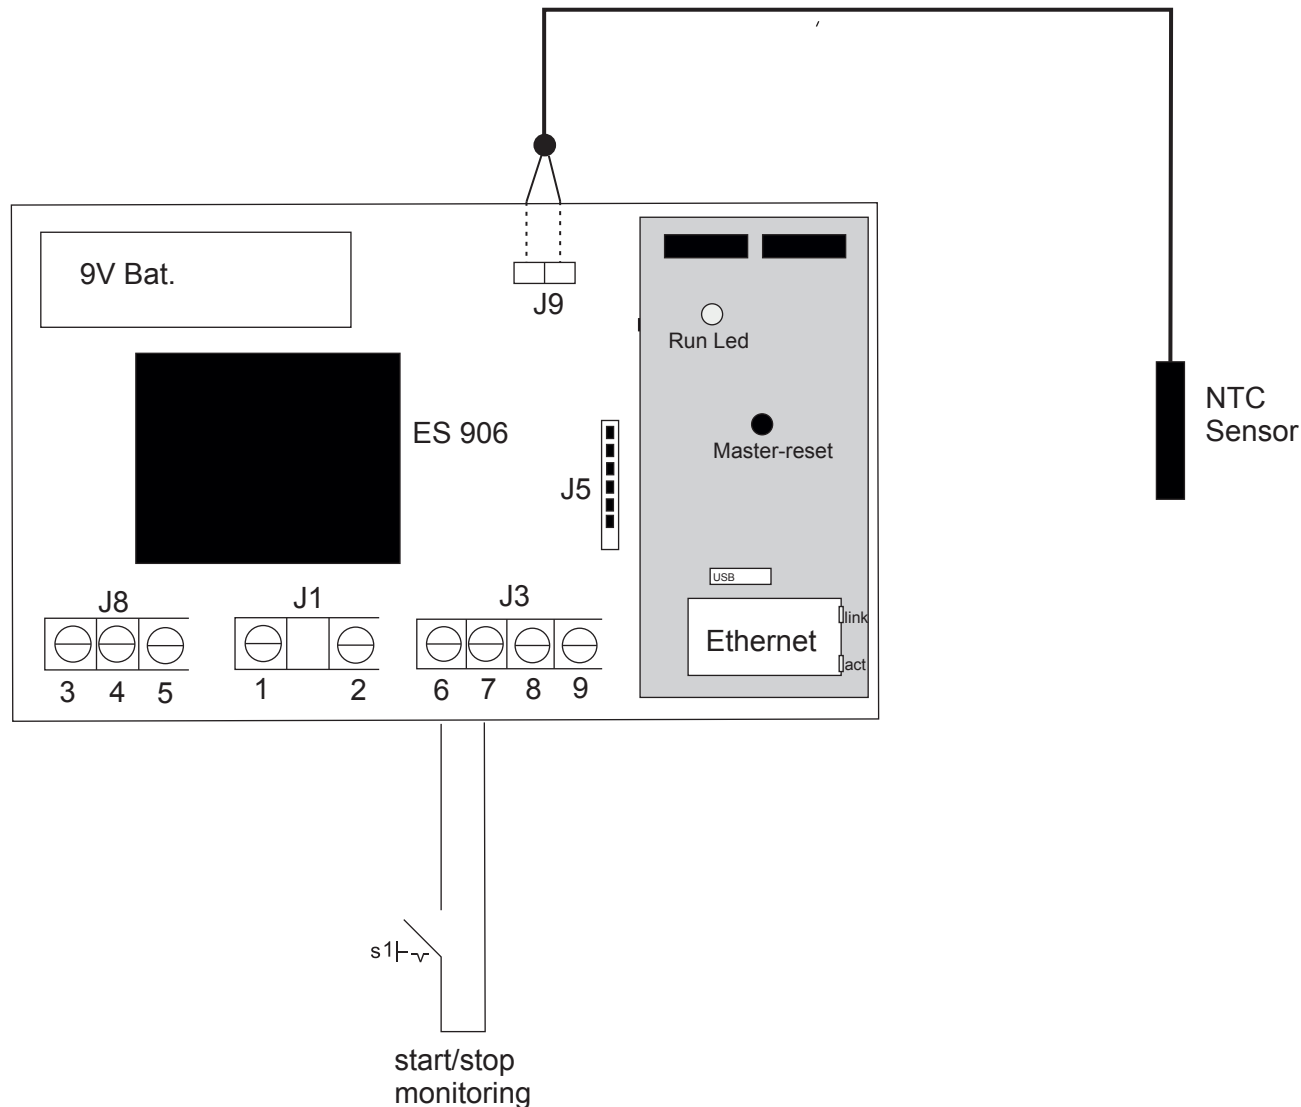

Technical specifications:

Refer to technical specifications for the i-MessageAlarm..

Description:

NTC sensor is placed where the temperature range is to be monitored and then connected to the i-MessageAlarm. The temperature area is set within the i-MessageAlarm and the alarm will go off when the temperature rise above or falls below the set temperature area. At the same time the i-Message Alarm sends a text message to a predetermined address. For the ladder function to work, the i-MessageAlarm must be connected to the internet.

Adjustment:

Please refer to the i-MessageAlarm manual.

Montering:

The TempAlert is to be mounted according to general applicable mounting regulations.
i-MessageAlarm is to be mounted on a level and stable surface and fixed with screws in the 4 corner holes. The i-MessageAlarm is not to be mounted on moving or vibrating surfaces.

Drawing: 950-206715_TempAlert_40830_UK

Rev.: 1.0

Date: 12/5-2016

Drawn by: THJ/DF

Manufactured by: **LS Control A/S**

Industrivej 12, DK-4160 Herlufmagle, Denmark

lsc@lscontrol.dk

tel. +45 5550 5550

fax +45 5550 2265

LSCONTROL