


FREQUENCY INVERTER

# EP66

0,4kW – 90kW – IP66

*Safety instructions Installation  
& operating manual*

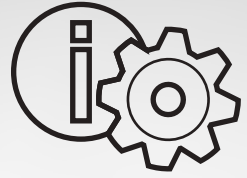

**EURa**<sup>®</sup>  
**DRIVES**

| [www.euradrives.eu](http://www.euradrives.eu) |

**ENGLISH**

EP66 – Rev.03 -EN- SOFT Rev. 1.1x  
© 2017 EURA Drives GmbH

<b>INDEX</b>	<b>PAGE</b>
1) Common installation- and safety rules for series EP66 inverters	1
2) Product data / product power range	10
3) Inverter mounting	15
4) Electrical connection of EP66 inverters	18
5) Control-board – hardware and I/O channel configuration	25
6) Operating panel	31
7) Inverter parameter setting	34
8) Parameter group 100: Basic parameter	35
9) Parameter group 100: Basic parameter	41
10) Parameter group 300: Digital I/O configuration	46
11) Parameter group 400: Analogue I/O channel configuration	50
12) Parameter group 500: Fixed-frequency, automatic cycling frequencies	54
13) Parameter group 600: DC-Bake control / Aux. functions	55
14) Parameter group 700: Error handling and protection functions	59
15) Parameter group 800: Autotuning – Motor data programming	63
16) Parameter group 900: RS485 Hardware and interface parameters	65
17) Parameter group A00: PID controller parameter	66
18) Parameter group C00: Speed / Torque control	70
19) EP66 Diagnostic	72

**Rev. 03 -EN- 2017 KPP**  
**Software revision: 1.1x**

## 1) Common installation- and safety rules for EURA DRIVES inverters, series EP66

### IMPORTANT!!

This instruction manual explains rules for correct installation and safe operation of frequency inverters, series EP66 (denominated inverter, or drive in the following guidance). It is mandatory to follow exactly, what reported in this instruction manual.

This instruction manual must be read and fully understood before any action of installation or placing in operation of the inverter.

Anybody, who operates the inverter, or the machine, equipped with inverter, must have access to this operation manual, and must become familiar with drives technology, especially regarding safety and warning issues

All instructions in this manual must be observed, to:

**Guarantee safety for humans and machinery**  
**Allow safe function and reliable operation**  
**Permit approvals and certifications**  
**Keep manufacturers warranty in force**

Following pictograms are used in this instruction manual:

### DANGER-WARNING-CAUTION

**ATTENTION:** Life or health of the user are endangered or substantial damage to property may occur.



### ATTENTION – OBSERVE

Measures, necessary for safe and trouble-free operation



## Common:

**DANGER**



Frequency inverters operate with voltages, hazardous to humans

Depending on inverters protection degree (IP class) and mounting conditions, life parts may be accessible.

During heavy duty operation, and especially in case of malfunction, parts/surfaces of inverters or accessory may reach dangerous temperatures, which may result in personnel injury.

Inadmissible removal of covers or other parts of the inverter, improper use, and not qualified mounting or operation may result in high risk for personnel injury and/or machinery damage

**DANGER**



All activity for mounting, cabling, placing into operation and operation of the inverter must be done exclusively by proper educated and trained people.

The standards IEC 364 and/or CENELEC HD384, DIN VDE 0100 and all other national safety standards are to observe.

Trained people has specific professional training, knowledge of all relevant standards and safety rules and experience in application of electrical/electronic drive systems.

These professionals are in condition to judge assigned duties, and resulting risks.

## Specified application of frequency inverters

**DANGER**



The inverters, reported in this manual are components of electrical/electronic drive systems and determinate for integration in machines and plants only.

The E2000+ inverter serves exclusively for the control and regulation of three phase motors (asynchronous / synchronous motors)

The connection of loads, other than above listed, may result in damage of the machinery, destruction of the inverter or connected equipment, and serious risk of personnel injury.

## Observe specific standards and rules

**DANGER**



It is not allowed, to place in operation the plant, before the compliance with all standards of the machinery safety regulation (89/392/EWG) and the EMC rules (89/336/EWG) has been checked

Inverters are conformal with low voltage directive (73/231/EWG). Harmonized standards EN50178 (VDE160) and EN60439-1 (VDE0660, T. 500) are applied.

EURA DRIVES EP66 is a product with limited availability (in sense of IEC 61800-3). Frequency inverters may create high frequency noise, in case the operator is responsible for proper countermeasures.

## Handling, transportation and storage

**DANGER**



Inverter components may become damaged and insulating distances may be reduced, as a result of improper transportation, handling or storage of the drive.

In this case, the inverter does not anymore comply with product specific standards and rules, and it is not allowed to place it into operation.

Therefore it is mandatory, to check the inverter for mechanical integrity, before installation and operation.

The inverter may contain components, sensitive to electrostatic discharge. Therefore avoid, touch components inside the drive.

It is recommended to store the inverter, using the original box. If inverters are stored or out of use for more then one year, DC capacitors may lose their capacity. Please contact the inverter manufacturer for reformatting procedure

## Installation of the inverter

**DANGER**



Frequency inverters EP66 must be mounted, following instructions in chapter: *Inverter mounting*

Only fixed installation is permitted.

Follow all effective standards and rules for correct grounding!!

All minimum distances to other inverters or components are to respect. Minimum distances are reported later on this manual.

Allow adequate air circulating, especially, in case of vertical mounting, one on top of the other.

Use proper shielded cables, for inverter control signals and feed back signals

Intrusion of dust, liquids, water, steam and aggressive gases must be excluded

Attention on adequate heat exchange of the cabinet

Use of the inverter in explosion risky area is not allowed

## Electrical wiring of frequency inverters

**DANGER HAZARDOUS  
CAPACITOR CHARGE**



The entire plant must be disconnected from power, crosschecked for loss of voltage and locked **before** starting any work

**The discharge time of the internal DC-LINK capacitors may take up to 5 minutes, it is not allowed to open the enclosures or to do any maintenance work during discharge cycle!!**

**LVD – DOUBLE  
INSULATON**



All connection terminals for control and feed-back are single insulated in sense of EN50178.

In case of connection to external equipment with double insulation, the user has to provide proper arrangement, to guarantee double insulation in sense of EN50178 for the whole system

**GROUNDING**



EP66 inverters are designed for steady state installation, using fixed wiring. It is not allowed, to use power plug or similar mobile connection.

Depending on different EMC filter options, the leakage current to ground may exceed 3,5 mA. Therefore it is recommended to use earth connection wiring, with minimum section of 10mm<sup>2</sup> (copper) or use double wiring (in sense of EN50178)

All grounding connections must be as short as possible, all leading to one common central point (star arrangement).



**Long motor leads**

A motor cable length, exceeding **30m**, may result in over-voltage spikes on the motor side. These peaks may damage the internal insulation of the motor.

The use of motor chokes, sinus filter or dV/dt limiting filters may prevent from risk of motor damage.

Generally it is recommended, to use inverter duty motors

In case of any doubt, please contact the manufacturer

**All output filter components must have inverter manufactures approval**



**Insulation testing**

In case of insulation testing of the whole network, it is recommended to disconnect the inverter and all optionally mounted filter components. Some components, used inside the inverter may impact measurement accuracy, o may become destroyed

All EURA inverters have to pass the insulation test, according to EN15178, during the final test procedure on the production line.



**Potential equalization**

If components with no galvanic insulation are used and connected to the inverter, proper measures are necessary, to guarantee potential equalization.

**DANGER OF FIRE  
BURNS**



**Braking resistors**

All kinetic energy of the system converts to heat, during braking cycle. This energy dissipates in the braking resistor.

Improper dimensioning of the braking resistor or insufficient heat exchange may result in high risk of fire

Also over-voltage on the input power supply may lead to high risk of fire

Therefore all braking resistor must have two thermistors, series connected, which contacts open in case of over-temperature, disconnecting the whole power supply, on inverter input terminals

**Braking resistors surface may become very hot, even during normal operation. Therefore it is necessary to mount the resistor in a safe location, using proper protecting cages.**

**IMPACT ON  
DIFFERENTIAL  
CURRENT  
BREAKERS**



**Differential current breaker (FI)**

**The use of frequency inverters may delay or even inhibit the trigger of differential current breakers.**

For life protection, all plant with inverters must have following:

Input wiring protection: Fuses or automatic over-current breaker (Dimensioning: see tables).

**Differential current protection: "All-sensitive" protectors (breaker), minimum requirement type „B“ , mounted on all inverter power lines.**

**It is not permitted to connect other equipment on inverter power lines.**

**For single phase inverters (230V class) the use of differential current breaker type "A" or "F" is allowed.**

The trigger current of the differential current breaker depends on the operating frequency, motor type, PWM frequency and the length of the motor cable

It is recommended, to use differential current breaker with 300 mA threshold (for industrial environment).



## Basic rules for reliable and safe operation

- Proper dimensioning of the system (motor, inverter, mechanical elements).
- Check for correct inverters rated voltage, consider tolerances too
- Review all inverter and motor cabling, including correct terminal tightening torque (torque values: see table).
- Use proper cable for all control wiring, separate control cable from power cable, min. 15 cm distance. Use shielded cable for all control connections, exceeding 1 meter
- Twist wires to braking resistors or use shielded cables
- Shielded cables are recommended for motor connection too, especially with distances, exceeding 30 meters.
- Avoid earth loops, all earth connections should have large contact areas, all leading to one central grounding point (star connected)

**IMPORTANT FOR  
SAVE INVERTER  
OPERATION**



One separate circuit breaker is recommended for each inverter – allowing separate switch off of single inverters.

### **CHECK FOR PROPER INVERTER PROGRAMMING**

**Improper programming of the inverter may result in unpredictable behavior of the system and subsequent high risk of damage and/or personnel injury.**

**The inverter may be enabled for multiple automatic restart attempts in case of fault – delayed restart is possible.**

**Unpredictable systems reactions may become the result of internal inverter defects.**

**The inverter may ignore commands, speed, STOP instructions, or signals originated from external components.**

**The braking function of the inverter may fail.**

**Depending on the application, external safety components, working independently from the inverter, are required, to guarantee the safety of the whole system**

### **Inverter protection-functions**

Although the inverter is equipped with intelligent protections functions, the repetitive triggering of those functions may result in inverter damage.

The inverter is protected against output short circuit and earth fault, each displayed by a specific code on the display.

Repetitive earth faults and short circuits may damage the power stage of the inverter.

The motor must be fixed connected, in case, where interruption of the motor line is required (for safety reason), the circuit should open/close with inverter in STOP condition only (final stage disabled).

It is recommended, to keep the inverter powered on at all time, if for application reason repetitive power on cycling is required, it should not exceed one cycles every 5 minutes – otherwise contact the manufacturer.





**Power-grid specification:**

The inverter is build for symmetric three phase power supply systems, with voltage phase to earth/neutral not exceeding 300V. A transformer can be used for adaptation to higher voltages. For single phase inverters the maximum input voltage is 240V +15%, 400V class three phase inverters can work up to 460V +15%. Contact the inverter manufacturer, before connecting to unbalanced, floating, or unsymmetrical power systems.



**Power supply – short circuit capability**

Input chokes ( $U_k=4\%$ ) are recommended to connect the inverter on a power grid with high short circuit capability, this especially for continuous full load operation.

**If the power supply capability exceeds by 20 times the inverter power, the use of chokes is mandatory.**

**Measurements on inverter input and output:**

Current and voltage may have no sinus shaped waveform on inverters input/output side.

If improper testing instruments are used, the result may become inaccurate, or in worst case, the inverter and/or the test instrument may become destroyed.

On input side, the current waveform is composed by fundamental and harmonics, while on output side the voltage waveform is PWM modulated.

The used instruments must be able to handle the various signal waveforms. For simple measurements, a high quality moving iron instrument could be suitable.



**The inverter manufacturer must be contacted in case of any question, regarding this safety/instruction manual, or if some parts of it have not been fully understood.**



**Please ask before installing or placing on operation the system.**

**This is mandatory, to avoid any risk for machinery damage and/or personnel injury.**

## EMC: Basics and recommendations for installation

The EP66 series inverters are electrical devices, designed for installation in industrial area.

**EP66 inverters are not designed to work stand alone, these inverters are considered as part of a complex system, for this reason, no separate EMC marking is applied on the inverter.**

**The machine builder / system integrator is obligated to prove the compliance with actual EMC standards for the whole system.**

Normally, the inverter integrated EMC filters are sufficient, to meet the actual EMC limits (this has been confirmed by measurements, performed by independent body).

**Inverters E2000+ are designed for use in "second environment", (in sense of EN61800-3). This means installation in industrial area, where power supply is done via separate transformer.**

**Fore installation in "first environment" (residential area – public low voltage power grid), additional filter components may become necessary, to meet EMC rules.**

### EMC - adequate installation

Mounting in metal cabinet, if possible, the cabinet should be divided into power and control area, using metal shielding barrier, or similar

Connect all metal parts, grounding cables, cable shields on one central point, using the blank mounting plate as contact area.

Use 10mm<sup>2</sup> cables for potential equalization, "star" connected on one central point.

Please consider, that inverters and filters may have more than 3,5 mA leakage current, therefore use proper earth/ground conductors:

**Grounding conductor min. 10 mm<sup>2</sup> (copper)**

**Grounding connection with separate monitoring system, which disconnects automatically in case of fault.**

**Dual grounding, using separate cable and terminals.**

Use shielded cables, wherever possible, with copper mesh, common cable steel protection is not working as shield.

Connect shields on large blank areas with potential equalization bars. Use special cable glands, with integrated contact brushes.

It is not allowed to extend cable shield, using single wire.

Mount all external filter components as close as possible to the noise source (inverter) – get perfect contact, mounting directly on the blank cabinet plate.

Keep all wiring as short as possible, separate different networks, min. 15 cm distance.

Different networks are: power supply, motor cable (incl. brake resistor), low voltage control wiring (control signals, feed back, data line).

Twist all unshielded cables

Unused wires in cables should be connected to ground

## Inverters with UL mark: Additional information

Following information are valid for inverters, designed for use in countries, which require UL approval. All information below must be available to all who are responsible for commercialization, installation and place in operation.

### UL Standards

The UL/cUL mark applies to products in the United States and Canada and it means that UL has performed product testing and evaluation and determined that their stringent standards for product safety have been met. For a product to receive UL certification, all components inside that product must also receive UL certification.



### UL Standards Compliance

This drive has been tested in accordance with UL standard UL508C, File No. E363934 and complies with UL requirements. To ensure continued compliance when using this drive in combination with other equipment, meet the following conditions:

- 1) Do not install the drive to an area greater than pollution severity 2 (UL standard)
- 2) Installation and operating instructions shall be provided with each device.

The following markings shall appear in one of the following locations: shipped separately with the device; on a separable, self-adhesive permanent label that is shipped with the device; or anywhere on the device itself.

- a) Designation markings for each wiring diagram;
- b) Markings for proper wiring connections.
- c) "Maximum Surrounding Air Temperature 40°C." or equivalent;
- d) "Solid State motor overload protection reacts when reaches 150% of FLA" or equivalent;
- e) "Install device in pollution degree 2 environment." or equivalent;
- f) For Models of Frame Size (EP66-0007T3UBR;EP66-0011T3 UBR;EP66-0015T3 UBR;EP66-0022T3UBR): "Suitable For Use On A Circuit Capable Of Delivering Not More Than 5,000 rms Symmetrical Amperes, 480 Volts Maximum When Protected By made by COOPER BUSSMANN L L C Class T Fuse: JJS-15." or equivalent.  
For Models of Frame Size (EP66-0030T3UBR;EP66-0037T3UBR;EP66-0040T3UBR): "Suitable For Use On A Circuit Capable Of Delivering Not More Than 5,000 rms Symmetrical Amperes, 480 Volts Maximum When Protected By made by COOPER BUSSMANN L L C Class T Fuse: JJS-25." or equivalent.  
For Models of Frame Size (EP66-0055T3UBR;EP66-0075T3UBR): "Suitable For Use On A Circuit Capable Of Delivering Not More Than 5,000 rms Symmetrical Amperes, 480 Volts Maximum When Protected By made by COOPER BUSSMANN L L C Class T Fuse: JJS-35." or equivalent..
- g) "Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes" or the equivalent;
- h) "CAUTION – Risk of Electric Shock" should be provided, followed by instructions to discharge the Bus Capacitor or indicating the time required (5 minutes) for Bus Capacitor to discharge to a level below 50 Vdc;
- i) "Drives have no provision for motor over temperature protection" or equivalent;
- j) For used in Canada only: "TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED \_\_480\_ V (PHASE TO GROUND), 480 V (PHASE TO PHASE), SUITABLE FOR OVERVOLTAGE CATEGORY \_III\_, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE WITHSTAND VOLTAGE PEAK OF \_6 kV" or equivalent.

**Field Wiring Terminal Markings – Wiring terminals shall be marked to indicate the proper connections for power supply and load, or a wiring diagram coded to the terminal marking shall be securely attached to the device:**

- a. "Use 60/75°C CU wire" or equivalent;
- b. Required wire torque, type and range listed: see chapter 4) *Empfohlene Leitungsquerschnitte – Sicherungen Leistungsklemmen*


**Grounding – The wire connector intended for ground connection for field installed equipment, shall be clearly identified such as being marked "G", "GRD", "Ground", "Grounding", or equivalent or with the grounding symbol (IEC 417, Symbol 5019).**

Tightening torque and wire section for field grounding wiring are marked adjacent to the terminal or on the wiring diagram.

## 2) Product data / product power range


### Product naming convention

EP66 – 0007 T3

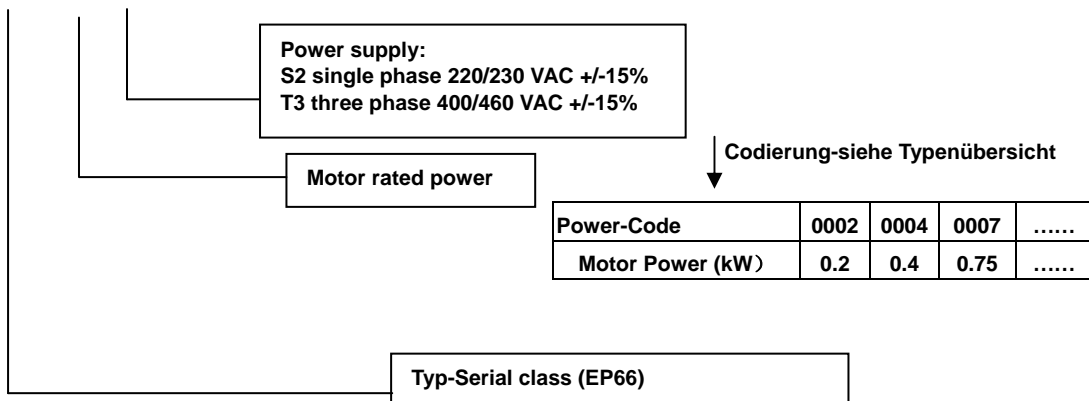

### Optionen Bezeichnung

D F1 Y 4 B R

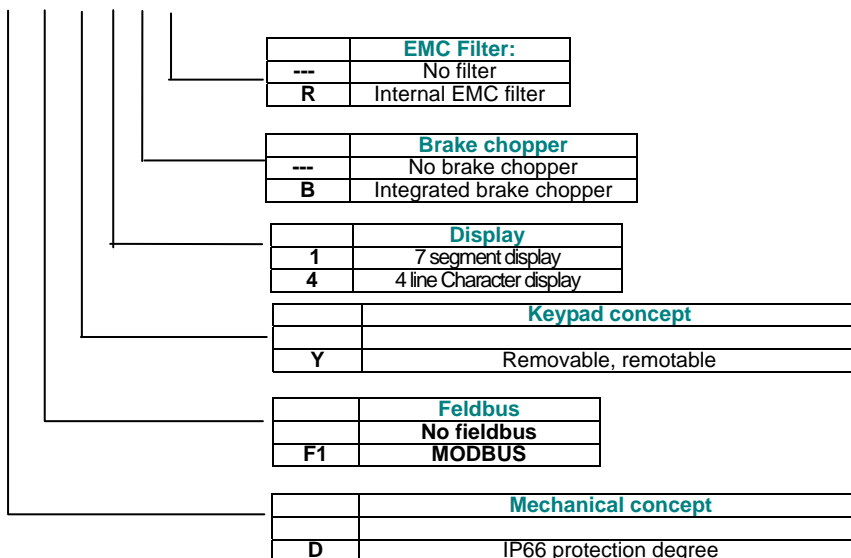

### Nameplate

The adjacent picture shows a typical nameplate of an series EP66, three phase, 400V 5,5 kW inverter, 12A rated current, including following options: F2 (MODBUS), B (Brake-chopper) R (integrated EMC-Filter)



## Mechanical construction

There are two different basic concepts:

**Inverter with power range from 0,75 to 22 kW:** Aluminium diecast heathsink/enclosure unit, ABS cover with integrated removable keypad – framesize: I1 - I3

**Inverter with power range from 18,5...90 kW:** IP66 rated steel construction with terminal access through metal cover, ABS cover with integrated removable keypad - framesize I4 – I6

Appearance of an EP66 BG i2 inverter with options



## 2) Product data / Product naming convention

Appearance of an EP66 - [Size I6](#) inverter - without cover





## 2) Product data / Product naming convention

### Technical data - inverter series EP66

<b>Power supply</b>	Rated voltage	3-phase 380...460V +/- 15% - 1phase 230V +/- 15%
	Input frequency	44...67 Hz
	EMC filter	Integrated for 2. environment (up to 90 kW)
<b>Output</b>	Output voltage	0.....U-input
	Output frequency	0.....650 Hz
	Resolution of output frequency	0,01 Hz
	Overload capability	150% - 60 sec. / 10 Min
<b>Control mode</b>	PWM control-modes	V/Hz - Mode SENSORLESS VECTOR (SLV) – Speed / torque control Permanentmagnet Synchronus Motor PMM control
	PWM frequency	0,8.....16 kHz
	V/Hz characteristic	Linear, quadratic, and user-programmable curve – Voltage setpoint
	Starting torque	150% rated torque at 0,5 Hz (in SLV mode)
	Torque boost	Automatic / manual
	Motor data input	Manual input / intelligent AUTOTUNING function
	Speed range	1:100 in SLV mode
	Speed precision	+/- 0,5% (SLV)
	Torque precision	+/- 5% (SLV)
	DC-Brake	Freq. threshold, duration and intensity programmable – DC injection
	Brake chopper	Integrated chopper transistor (Brake resistors – see product table)
<b>Display</b>	4 line LCD character display	For programming and visualization of different operating parameters
<b>I/O Channels, control functions</b>	Inverter control - Start/Stop	To configure: terminals / operation panel / serial link
	Digital control inputs	8 (6) digital inputs (HIGH/LOW configurable), pulse input
	Speed / torque reference signal	Potentiometer (on operating panel / Extern), analogue input (terminals), operating panel keys, pulse input, serial link
	Reference analogue channels	2 Analogue channels 0...10V, -10V/+10V, 0..(4)20 mA (with programmable offset, gain – to concatenate mathematically each other)
	Analogue outputs	2 (1) analogue output channels, both programmable in gain, different functions to assign (0...10V, 0..20 mA)
	Digitale outputs	2 (1) digital outputs (different functions to assign)
	Relays output	1 switchover contact 5 A 230 V (programmable for different functions)
	Interface	Serial link (MODBUS – ASCII/RTU)
	Special function - control options	Jog mode, 12V / 50 mA auxiliary power supply on terminals
		PI-control / Pump control, Master/Slave control Fixed frequency control, programmable cycling frequency sequence "Catch on the fly function", AUTORESET/RESTART function
<b>Protections with fault memory</b>	Electrical protections	Overvoltage, undervoltage
		Overcurrent, overload, motor overload short circuit
	Thermal protections	Phaseloss, moptor phase imbalance Ovetemperature, motor I <sup>2</sup> xt, motor PTC/KLIXON protection
<b>Optionals</b>	Operating panel	Remote keypad / programming tool
	Brake resistors	High power resistors for heavy duty operation
	Filter / chokes	PFC chokes – dv/dt limiting output filter - sinusfilter
	Parameter copy stick	USB Stick with parameter dublication function – USB/RS485 converter
	PC-Link Software (via MODBUS)	Special tool for programming, control and diagnostic (parameter set memory)
	Parameter copy	Parameter copy-stick
<b>Environmental conditions</b>	Protection	IP66
	Operating temperature	-10.....+50 °C
	Humidity	Max. 90 % not condensing, no corrosion
	Elavation	1000 m - 1% derating / 100m above
	Vibration	Max. 0,5 g
<b>Power range</b>	Size I1.....I6	0,2.....90 kW
<b>Standards</b>	EMC	EN61800-3(2004)
	Safety	EN61800-5-1 2003



## 2) Product data / Product naming convention

### Product range, framesizes:

#### 230V single phase

Model	Rated power / current	Input current	Framesize	Dimension (WxHxD - mm)	Weight (kg)	Brake chopper	Min. brake resistance value
EP66-0004S2I1	0,4 kW - 2,5A	5A	I1	200x412x198	6,2	Integrated	80 Ohm
EP66-0007S2I1	0,75 kW - 4,5A	9A					
EP66-0015S2I1	1,5 kW - 7A	15A					
EP66-0022S2I1	2,2 kW - 10A	22A					

#### 230V three phase

Model	Rated power / current	Input current	Framesize	Dimension (WxHxD - mm)	Weight (kg)	Brake chopper	Min. brake resistance value
EP66-0004S2I1	0,4 kW - 2,5A	5A	I1	200x412x198	6,2	Integrated	80 Ohm
EP66-0007S2I1	0,75 kW - 4,5A	9A					
EP66-0015S2I1	1,5 kW - 7A	15A					
EP66-0022S2I1	2,2 kW - 10A	22A					

#### 400V three phase

Model	Rated power / current	Input current	Framesize	Dimension (WxHxD - mm)	Weight (kg)	Brake chopper	Min. brake resistance value
EP66-0007T3 I1	0,75 kW - 2 A	2,4A	I1	200x412x200	6,2	Integrated	150 Ohm/150W
EP66-0015T3 I1	1,5 kW - 4 A	4,6A					
EP66-0022T3 I1	2,2 kW - 6,5 A	7A					
EP66-0030T3 I1	3,0 kW - 7 A	9A					
EP66-0040T3 I1	4,0 kW - 9 A	11A					
EP66-0055T3 I2	5,5 kW - 12 A	16A	I2	242x418x200	8,2	Integrated	75 Ohm/500W
EP66-0075T3 I2	7,5 kW - 17 A	20A	I3	242x471x230	11,3		75 Ohm/1000W
EP66-0110T3 I3	11 kW - 23 A	29A					30Ohm/1500W
EP66-0150T3 I3	15 kW - 32 A	37A					
EP66-0185T3 I4	18,5 kW - 38 A	45A	I4	241x650x325	25		20Ohm/2000W
EP66-0220T3 I4	22 kW - 44 A	54A					
EP66-0300T3 I4	30 kW - 60 A	72A	I5	308x680x380	40	150hm/3000W	
EP66-0370T3 I5	37 kW - 75 A	85A					
EP66-0450T3 I5	45 kW - 90 A	110A					
EP66-0550T3 I5	55 kW - 110 A	132A	I6	370x770x405	57		
EP66-0750T3 I1	75 kW - 150 A	180A					
EP66-0900T3 I1	90 kW - 180 A	220A					

Note: The indicated RMS input current is approximated for direct connection to a power grid, having a short circuit capability of 20kA – For power supply above 20 kA we highly recommend the use of adequate input chokes (5% choke) to reduce the RMS current

### 3) Inverter mounting

Please read all, what reported on chapter 1) *Common installation- and safety rules for EURA DRIVES inverters, series EP66* before proceeding with inverter mounting, cabinet wiring, and putting into service the system.

#### Wallmount

EP66 series inverter correspond to IP66 protection class, therefore it is not required to mount this inverters in a cabinet.

The inverter should be mounted vertically, using all available mounting holes.

The table below, shows the minimum mounting distances in vertical and horizontal direction

We do not recommend to mound inverters in vertical array

Framesize	Minimum distance	
	Vertical	Horizontal
<15kw	A≥100mm	B≥20mm
≥15kw	A≥200mm	B≥50mm


#### Outdoor use

If it is required to mount the inverter outdoor, a shadowing shield is necessary, to prevent from direct sun. Of course all minimum distances and an adequate heat dissipation must be guaranteed.

Contact the inverter manufacturer, if this requirements can not fulfilled


#### Dimensions, footprint, shadowing

framesize I1

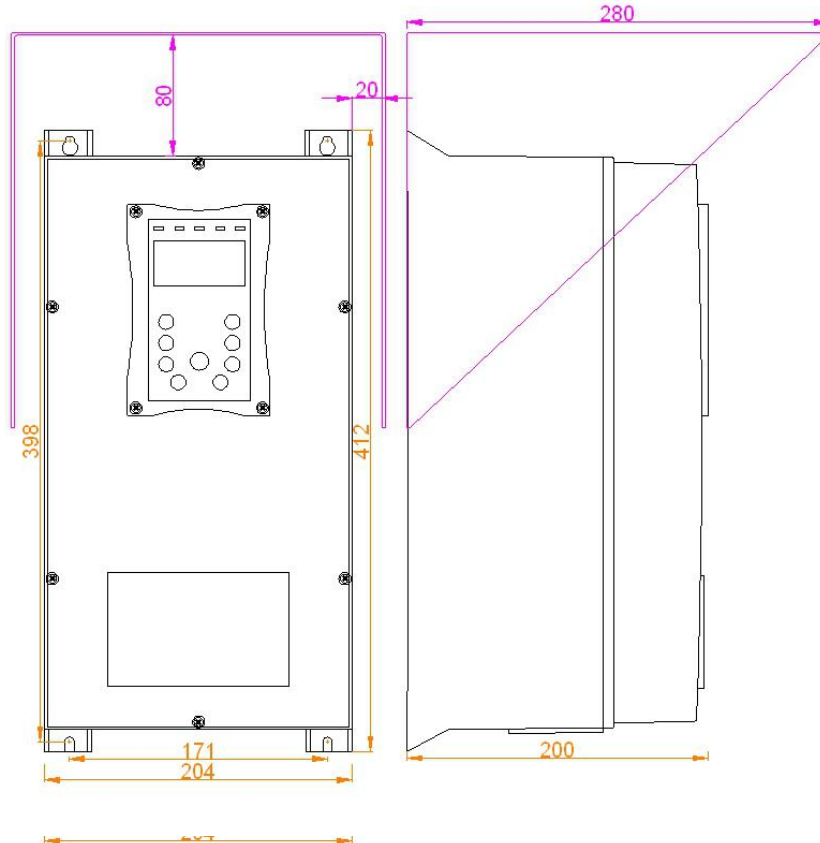


### 3) Inverter mounting

#### Framesize I2

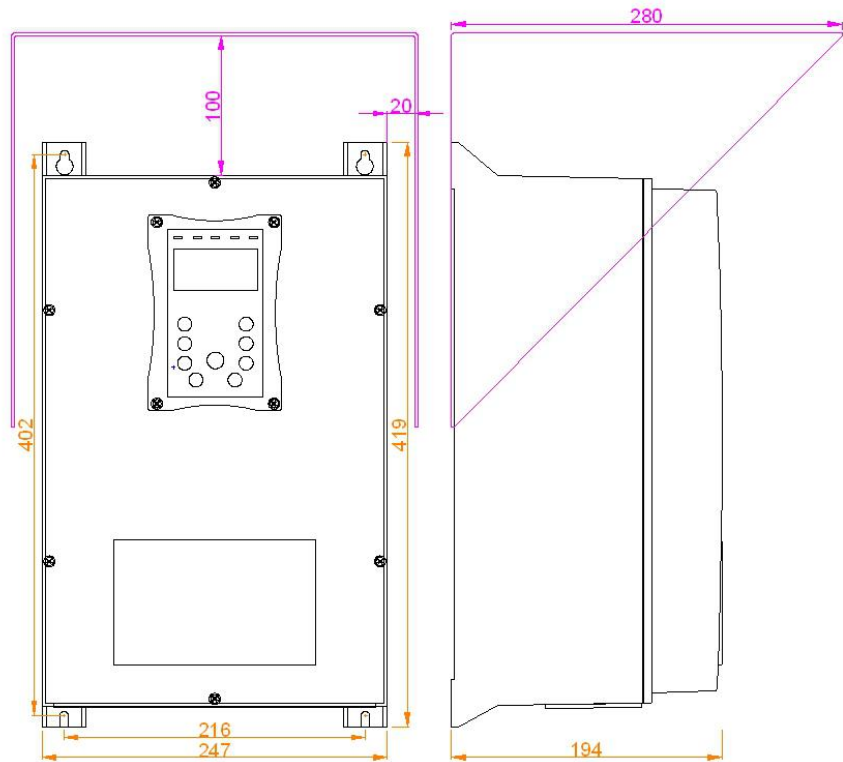

#### Framesize I3

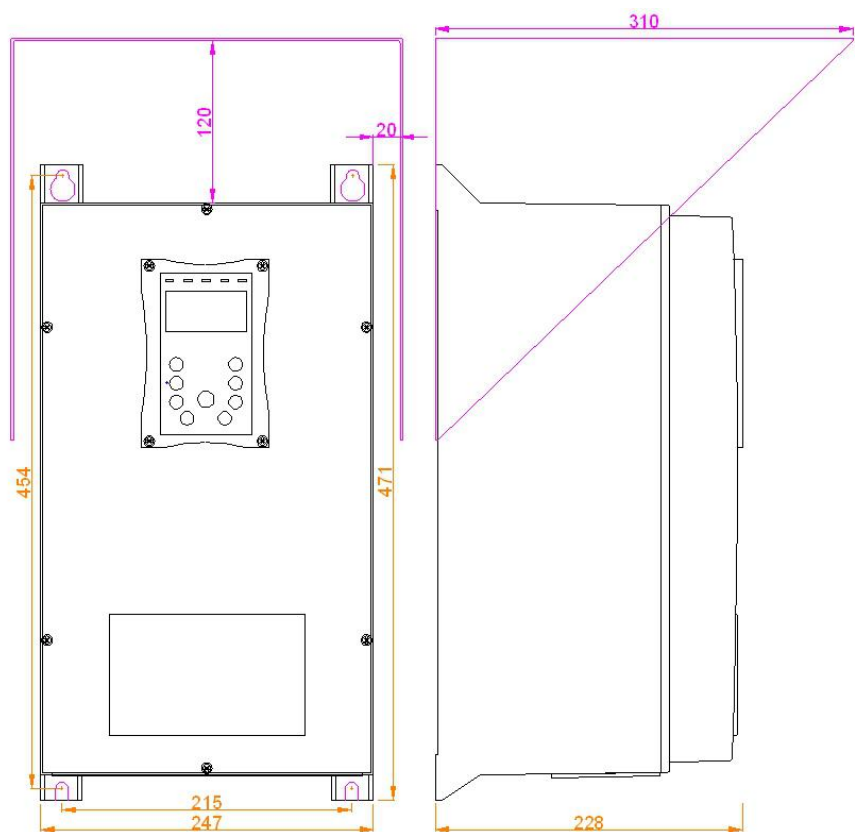

### 3) Inverter mounting

#### **Cabinet mounting**

In case of mounting the inverter in an electrical cabinet, all rules mentioned above must be observed, in addition an adequate heat exchange, out of the cabinet must be guaranteed.

**Fans:** Series EP66 inverters have forced ventilation cooling. The fans are IP66 class, long life type and do not require any maintenance.

However we recommend to clean ventilation channels on the heatsink on a regular basis

Several parameters are used to control fan operation: (F702), (F703)

see 14) *Parametergroup 700:*

#### **Maintenance and service:**

Provided that the inverter is working in respect of specified environmental conditions, provided that the inverter is used for proper application, and all instructions have been exactly followed for installation, putting in service and operation, the inverter does not need any specific maintenance.

## 4) Electrical connection of EP66 inverters

EP66 series inverter have IP66 class protection. All connection terminals are located inside the enclosure.

All control and power cables pass through a removable cable conduit plate, this plate can be used for shield connection as well, using proper cable glands with shield contacts.

**Proper IP66 ready cable glands are required, to guarantee the IP66 protection degree.**

Following holes are available on the cable conduit plate:

Framesize	Power terminals	Control terminals
I1	M20	M16
I2	M25	M16/M12
I3	M32	M16/M12


For electrical wiring of the inverter, the cover must be removed, loosening all 6 cover screws, to get access to all terminals.

**Attention!! Carefully remove the cover!!, there is a cable between keypad and control board. It is a standard 8 pole LAN cable. Pulling hard, the connectors or the cable may be damaged.**

The cable may be disconnected on inverter or keypad side, this way the cover can be removed completely.

For easy setup, a longer standard 8 pole LAN cable may be used to connect the keypad/cover unit.

Before the cover is installed again, the correct fit of the gasket must be checked. Connect the keypad/cover unit, using the original flat cable, and lay it out in the right way (see picture below).

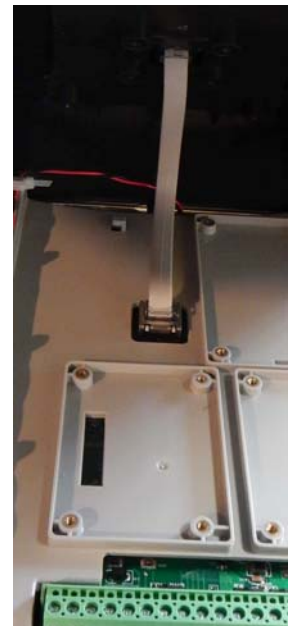

## 4) Power / Control terminal connection


EP66 inverters have separate terminals for power- and control-connection. Adequate cables are requested for wiring the inverter, all safety rules, reported in the first chapter of this manual are to observe.

**Attention: Adequate cable glands are required, to guarantee the IP66 protection class**


### Power terminals:

There are different arrangements for power terminals, depending on inverter size and number of input phases.

#### 230V Singlephase inverters 0.2 – 2,2 kW – Size I1

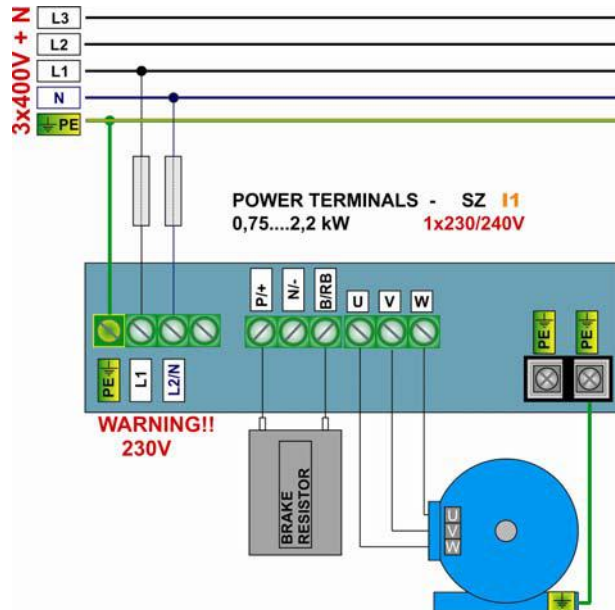


#### 230 V Threephase inverters 0,75 - 2,2 kW - Size I1

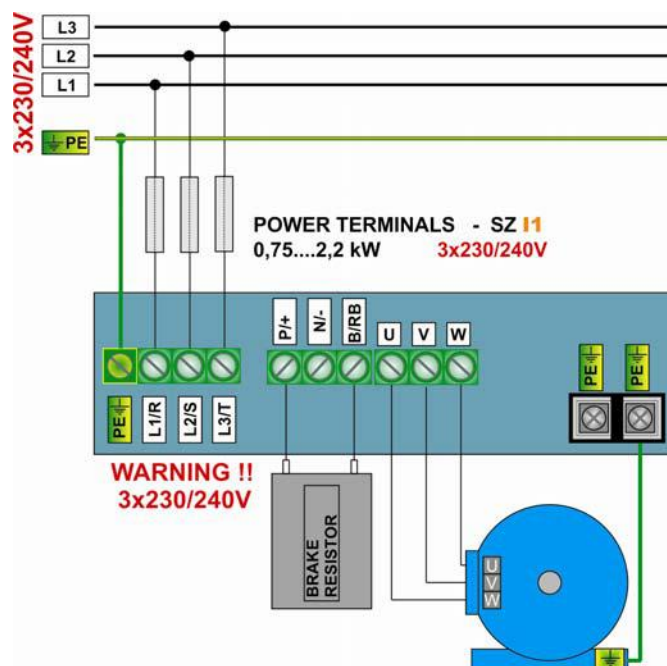


4) Electrical connections of EP66 inverters

400V Threephase inverters 0.75 – 15 kW – Size I1...I3

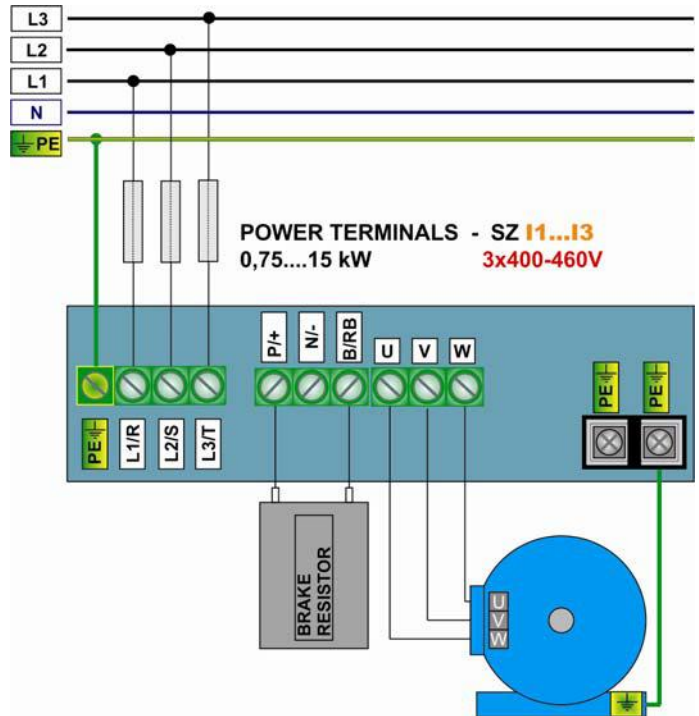

400V Threephase inverters 18,5 – 90 kW – Size I4...I6

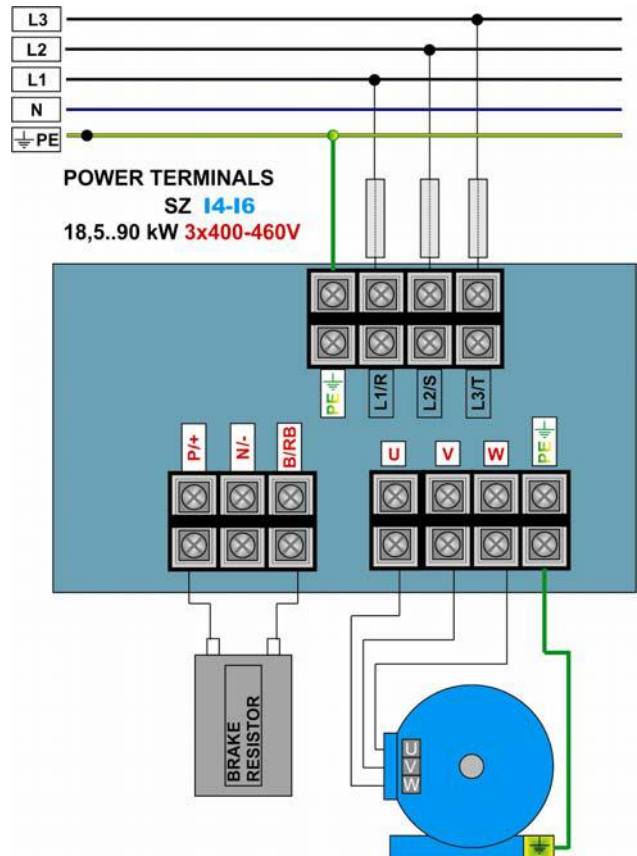



## Brake resistor:

EP66 inverters have built in chopper transistor as standard. An adequate brake resistor can be connected externally. The maximum length of the cable is 2m, cross-section depends on the current through the resistor, calculated, considering the brake switch on voltage of 800V and the resistor value.

The minimum resistor value for single inverter power ranges is reported in table on chapter: 2) *Product overview / Product data* – **the value in the table is the absolute minimum value – resistors with up to three times higher resistance value are allowed.**

Right dimensioning of the resistor, especially in sense of continuous power and peak power depends on the application (inertia, speed, brake cycle rate).

**Attention: Adequate resistors are required, to meet IP66 protection degree**

EURADRIVES accessories program offers special resistors for any kind of application.



**ATTENTION!! All stored dynamic energy of the system is converted in heat, during the brake process - heat, dissipated in the brake resistor. Overheating of the resistor, risk of burning and fire may be the consequence of improper dimensioning, wrong parameter setting, inverter fault or power supply over-voltage.**

**It is necessary to provide suitable electrical and mechanical protection of the brake resistor**

**The rules in chapter 1) *Common installation and safety rules* are to observe.**

**EURADRIVES does not take any responsibility for any damage or risk, if improper brake resistors are used.**

4) Electrical connections of EP66 inverters

Recommended cable cross sections, fuses, terminal tightening torque

Inverter model	Input current	Cable cross section (mm <sup>2</sup> AWG) terminal tightening torque	Input fuses		
			IEC 60269 gG (A)	UL-Klasse T (A)	Busmann-Typ
	<b>A</b>	<b>mm<sup>2</sup> / AWG / lbs/inch</b>			
EP66-0007T3 I1	2,4	2,5 / <b>AWG14 /10</b>	10A	10A	JJS10
EP66-0015T3 I1	4,6				
EP66-0022T3 I1	7				
EP66-0030T3 I1	9				
EP66-0040T3 I1	11	2,5 / <b>AWG12 /10,5</b>	16A	15A	JJS15
EP66-0055T3 I2	16	4 / <b>AWG10 /19</b>	25A	20A	JJS20
EP66-0075T3 I2	20			30A	JJS30
EP66-0110T3 I3	29	6 <b>AWG8 /30,4</b>	35A		
EP66-0150T3 I3	37	10 <b>AWG6 /30,4</b>	50A	40A	JJS40
EP66-0185T3 I4	45	16		50A	JJS50
EP66-0220T3 I4	54	16	63A	60A	JJS60
EP66-0300T3 I4	72	25	80A	80A	JJS80
EP66-0370T3 I5	85	35	125A	90A	JJS90
EP66-0450T3 I5	110	35		125A	JJS125
EP66-0550T3 I5	132	50	160A	175A	JJS175
EP66-0750T3 I1	180	95	200A	200A	JJS200
EP66-0900T3 I1	220	120	250A	250A	JJS250
Control cables – all framesizes		0,75-1 <b>AWG20 /2,7</b>			

Earth/ground connection

Minimum earth/ground wiring cross section – for terminal connection

Motor wiring section: S (mm <sup>2</sup> )	Minimum earth wiring cross section $\neq$ /PE/E (mm <sup>2</sup> )
S ≤ 16	= S
16 < S ≤ 35	min 16
S > 35	min S/2


Minimum earth/ground wiring cross section – for chassis connection (on designed "G" "GND" "GROUND" connection points)

Motor wiring section: S (mm <sup>2</sup> )	Minimum earth wiring cross section $\neq$ /PE/E (mm <sup>2</sup> )
S ≤ 16	<b>AWG8 / 6,2</b>


## Control terminals – control board

Two different configurations of control terminals and control boards are available, depending on inverter frame size

**Inverter size I1 – I3**  
**0,75....15 kW**

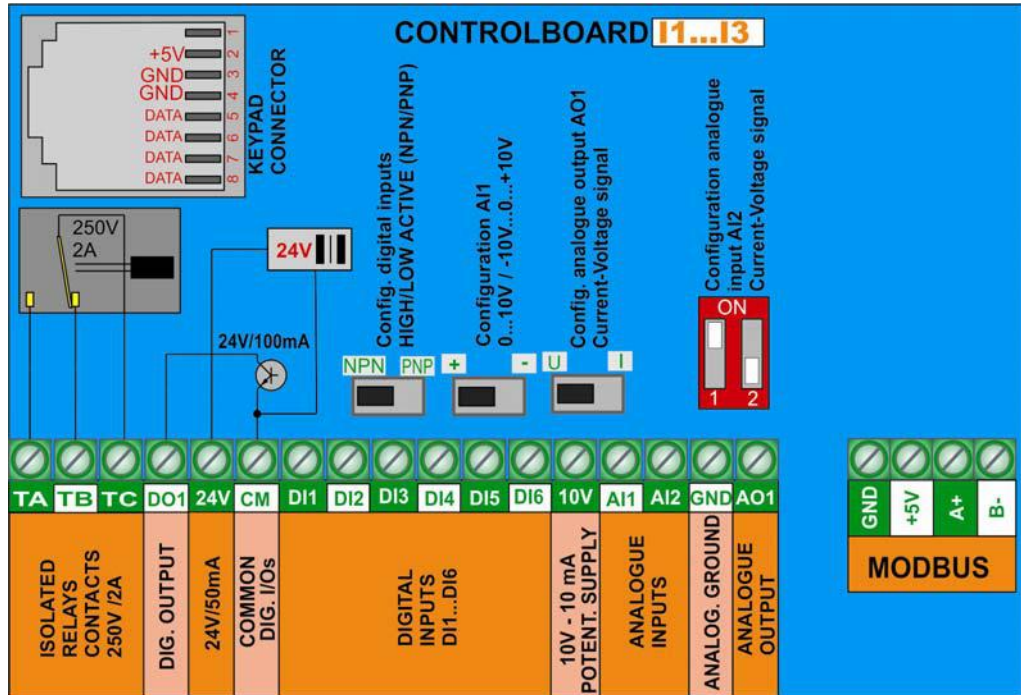

**Inverter size I4 – I6**  
**18,5....90 kW**

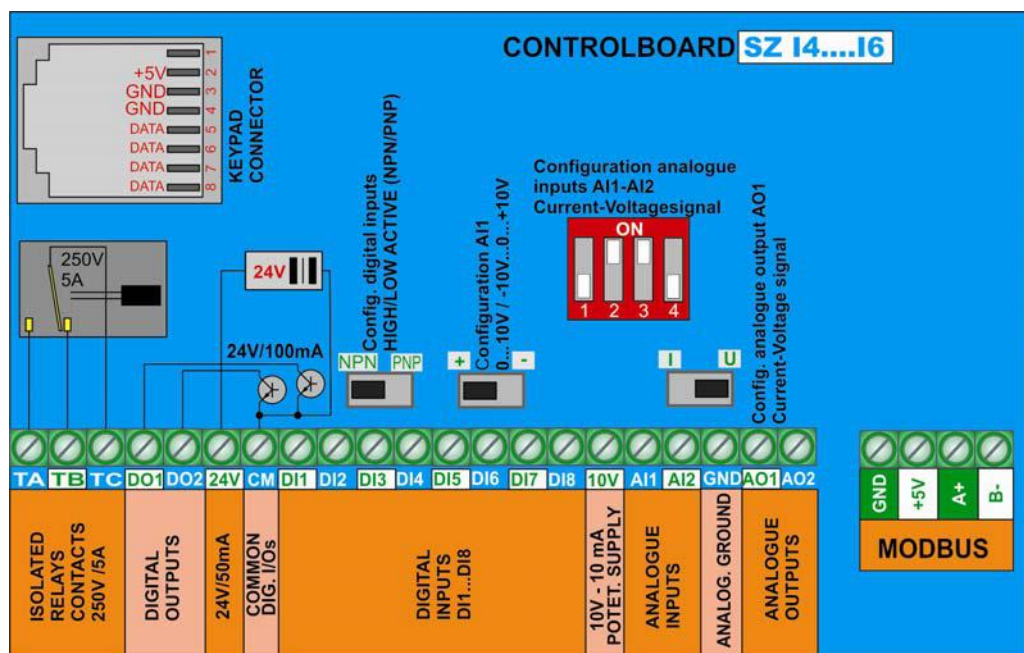


## Control terminal function and factory default configuration

Terminal	Type	Description	Hardware data	Parameter	DEFAULT
DO1	Digital / analogue outputs	Programmable digital output 1	Open-Collector output, max. 100mA-24V (referred on CM) – Pulse output	(F301) (F303)	Message F=>0Hz
DO2		Programmable digital output 2	Open-Collector output, max. 100 mA-24V (referred on CM) <i>I4-I6 only</i>	(F302)	Message F>0HZ
TA TB TC		Digital Relays output - isolated switchover contact	TC=COMMON TB=NORMAL CLOSED TA=NORMAL OPEN Max. Contact load: Inverter 15 kW and below: 2A/230VAC - above 15 kW: 5A/230V	(F300)	Fault signal
AO1		Programmable analogue output 1	To configure for voltage/current signal (reference: analogue ground GND) For current signal: set SWITCH to „I“	(F413---F426) (F431)	Output frequency 0...10V
AO2		Programmable analogue output 2	Current signal 0(4)...20 mA (reference analogue ground GND) >15kW only	(F427----F430) (F432)	Motor current 0...20mA
10V	DC 10V	10V, referred on analogue ground	10V supply for potentiometer or similar, max. current 20 mA		
AI1	Analogue - Inputs	Programmable analogue input 1	Set-point – current/voltage input for configuration see: <i>(Hardware and configuration of I/O channels)</i>	(F400-F405) (F418)	0...10V
AI2		Programmable analogue input 2	Set-point – current/voltage input for configuration see: <i>(Hardware and configuration of I/O channels)</i>	(F406-F411) (F419)	0..20 mA
GND		Analogue ground	Microprocessor ground, reference point for all analogue signals		
			24±1.5V, to CM; limited to 50mA, for powering of digital I/Os		
24V	DC 24V	Isolated 24V power supply	24±1.5V, to CM; limited to 50mA, for powering of digital I/Os		
DI1	Programmable digital inputs	Programmable digital input 1	HIGH/LOW active (NPN/PNP) selectable via hardware - see: <i>(Hardware and configuration of I/O channels)</i> Pulse signal input	(F316)	TIP Betrieb VOR
DI2		Programmable digital input 2	HIGH/LOW active (NPN/PNP) selectable via hardware - see: <i>(Hardware and configuration of I/O channels)</i> (DI7 – DI8 on inverters above 22 kW only)	(F317)	NOTSTOP Extern
DI3		Programmable digital input 3		(F318)	Klemme (FWD)
DI4		Programmable digital input 4		(F319)	Klemme (REV)
DI5		Programmable digital input 5		(F320)	RESET
DI6		Programmable digital input 6	All digital I/O are floating, including 24V supply and CM <i>DI7 – DI8 for Sz I4 – I6 only</i>	(F321)	Endstufen Freischaltung
DI7		Programmable digital input 7	(F322)	START	
DI8		Programmable digital input 8	(F323)	STOP	
CM	COMM	Common for digital I/O	Common for digital inputs and 24V aux. supply		
GND	RS 485	Analogue ground	Microprocessor ground, reference point for all analogue signals		
+5V		5V, 50 mA	5 V supply microprocessor level		
A+		Differential signal, positive	Standard: TIA/EIA-485(RS-485) Interface protokol: MODBUS	(F900-F904)	9600
B-		Differential signal, negative	Bd.Rate: 1200/2400/4800/9600/19200/38400/57600		

## Sample set-up for inverter 15 kW, 400V - framesize I3

If parameter status is unknown, factory reset is recommended: Set parameter **F160 = 1**

Analogue speed reference 0...10V (potentiometer) through input channel **AI1**: Set **F203=1**  
 START/STOP command and inversion through terminal signals: set **F208=2** (two wire control)  
 Fault signalling on relays contact: **F300=1** (already default set)  
 „Inverter enabled“ message on **DO1** **F301=14** (already default set)  
 Frequency indication output: **AO1** 0...10V = 0-50 Hz **F423=1**, **F431=0** (already default set)

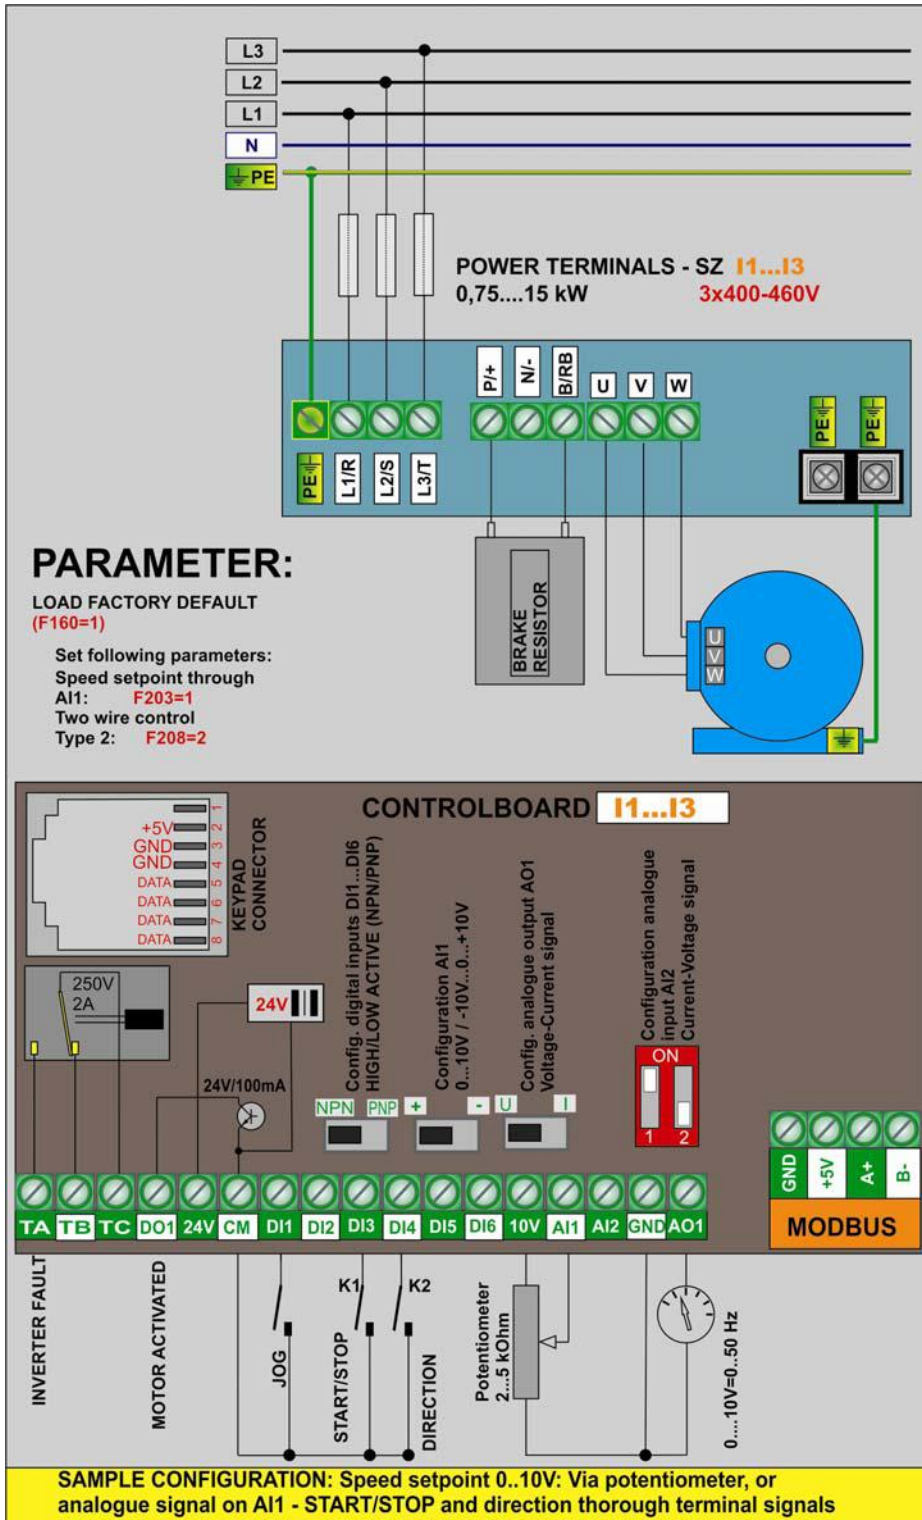



## 5) Control-board: hardware and I/O channel configuration

I/O channel configuration is a combination of hardware and software setting

For software parameter setting see chapter:

10) *Parameter group 300: Configuration of digital I/O channels*


11) *Parameter group 400: Configuration of analogue I/O channels*

Two different type of control boards are used in E2000+ inverter concept:

Control board for inverter, power range 0,75kW - 15 kW: Framesize I1 – I3

Control board for inverter, power range 18,5kW - 90 kW: Framesize I4 - I6

Control-board  
inverter  
0,75...15kW  
SIZE I1 – I3:

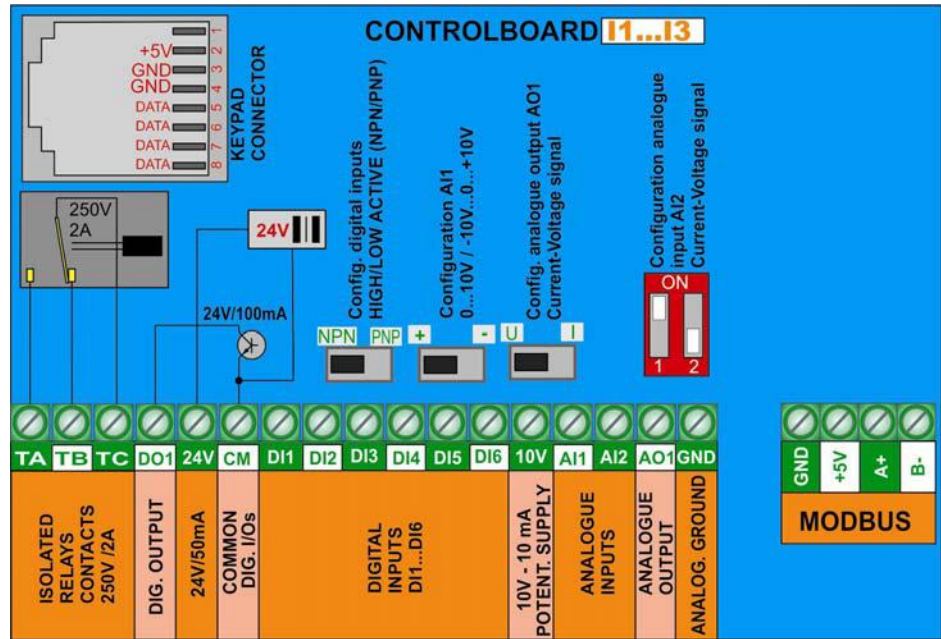

Digital input channels: I1 – I3:


A total of 6 digital input channels DI1....DI6 are available on inverter, size I1-I3. Different functions can be assigned to these inputs, programming the parameter F316....F321 – description: see chapter 10) *Parameter group 300: Configuration of digital I/O channels*

DI1 is preset for digital input and fast pulse signal input as well.

**Attention: A function can be assigned to one single digital input only (no multiple inputs for same function allowed) if a function is already assigned to a certain input (due to factory set), this assignment must be deleted (set function-code 0), before assigning to another input.**

**HIGH/LOW active (PNP/NPN) control-mode selection:** This selection is done via hardware setting of the NPN-PNP DIP-SWITCH on the control board.

All digital inputs are isolated from analogue ground, the 24 V (50mA) auxiliary power supply may be used for input control in PNP mode. CM is the common reference point for all digital inputs.

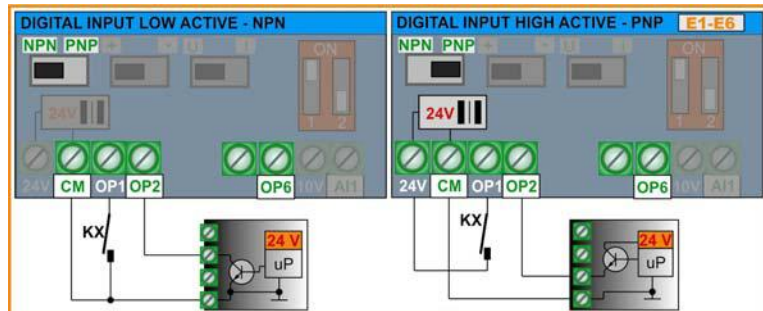

Factory setting: NPN

## 5) Control board – hardware and I/O channel configuration

### Analogue input channels: I1 - I3:

EP66 inverters SIZE I1...I3 have two independent analogue input channels AI1 and AI2, both have a resolution of 12 Bit.


Signal level configuration is done by hardware setting on the control board, and corresponding parameter setting.

For software parameter setting see: 11) *Parameter group 400: Configuration of analogue I/O channels*

**AI1 Voltage signal input:** programmable for 0...10V or -10V...0...+10V (factory-default setting 0...10V)


**AI2 Voltage/Current signal input:** to configure for 0...5V, 0...10V or 0...20 mA - (4...20 mA: offset, to set via software parameter – F406, F408) – (factory-default setting 0...20 mA)

#### Configuration AI1

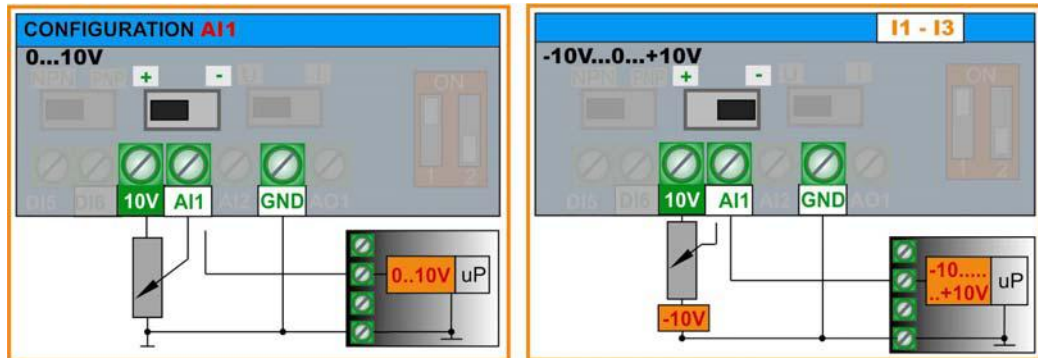

Factory default setting: 0...10V

#### Configuration AI2

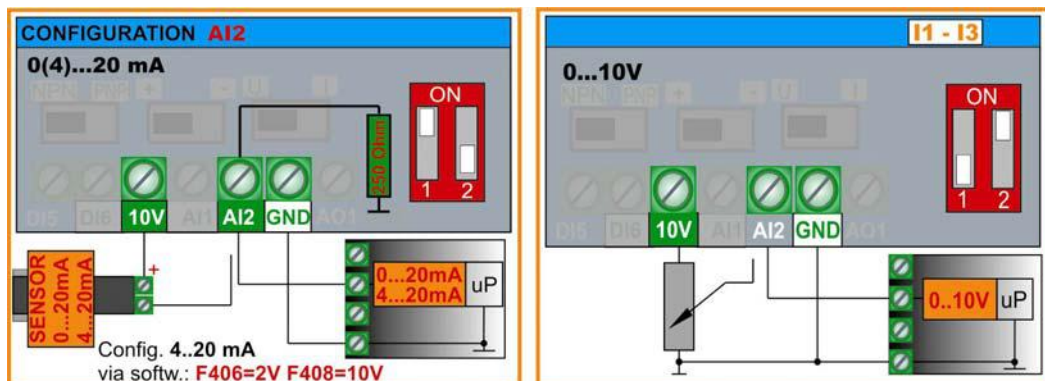


Factory default setting: 0...20mA

Input impedance for voltage control: 10 kOhm

Burden resistor for current loop: 250 Ohm

**Two wire passive current mode sensors:** Using the 10V potentiometer supply, the voltage drop across the sensor must not exceed 5V (20mA – 250 Ohm). It is possible, to use the 24V auxiliary supply, in this case, the 24V common (CM) must be connected to the analogue common (GND). Connecting digital ground with analogue ground may create more noise, especially, in cases, where long control cabling is used - shielded control cable are highly recommended in this case. An isolated 24V/24V DC/DC converter can be used as sensor supply, to keep digital control potential floating (optional).

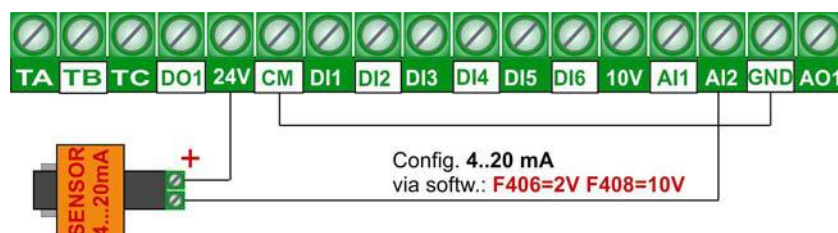



## 5) Control board – hardware and I/O channel configuration

### Digital output channels: I1 – I3:

Inverters of the EP66 series, SIZE I1...I3 have one relay contact output, and one open collector output DO1, both are free programmable for different functions, assignment codes are set in parameters F300 – F301.

**TA-TB-TC Relay output:** isolated switch over contacts, max. contact-load: 2A 230V (F300)

**DO1 Digital output:** OPEN COLLECTOR, referred to CM - U/High=24V, max. sink-current 100mA. (F301)  
DO1 may work as fast pulse signal output too, set via parameter F303. max. frequency 50 kHz,  $U_{ss}=24V$

### Analogue output channels: I1 – I3:

One analogue output channel is available on inverters EP66 SIZE I1 - I3: AO1.


AO1 may be configured as **voltage** or **current loop** signal – function assignment code: F431  
(signal conditioning F423, range setting F424 - F426)

Following hardware setting is necessary for AO1 (voltage signal / current loop selection):



Factory default setting: 0..10V

**Controlboard inverter**  
**18,5...90kW**  
 SIZE I4 – I6:

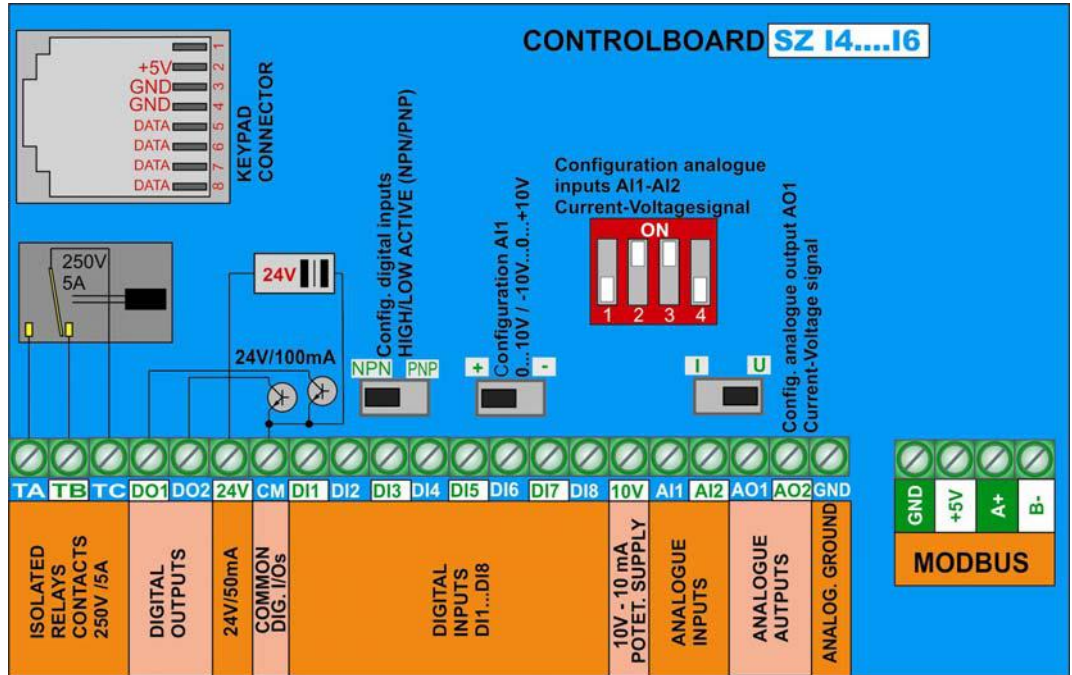

**Digital input channels: I4 – I6:**


A total of 8 digital input channels DI1....DI8 are available on inverter, size I4-I6. Different functions can be assigned to these inputs, programming the parameter F316....F323 – description: see chapter 10) Parameter group 300: Configuration of digital I/O channels

DI1 is preset for digital input and fast pulse signal input as well.

**Attention: A function can be assigned to one single digital input only (no multiple inputs for same function allowed) If a function is already assigned to a certain input (due to factory set), this assignment must be deleted (set function-code 0), before assigning to another input.**

**HIGH/LOW active (PNP/NPN) control-mode selection:** This selection is done via hardware setting of the NPN-PNP DIP-SWITCH on the control board.

All digital inputs are isolated from analogue ground, the 24 V (50mA) auxiliary power supply may be used for input control in PNP mode. CM is the common reference point for all digital inputs.

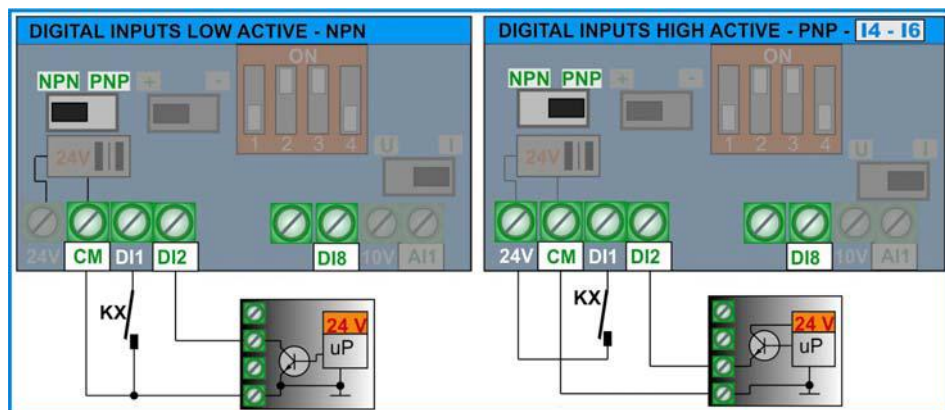

Factory default setting: NPN

5) Control board – hardware and I/O channel configuration


Analogue input channels: I4 – I6:

EP66, size I4...I6 have two independent analogue input channels AI1 and AI2, both have a resolution of 12 Bit. Signal level configuration is done by hardware setting on the control board, and corresponding parameter setting

For software parameter setting see: 11) Parameter group 400: Configuration of analogue I/O channels

**AI1 - Voltage signal / current loop:** programmable for 0...5V, 0...10V, -10V...0...+10V or 0...20 mA. (4...20 mA: offset, to set via software parameter F400, F402 - (factory-default setting 0...10V)

**AI2 - Voltage signal / current loop:** to configure for 0...5V, 0...10V or 0...20 mA. (4...20 mA: offset, to set via software parameter – F406, F408) – (factory-default setting 0...20 mA)

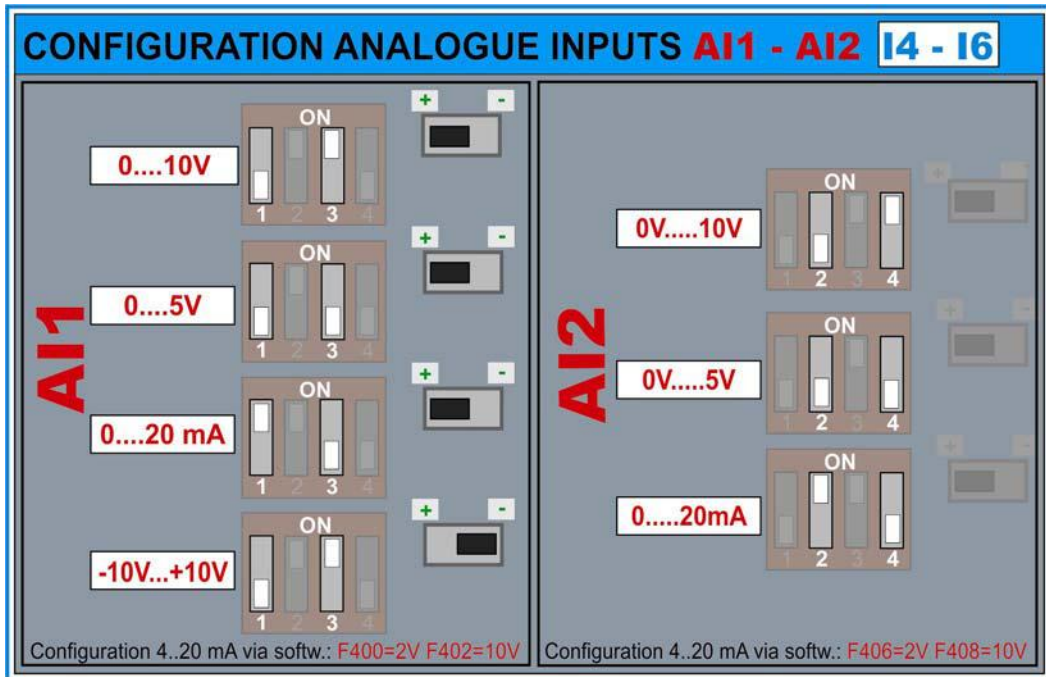


Factory default setting:

AI1: 0...10V

AI2: 0...20mA

Input impedance for voltage signal: 10 kOhm  
Burden resistor for current loop control: 250 Ohm

**Two wire passive current mode sensors:** Using the 10V potentiometer supply, the voltage drop across the sensor must not exceed 5V (20mA – 250 Ohm). It is possible, to use the 24V auxiliary supply, in this case, the 24V common (CM) must be connected to the analogue common (GND). Connecting digital ground with analogue ground may create more noise, especially, in cases, where long control cabling is used - shielded control cable are highly recommended in this case. An isolated 24V/24V DC/DC converter can be used as sensor supply, to keep digital control potential floating (optional).

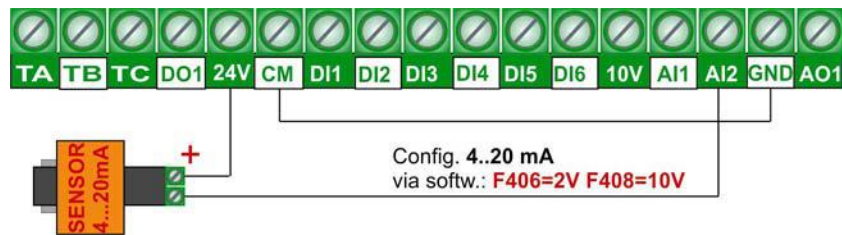

## 5) Control board – hardware and I/O channel configuration

### Digital output channels: I4 – I6:

Inverters of the EP66 series, SIZE I4...I6 have one relay contact output, and two open collector output DO1 and DO2, both are free programmable for different functions, assignation codes are set in parameters F300 – F302.

**TA-TB-TC Relay output:** isolated switch over contacts, max. contact-load: 5A 230V (F300)

**DO1 Digital output:** OPEN COLLECTOR, referred to CM - U/High=24V, max. sink-current 100mA. (F301)  
DO1 may work as fast pulse signal output too, set via parameter F303 max. frequency 50 kHz, U<sub>ss</sub>=24V


**DO2 Digital output:** OPEN COLLECTOR, referred to CM - U/High=24V, max. sink-current 100mA (F302).

### Analogue output channels: I4 – I6:

Two analogue output channels are available on inverters EP66 SIZE I4 – I6: AO1 and AO2. This two channels can be mapped to different functions.

**AO1** : To configure via hardware for **voltage signal** or **current loop** –  
(signal conditioning F423, range selection F424-F426)  
Function assignation code: Parameter F431

Following hardware settings are necessary for AO1

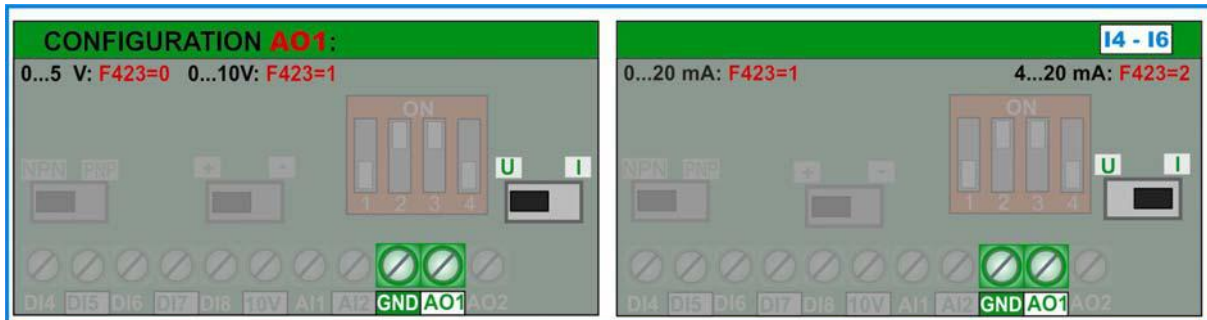

Factory default setting: 0...10V

**AO2** : Output for **current loop** signal  
(signal conditioning: F427, range setting: F428 - F430)  
Function assignation code: F432

Factory default setting: 0...20mA

### Motor protection using PTC/KLIXON: For all inverter size I1 – I3 and I4 - I6

For simple applications and short motor cables (<5m) the digital inputs DI1...DI6 (8) can be used as PTC/NTC/KLIXON signal input channel.

For hardware set-up, see picture below, the value of the resistor depends on the PTC value, if KLIXON is used for motor protection, a 1 kOhm resistor, 1 WATT is recommended. Each digital input is programmable for PTC/KLIXON signal evaluation


The trigger threshold is about 4 V – it means about 20V input signal level for PNP configuration - about 4V input signal level for NPN configuration.

If triggered, **OH1** is the error code shown on the display

Function assignation parameter F316...F323:  
code: 37 for normal open contact (NTC)  
code: 38 for normal closed contact (PTC)

**ATTENTION!!! Provide adequate insulation between PTC/KLIXON circuit and motor phases**

Switching threshold for PTC:  
For the configuration on right: about 20V between CM and D1x, this corresponds to a PTC resistance value of apx. 6 kOhm

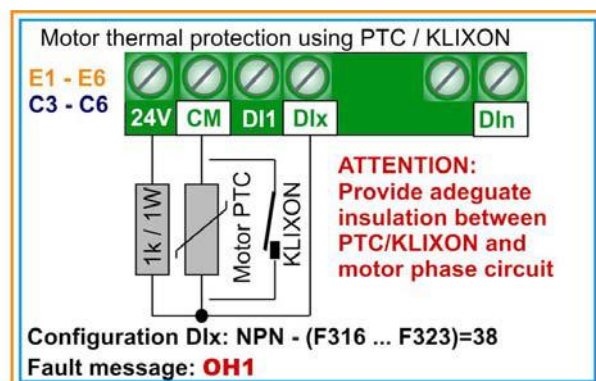

## 6) Operating panel – configuration and functions

Inverter control, parameter setting, operating-parameter display and inverter-status information are all done by the operation panel.


The adjacent picture shows the different areas of the panel:

Inverter status indication

Backlight 4 Line character display

Parameter **F646** to set backlight time

Language setting via parameter: **F647**

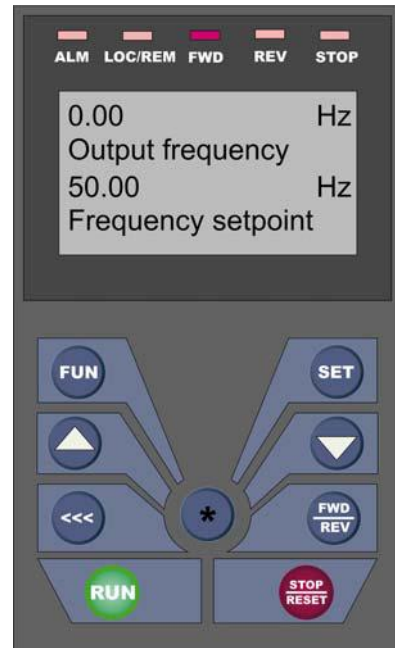

Keypad area for inverter control and parameter setting

Inverter status:



Inverter fault – detailed fault information on the text display



Inverter control via terminal signal / MODBUS – flashing in MODBUS mode



Drive started – actual direction indication



Drive in STOP mode, output frequency = 0



START/STOP key – if inverter is configured for keypad commands (F200/201)



SHIFT – to cycle through different operating parameters in START/STOP mode (F131/132), Change decimal point in parameter counter in programming mode, cycle through the fault memory



FUN – to switch over in parametrizing mode



SET – Parameter selection (to modify), Save function for changed parameter values (press SET again)



INC – DEC switch between different parameters (Parametercounter), Increase/decrease of the selected parameter values (after selection via SET)



HOT KEY – Universal key with programmable function



## 4 Line character display:

Three operating modes:


Normal operating mode:

**Primary display, line 1 and 2:**

The content of the display is defined by parameter

**F645** – value, description and units of the defined operating parameter are shown

**Secondary display in line 3 and 4:** It displays various operating parameters in START/STOP mode. The definition is done via parameter **F131/F132**.


The  key is used to cycle between all defined operating parameters



In Programming mode, the parameter group, the parameter description, the parameter number and the parameter value are shown on the display.


Pressing  and  /  keys, the parameter value may be changed,  again memorizes the new parameter value.


Line 4: HELP and different selection options

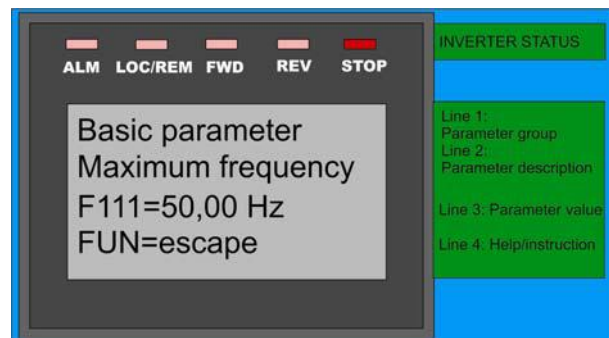

Fault mode: Line 1 and 2 show the actual fault

Line 3: Fault history (Parameter F708, F709, F710).

The key  is used to cycle through the history

 switches between fault description and fault conditions:

Hz-A-V (frequency / current / DC voltage at fault moment)

Error code description: see parameter group 700



## Remote control:

The operating panel is removable.

A standard 8-pole LAN cable is used for connection (up to 10 meters)

Special cable gland kit is available (to guarantee the IP66 protection class)

## 7) Parameter setting




For easier parameter setting, the whole parameter list is divided into 11 parameter groups:




Parameter type	Parameter. Nr. Range	Group
BASIC parameter	F100 - F160	100
Inverter control, set-point source setup	F200 - F280	200
Function assignation to digital I/Os - diagnosis	F300 - F340	300
Analogue I/O signal configuration	F400 - F473	400
Fixed-frequency control, cycle control	F500 - F580	500
DC-Brake, limiting functions, auxiliary functions	F600 - F677	600
Fault handling – configuration of protection function	F700 - F760	700
Motorparameter, AUTOTUNING	F800 - F880	800
Serial link parameter set	F900 - F926	900
PID controller parameter, pump control functions	FA00 - FA80	A00
Torque / speed control	FC00 - FC51	C00
Reserved	FE00 - FE60	E00
Diagnosis	H000 - H019	H00


### Selection of parameters:

Press the  key to move to the programming level

Line 1 shows the parameter group, while the parameter description is shown in line 2.  
Line 3 indicates the parameter number and the assigned parameter value

In programming level, the keys  and  are used to switch between all different parameters.  key moves the parameter counter decimal point (to switch between single parameters and parameter groups)

 key allows to select a parameter to modify, once selected, the keys   increment/decrement the parameter value.

 again memorizes the changed parameter value

 moves back to the normal operating mode

### Parameter types:

**Read only parameters:** These parameters can not be changed, the tentative to modify will end up in **Err0** message – read-only parameters are listed in **GRAY** characters

**Dynamic parameters:** These parameters are allowed to modify with inverter in **START** and in **STOP** mode, listed in red bold characters on this description: **Fxxx**

**Static parameters:** To modify with inverter in **STOP** mode only, otherwise, **Err0** is displayed, static parameters are listed in red, italic bold characters as *Fxxx*

If parameter setting is not successful, a message and **Err0** will show up on the display

**Factory parameter reset: F160=1 (see chapter parameter group 100)**



## 8) Parameter group 100: Basic parameter

<b>F100</b> Passwort	Range: 0 – 9999	Default: 8
----------------------	-----------------	------------

If F107=1 (password enabled): enter correct password, to unlock parameter modification function. Incorrect password results in **Err1** on the display

F102 Rated current (A)	Range: 1.0 – 800.0	Factory set, depending on model, read only
F103 Rated power (KW)	Range: 0.2 – 800.0	Factory set, depending on model, read only

F105 Software version No.	Range: 1.00 - 10.00	Factory set, depending on model, read only
---------------------------	---------------------	--

<b>F106</b> Control algorithm	<b>Selection:</b> 0: Sensorless Vector (SLV) 1: Reserved 2: V/Hz mode 3: Simple Vector (Slip compensation) 6: Synchronous motor control	Default setting: 2
-------------------------------	---	--------------------

0: SENSORLESS VECTORS can operate with one single motor only

2: V/Hz mode can work with more motors in parallel connection

3: Simple Vector Modus can operate with one single motor only

6: Control of PMM - Permanent Magnet Synchronous motors (single motor only)

### Attention!!

All motor parameters must be set precisely, to guarantee correct function in SENSORLES VECTOR and SYNCHRONUS control mode (F106=0/3/6). Motor parameters can be set manually (see parameter group 800), The AUTOTUNING function is used to fine-tune parameters.

For drives applications with quadratic torque characteristic (pump, fan) the V/Hz setting is recommended (F106=2). Inverter rated power should match motor power. Catch on the fly function is in V/Hz mode available only.

<b>F107</b> Activation of password protection (for parametrizing)	<b>Selection:</b> 0: No password protection 1: Password protection	Default setting: 0
<b>F108</b> Password setting	Range: 0 - 9999	Default setting: 8

<b>F109</b> Start – frequency (Hz)	Range: 0.00 - 10.00 Hz	Default setting: 0.00 Hz
<b>F110</b> Start – frequency duration (sec.)	Range: 0.0 - 10.0 sec.	Default setting: 0.0 sec.

The inverter always starts running with the selected Start-frequency, if the target frequency is lower than the Start-frequency, **F109** will be ignored.

After the inverter gets a START command, it will remain at the Start-frequency, (set in **F110**), for the time, set in **F111**. After the delay, it will proceed with the acceleration ramp to reach the final frequency. The acceleration ramp does not take into account the start frequency delay time

The Start-frequency value is independent and not limited by the minimum frequency **F112**. In case **F109** is lower, than **F112**, the inverter will start running with the values in **F109** and **F110**. After the inverter reaches the minimum frequency **F112**, the values **F111** and **F112** are considered as frequency limits.

It is recommended, to chose Start-frequency lower than maximum frequency (**F111**).

<b>F111</b> Maximum frequency (Hz)	Range: F113 - 650.0 Hz	Default setting: 50.00Hz
<b>F112</b> Minimum working frequency (Hz)	Range: 0.00 - F113 Hz	Default setting: 0.50Hz

The parameter **F111** limits the inverter output frequency

In SENSORLESS VECTOR mode it is recommended to limit the maximum frequency to 400 Hz

The parameter **F112** defines the minimum allowed output frequency. If speed reference corresponds to frequency lower than the value in **F112**, the inverter behaviour depends on Parameter **F224**:

**F224=0**: Inverter stops, **F224=1**: Inverter continues to run on F-min, defined by **F112**.



**Attention!! Continuous operation at low speed may overheat the motor – forced ventilation is recommend**

## 8) Parameter group 100: Basic parameter

<b>F113 Internal speed reference (Hz)</b>	<b>Range: F112 - F111</b>	<b>Default setting: 50.00 Hz</b>
---	---------------------------	----------------------------------

Virtual internal speed reference, it is selectable in the same way, as any external speed reference (see F203, F204). If selected **F203/204 = 0**, after the START command, the inverter will reach this speed value.

<b>F114 Acceleration ramp 1 (sec.)</b>	<b>Range: 0.1 – 3000 sec.</b>	<b>Default setting: 0.2 - 3.7KW, 5.0 sec. 5.5 - 30KW, 30.0 sec. &gt; 37KW, 60.0 sec.</b>
<b>F115 Deceleration ramp 1 (sec.)</b>		
<b>F116 Acceleration ramp 2 (sec.)</b>		<b>Default setting: 0.2 - 3.7KW, 5.0 sec. 5.5 - 30KW, 30.0 sec. &gt; 37KW, 60.0 sec.</b>
<b>F117 Deceleration ramp 2 (sec.)</b>		

Acceleration ramp: Time to reach 50 Hz, or F-max (it depends on F119)

Deceleration ramp: Time, to decelerate to 0 Hz, referred to 50 Hz, or F-max (depending on F119)

The second ramp set is selectable via programmable digital input (DI1...DI8) - (F316...F323).

<b>F119 Reference for Accel./Decel. ramp time</b>	<b>Selection: 0: 0 ... 50.00Hz 1: 0 ... F-max</b>	<b>Default setting: 0</b>
---	---	---------------------------

If **F119=0**, ramp time is the duration from 0 Hz to 50 Hz, If **F119=1** it is from 0 Hz to F-max.

<b>F118 Knee frequency (Hz)</b>	<b>Range: 15.00 - 650.0</b>	<b>Default setting: 50.00Hz</b>
---------------------------------	-----------------------------	---------------------------------

Frequency, corresponding to the maximum inverter output voltage, the U/F characteristics reaches the horizontal range  
Below the knee-frequency, the drive system operates in constant torque, above it works with constant power



**ATTENTION!! Wrong setting of the Knee-Frequency may destroy the motor**

<b>F120 Dead time during reversion (sec.)</b>	<b>Range: 0.0 – 3000 sec.</b>	<b>Default setting: 0.00 sec.</b>
---	-------------------------------	-----------------------------------

If activated (>0), the inverter will stop at 0Hz during the reversing cycle, indicated as **0.** on the display. (these parameter has no effect, if automatic frequency cycling is chosen).

This function may be useful, to avoid torque/current peaks during reversion

<b>F122 Reverse operation disable</b>	<b>Selection: 0: reversion enabled 1: reversion disabled</b>	<b>Default setting: 0</b>
---------------------------------------	--	---------------------------

if **F122=1** the inverter can operate in one rotating direction only, regardless of different other settings or control signals. A reversing command will result in inverter STOP

If inverter rotation is set to "reverse" by parameter (F202=1), and F122 is set to "reversing disable", the inverter will not start

If "Catch on the fly" function is active, it will catch the motor, beginning with 0.0 Hz

<b>F123 Reversing enable with combined speed control</b>	<b>Selection: 0: disable 1: enable</b>	<b>Default setting: 0</b>
--	--	---------------------------

If in case of combined speed control, the speed result becomes negative (reverse rotation), this function may be used to enable/disable the reverse rotation of the motor. If disabled, in case of negative speed, the inverter output 0,0 Hz (Parameter **F122=1** overwrites this setting)

### 8) Parameter group 100: Basic parameter

<b>F124 Jog frequency (Hz)</b>	Range: F112 - F111	Default setting: 5.00 Hz
<b>F125 Accel. ramp – Jog Mode (sec.)</b>	Range: 0.1 – 3000 sec.	Default setting: 0.2 - 3.7KW: 5.0 sec. 5.5 - 30KW: 30.0 sec. > 37KW: 60.0 sec.
<b>F126 Decel. ramp –Jog Mode (sec.)</b>		

There are two modes to activate the Jog frequency: Keypad-control, and terminal-control (programmable digital inputs DI1...DI6(8) – configuration: F316...F323).

**Keypad-control:** With the inverter in STOP mode press  Direction depends on parameter F634: 1=FWD – 2=REV.

**Terminal control:** A proper configured digital input works as Jog frequency start/stop toggle  
Remark: In Jog mode the "catch on the fly" function is deactivated


<b>F127/F129 Cut-Off frequency A,B (Hz)</b>	Range: 0.00 - 650.0	Default setting: 0.00 Hz
<b>F128/F130 Cut-Off frequency window A,B (Hz)</b>	Range: ±2.5 Hz	Default setting: 0.0 Hz

Cut-Off frequency to avoid resonance problems – the inverter transits during accel. / decel. ramps through this frequency areas, but it can not stay stable within this frequency ranges.

**Display configuration (secondary display, line 3 and 4):**

<b>F131 Display: Selection of operating parameters to display during „START“ status (Motor running)</b>	0: Output frequency / parameter value	Default setting: 0+1+2+4+8=15 (frequency+speed+motor-voltage+motor-current+DC-voltage)
	1: Motor speed (rpm)	
	2: Motor current	
	4: Motor voltage	
	8: DC-voltage	
	16: PID control feed back	
	32: Heatsink temperature	
	64: Counter	
	128: Speed (linear - calculated)	
	256: PID set-point	
	512: Reserved	
	1024: Reseved	
	2048: Motor-Power	
	4096: Motor-Torque	
	8192: Reserved	

To display a specific parameter, just set Parameter F131 to one of the values in the table above, to display more parameters, the sum of all values must be set in F131

The  key is used to cycle through the various selected parameter values

8) Parameter group 100: Basic parameter

<p><b>F132 Display: Selection of operating parameters to display during „STOP“ status (Motor stopped)</b></p>	<p>0: Target frequency / Parameter (Fxxx)                  1: Jog modus via keypad - HF-0                  2: Target motor speed (rpm)                  4: DC-voltage                  8: PID control feed back                  16: Heatsink temperature                  32: Counter                  64: PID set-point                  128: Reserved                  256: Reserved                  512: Torqe control reference                  1024: Reserved                  2048: Reserved</p>	<p>Default setting:                  0+2+4=6</p>
---	---	--

With inverter in STOP mode, the display will always show the target frequency - flashing

Following table shows the units and display-mode for various parameters:

- Motorspeed (rpm): **(NNNN)** integer value – the decimal point indicates values above 9999.
- Motor Current **A (A.A)**
- Motor-Voltage: **U (VVV)**
- Counter status: **(ZZZZ)**
- DC-Voltage: **u (VVV)**
- Heatsink temperature: **H (TTT)**
- Calculated speed **L(sss)**. Decimal point to indicate values above 999, two decimal points for values above 9999
- PID controller Set-Point (normalized): **(o\*.\*)**
- PID Feed-Back (normalized): **(b \*.\* )**
- Motor-Power (normalized): **(x.x)**
- Motor-Torque (normalized): **(m.m)**

**Parameter, for calculated speed indication (display)**

<p><b>F133 Transmission ratio</b></p>	<p>Range: 0.10 - 200.0</p>	<p>Default setting: 1.00</p>
<p><b>F134 Pulley diameter</b></p>	<p>0.001 – 1.000 (m)</p>	<p>Default setting: 0.001</p>

Example: Max. Frequency **F111=50.00Hz**, number of poles **F804=4**, transmission ration **F133=1.00**, pulley diameter R=0.05m (**F134=0,05**), calculation result: pulley circumference:  $2\pi r = 2 \times 3.14 \times 0.05 = 0.314$  (meter), shaft speed:  $60 \times \text{frequency} / (\text{number of poles} \times \text{transmission ratio}) = 60 \times 50 / (2 \times 1.00) = 1500 \text{rpm}$ . For linear speed:  $\text{speed (rpm)} \times \text{pulley circumference} = 1500 \times 0.314 = 471$  (meter/second)

8) Parameter group 100: Basic parameter

<b>F136 Slip compensation in V/Hz mode</b>	<b>Range: 0 - 10%</b>	<b>Default setting: 0</b>
--	-----------------------	---------------------------


This parameter compensates the load-depending slip of the asynchronous motor – it works only in the stable area of the motor speed/torque characteristic during the "catch on the fly" process this function is deactivated

<b>F137 Voltage frequency characteristic (for V/Hz mode only)</b>	<b>Selection: 0: Linear</b> <b>1: Quadratic</b> <b>2: User defined (6 - Punkt)</b> <b>3: Automatic</b> <b>4: Defined by separate voltage setpoint</b>	<b>Default setting: 3</b>
<b>F138 Lineare characteristic</b>	<b>Range: 1 - 20</b>	<b>Default: 0.2-3.7 kW : 7</b> <b>5.5-30 kW : 6</b> <b>37-75 kW : 5</b> <b>&gt; 90 kW: 3</b>
<b>F139 Quadratic characteristic</b>	<b>Auswahl: 1 - 6</b>	<b>Default setting: 1</b>

Voltage increase on low frequencies is necessary to compensate the stator copper resistance.

With **F137=0 linear** voltage increase is chosen, suitable for constant torque load.

**F137=1 quadratic** increase, the right curve for load with quadratic characteristic, like pump and fan.

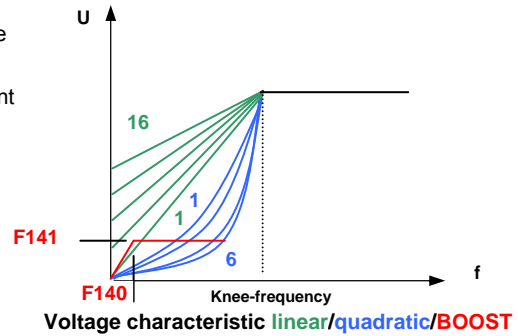


**F137=2**, serves to possible to program a user specific V/Hz curve – see table below

A total of 12 parameter are necessary to define the user specific curve (**F140 bis F151**).

<b>F140 User defined frequency F1</b>	<b>Range: 0 - F142</b>	<b>Default setting: 1.00</b>
<b>F141 Assigned motor voltage V1</b>	<b>Range: 0 - 100%</b>	<b>Default setting: 4</b>
<b>F142 User defined frequency F2</b>	<b>Range: F140 - F144</b>	<b>Default setting: 5.00</b>
<b>F143 Assigned motor voltage V2</b>	<b>Range: 0 - 100%</b>	<b>Default setting: 13</b>
<b>F144 User defined frequency F3</b>	<b>Range: F142 - F146</b>	<b>Default setting: 10.00</b>
<b>F145 Assigned motor voltage V3</b>	<b>Range: 0 - 100%</b>	<b>Default setting: 24</b>
<b>F146 User defined frequency F4</b>	<b>Range: F144 - F148</b>	<b>Default setting: 20.00</b>
<b>F147 Assigned motor voltage V4</b>	<b>Range: 0 - 100%</b>	<b>Default setting: 45</b>
<b>F148 User defined frequency F5</b>	<b>Range: F146 - F150</b>	<b>Default setting: 30.00</b>
<b>F149 Assigned motor voltage V5</b>	<b>Range: 0 -100%</b>	<b>Default setting: 63</b>
<b>F150 User defined frequency F6</b>	<b>Range: F148 - F118</b>	<b>Default setting: 40.00</b>
<b>F151 Assigned motor voltage V6</b>	<b>Range: 0 - 100%</b>	<b>Default setting: 81</b>

Remark:  $V1 < V2 < V3 < V4 < V5 < V6$ ,  $F1 < F2 < F3 < F4 < F5 < F6$ .

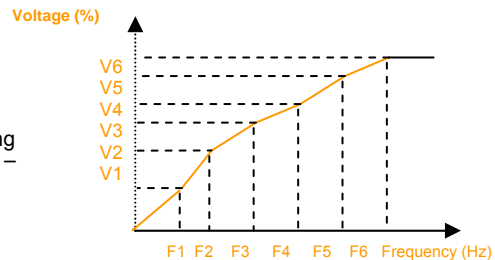

If **F137=3**, the slip compensation works in automatic – correct setting for all motor parameter is necessary to guarantee correct operation – AUTOTUNING may be used to find motor parameters, like inductance and stator resistance (see parameter group 8).



**WARNING!! High voltage increase on low speed may result in inverter over-current trip and/or motor overheating**

## 8) Parameter group 100: Basic parameter

<b>F140 BOOST knee-frequency (Hz)</b>	<b>Range: 0 – 5 Hz</b>	<b>Default setting: 1 Hz</b>
<b>F141 BOOST intensity (%)</b>	<b>Range: 0 – 25%</b>	<b>Default setting: 4 %</b>

BOOST function allow additional voltage increase on low speed – see graphic (for F137=0 or F137=1).

<b>F152 Maximum motor voltage (at knee frequency – modulation level)</b>	<b>Range: 10 – 100 %</b>	<b>Default setting: 100 %</b>
--	--------------------------	-------------------------------

This function is used to limit the maximum motor voltage – the percentage value refers to the corresponding input voltage (on 400 V power supply: 100%= 400 motor voltage)

	<b>Range:</b>	<b>Default setting:</b>
<b>F153 PWM Frequency</b>	<b>0.2 - 7.5 kW: 800 Hz – 16.000 Hz</b>	<b>0,2...7,5 kW: 4kHz</b>
	<b>11 – 15 kW: 800 Hz – 10.000 Hz</b>	<b>11...15 kW: 3kHz</b>
	<b>18.5 kW – 45 kW: 800 Hz – 6.000 Hz</b>	<b>18,5...45 kW: 4kHz</b>
	<b>&gt;55kW: 800 Hz – 4.000 Hz</b>	<b>&lt;55 kW: 2kHz</b>

<b>F154 Power supply voltage compensation</b>	<b>Selection: 0: deactivated 1: activated 2: deactivated during deceleration ramp</b>	<b>Default setting: 0</b>
---	---	---------------------------

This function keeps the motor-voltage stable and independent from power supply voltage fluctuation. It may stretch the deceleration phase, therefore it can be deactivated during deceleration only (F154=2)

<b>F155 Internal value for secondary speed reference</b>	<b>Range: 0...F111</b>	<b>Default setting: 0</b>
<b>F156 Polarity secondary speed ref. (direction)</b>	<b>Range: 0 (FWD) oder 1(REV)</b>	<b>Default setting: 0</b>
<b>F157 Secondary speed ref. readout</b>		<b>Read-only</b>
<b>F158 Secondary speed polarity readout</b>		<b>Read-only</b>

Internal digital reference for secondary speed reference - analogue to F113

<b>F159 „RANDOM“ PWM modulation</b>	<b>Selection: 0: constant PWM frequency 1: „RANDOM“ modulated PWM</b>	<b>Default setting: 1</b>
-------------------------------------	---	---------------------------

If F159=0: Inverter works with constant PWM frequency (as set in F153)  
159=1: PWM frequency is "random" over-modulated.

<b>F160 Factory default reset</b>	<b>Selection: 0: Normal operation 1: Start factory default reset process</b>	<b>Default setting: 0</b>
-----------------------------------	--	---------------------------

### Factory default reset procedure:

Select parameter **F160**, press **SET**, original parameter F160 value is 0, press **UP** key to set F160 to 1 press **SET** again  
After a few seconds all factory default parameters are restored.

The value in F160 returns to 0, after the restore process is completed.

### ATTENTION:

The process will not reset to factory default the following parameters:

**F400 F402 F406 F408 F412 F414 F421 F732 F742 F745 F901**, and language selction



## 9) Parameter group 200: Inverter control

### START / STOP / running direction:

<b>F200</b> START command source	<b>Selection: 0: Keypad only</b> 1: Terminal input only 2: Keypad + terminal input 3: Serial link (MODBUS) 4: Keypad + terminal + serial link	Default setting: 4
<b>F201</b> STOP command source	<b>Selection: 0: Keypad only</b> 1: Terminal input only 2: Keypad + terminal input 3: Serial link (MODBUS) 4: Keypad + terminal + serial link	Default setting: 4

**F200** and **F201** are used to set the mode for inverter starting and stopping – via keypad key, digital input on terminals, MODBUS commands, or a combination of all three. All signals are dynamic, input pulses, are sufficient, to start/stop the inverter. **This parameters are valid only, if F208=0 (default), if F208>0, this setting will be ignored**

**Attention: RUN/STOP commands, as set in parameter F200 and F202 work with dynamic signals (pulses). In Europe it is more common to work with static signals (for safety reason). Therefore it is recommended to use RUN/STOP signals, defined by parameter F208 (two wire control) F208 overwrites parameter F200/201**



<b>F202</b> Rotation direction preset	<b>Selection: 0: forward</b> 1: reverse 2: depending on terminal signals 3: using FWD/REV keys	Default setting: 0
---------------------------------------	---	--------------------

If no other rotation direction signal (logic) present, the rotation depends on this parameter – e.g. in case of keypad control. Otherwise the direction depends on logical function of more direction signals

If (**F500=2**) – automatic frequency cycling – this parameter is ignored

### Selection of speed reference sources:

<b>F203</b> Primary speed reference source  <b>"X"</b>	<b>Selection:</b> 0: Internal reference (F113) with automatic memory (STOP) 1: Analogue input AI1 2: Analogue input AI2 3: Pulse input DI1 4: Fix-frequencies, terminal control (digital inputs) 5: same as 1, (F113) but without memory at STOP 6: Potentiometer in keypad (AI3) 7: reserved 8: reserved 9: PID controller output 10: MODBUS data	Default setting: 0
--	---	--------------------

**F203=0:** Inverter accelerates after the first START command to the frequency value F113, using   keys, or proper configured digital terminal inputs, the user can vary the frequency, after a STOP command, the last frequency value will be automatically memorized. To activate the memorizing function in case of power-down too, it needs to set **F220=1**.

**F203=1 - F203=2:** this is the setting for speed reference through analogue channels AI1-AI2. Analogue channels may be configured for 0..10V, -10V...+10V, or 0(4)..20mA (on 500 Ohm). Configuration via DIP Switches on control board (see chapter: 5 *Hardware und hardware configuration of I/O channels*). Default: **AI1** = 0...10V, **AI2** = 0...20 mA. To realize 4...20mA, an offset can be programmed: **F406=2V**.

**F203=3:** Pulstrain as speed reference, max. 50 kHz on digital input **DI1**.

**F203=4:** Up to 16 fix programmed frequencies, selectable via programmable digital inputs **DI1...DI5(8)**

**F203=5:** Same function as F203=0: Internal reference (**F113**), but no memory after STOP or power-down

**F203=6:** The keypad potentiometer works as speed reference signal (only for keypads with integrated potentiometer)

**F203=9:** PID controller output works as speed reference origin (for PID controller applications)

**F203=10:** Speed reference through serial link (MODBUS)

## 9) Parametergroup 200: Inverter control

<p><b>F204 Secondary speed-reference source</b></p> <p><b>"Y"</b></p>	<p><b>Selection:</b> 0: Internal reference (F155) – with memory            1: Analogue input AI1            2: Analogue input AI2            3: Reserved            4: Fix-frequencies, terminal control (digital inputs)            5: same as 1, (F155) but no memory            6: PID controller output</p>	<p><b>Default setting: 0</b></p>
---	---	----------------------------------

Secondary speed channel has the same function, as primary channel, if selected as the only reference. Setting parameter **F207**, both channels, primary and secondary can be concatenated each other.

If **F204=0**, the value in **F155** works as initial speed reference, if secondary channel is used alone, in this case the value in **F156** is ignored

If **F207=1** or **F207=3**: value in **F155** and **F156** are valid for the secondary speed reference source

**F205** and **F206** determine the range of the secondary speed channel, if analogue channel **AI1** or **AI2** are used for sec. speed ref. input (F205=1 or 2)

If the potentiometer on the keypad panel is selected (F205=7), primary speed reference source is limited on fix-frequencies or MODBUS setting

It is not allowed to configure primary and secondary speed reference source through the same channel

<p><b>F205 Reference point for the range setting of the secondary speed reference channel, using AI1 or AI2</b></p>	<p><b>Selection:</b> 0: referred on F-max            1: referred on the primary speed channel "X"</p>	<p><b>Default setting: 0</b></p>
<p><b>F206 Range for secondary speed ref. „Y“ (%)</b></p>	<p><b>Range:</b> 0...100 %</p>	<p><b>Default setting: 100</b></p>

In case of combined speed control and secondary speed ref. input via **AI1** or **AI2**, parameter **F205** and **F206** determine the relation to the primary reference

### Combined speed control – between primary and secondary speed reference

<p><b>F207 Output frequency as combination of primary ("X") and secondary ("Y") speed reference signal</b></p>	<p><b>Selection:</b>            0: X, only primary reference is used            1: X+Y Sum of primary and secondary reference            2: X or Y (terminal input selection)            3: X or X+Y (terminal input selection)            4: X (Fix-frequencies) and Y (analogue) combined            5: X-Y Difference between primary and secondary value            6: X+Y(F206-50%) * (value defined in F205)            7: Fixed frequencies or F155</p>	<p><b>Default setting: 0</b></p>
--	--	----------------------------------

If **F207=1**: X+Y, the sum of both channels is used – it is not allowed to use PID controller output for speed reference signals .

If **F207=3**: X or (X+Y) determine the output frequency, selection via terminal digital input. – is not allowed to use PID controller output is not allowed for speed reference signal.

If **F207=4**: Fix-frequencies are the primary speed source, with priority to the analogue speed reference input for example (F203=4 und F204=1).

If **F207=5**: The difference between both speed reference channels determine the output frequency – PID controller output is not usable.

If **F207=6**: output frequency is set according to  $X+X(F206-50\%)*F205$  – PID controller output is not allowed

If **F207=7**: output frequency is set by F155 and fixed frequencies - fixed frequencies have priority

9) Parametergroup 200: Inverter control

Combination between different speed reference channels

<b>F204</b> <b>F203</b>	0 Internal digital set with memory	1 External Analogue input AI1	2 Extern Analogue input AI2	4 Fix-frequency selection	5 PID controller	6 Keypad potentiom.
0 Internal digital set with memory	○	•	•	•	•	○
1 External Analogue input AI1	•	○	•	•	•	○
2 Extern Analogue input AI2	•	•	○	•	•	○
4 Fix-frequency selection	•	•	•	○	•	•
5 Internal digital set without memory	○	•	•	•	•	○
6 Keypad potentiom.	•	•	•	•	•	○
9 PID controller	•	•	•	•	○	○
10 MODBUS	•	•	•	•	•	•

•: Allowed ○: Not allowed

-The automatic cycling frequency control algorithm can not work in any combination with others

**Two / Three wire control for START - STOP - DIRECTION:**

This control mode overwrites the setting in F200, F201, F202

<p><b>F208</b> Activation special Two / Three wire control</p>	<p><b>Selection:</b>  <b>0: Deactivated</b>  <b>1: Two-wire, Type 1 (static)</b>  <b>2: Two-wire, Type 2 (static)</b>  <b>3: Three wire, Typ1 (Impulse / pushbutton control – dynamic)</b>  <b>4: Three wire, Typ2 (Impulse / pushbutton control – dynamic)</b>  <b>5: Pulse / pushbutton control (dynamic)</b></p>	<p><b>Default setting: 0</b></p>
--	---	----------------------------------

**F208=0:** If Fixed-frequency control is required this mode must be deactivated!

If **F208>0:** functions **F200, F201** and **F202** are ignored.


“FWD”, “REV” and “X” are digital terminal input signals for two / three wire control mode. This logical signals are assigned to DI1.....DI6 (DI8) through parameters F316....F323

Assigning-code for DIxx: **FWD=15, REV=16, X=17** – see chapter: *Parameter group 300 – Digital I/O configuration*

**F208=1: Two wire Type 1**

**K1=START forward** (default on DI3)

**K2=START reverse** (default on DI4)

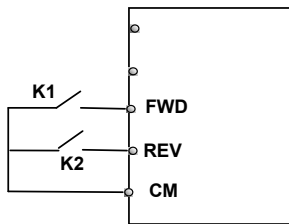


**Truth table**

K1	K2	
0	0	Stop
1	0	forward
0	1	reverse
1	1	Stop

**F208=2: Two wire Type 2**

**K1=START** (default on DI3)

**K2=Rotating direction** (default on DI4)

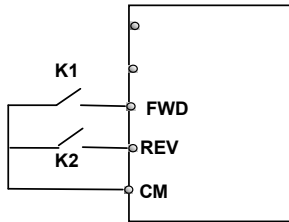


**Truth table**

K1	K2	
0	0	Stop
0	1	Stop
1	0	forward
1	1	reverse


**F208=3: Three wire Typ 1**

**F208=4: Three wire Typ 2**

**Pulse/pushbutton control:**  
**FWD(SB2)=START-impulse forward**  
**FWD=NO**  
**REV(SB1)=START-impulse reverse**  
**REW=NO**  
**X(SB3)=cancel impulse (STOP)**  
**X=NC**

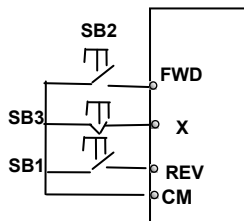

**Pulse/pushbutton control:**  
**FWD(SB1)=START-impulse forward**  
**FWD=NO**  
**X(SB2)=cancel-impulse (STOP)**  
**X=NC**  
**K1=Direction**

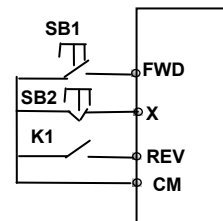


**F208=5: Three wire Typ 3**

**Pulse/pushbutton control:**

**FWD (SB1) Impulse: START-forward / STOP**  
 Toggle function  
**FWD=NO**

**REV (SB2) Impulse: START-reverse / STOP**  
 Toggle function  
**REV=NO**

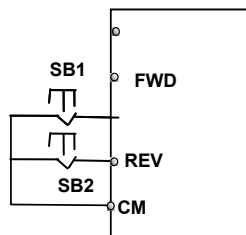

### 9) Parametergroup 200: Inverter control

<b>F209</b> "STOP" mode selection	<b>Selection: 0: STOP controlled by deceleration ramp</b> 1: Free-stop (uncontrolled) 2: STOP with DC injection	<b>Default setting: 0</b>
-----------------------------------	---	---------------------------

If **F208=1**: STOP command disables the final stage, motor stops uncontrolled by inertia  
 If **F208=2**: STOP with DC brake function (defined in **F600, F603, F605, F656**)

**ATTENTION: In DC brake mode all kinetic energy will dissipate in the rotor. Cyclic use of DB braking, or braking of high inertial mass may overheat the motor.**

<b>F210</b> Frequency resolution with motorpotentiometer control via keypad/terminals	<b>Range: 0.01 - 2.00 Hz</b>	<b>Default setting: 0.01 Hz</b>
---	------------------------------	---------------------------------

<b>F211</b> Variation speed in motorpotentiometer control mode via keypad/terminals	<b>Range: 0.01 - 100.0 Hz/sec.</b>	<b>Default setting: 5.00 Hz/sec</b>
---	------------------------------------	-------------------------------------

If **F203=0/5**: Inverter starts with initial frequency **F113** (memory with **F203=0**) – **F220=1**, to memorize with power-down too

<b>F212</b> Status memory with (208=3)	<b>Selection: 0: deactivated</b> 1: activated	<b>Default setting: 0</b>
--	--	---------------------------

If activated, after power down or reset, the inverter will restart with the same status, as before (the previous start impulse forward/reverse was memorized)

<b>F213</b> Autostart after power-down	<b>Selection: 0: deactivated</b> 1: activated	<b>Default setting: 0</b>
<b>F214</b> Inverter-Error AUTO-RESET	<b>Selection: 0: deactivated</b> 1: activated	<b>Default setting: 0</b>
<b>F215</b> Power-on Autostart delay (sec.)	<b>Bereich: 0.1...3000.0 sec.</b>	<b>Default setting: 60.0</b>

**F213=1** will force the inverter to restart automatically in case of power off. On power-on, the inverter will restart with the same conditions, as before (frequency/direction). **F215** defines the delay time for power-on autostart. Power-on autostart works only with **F208=0** (dynamic start command)

**F214=1** will cause an automatic reset in case of inverter error. **F217** is the delay time for error-reset, while **F215** works as delay time for restart after error-reset. Autostart is performed only if error occurs during START condition (motor running), in case of STOP condition, only error-reset will be done. In case of deactivated automatic error-reset, manual reset (keypad/terminal signal) must be done

<b>F216</b> Number of error-reset tentative	<b>Selection: 0 - 5</b>	<b>Default setting: 0</b>
<b>F217</b> Delay time for error-reset	<b>Range: 0.0 - 10.0 sec.</b>	<b>Default setting: 3.0 sec.</b>

**WARNING: Activation of AUTOSTART and/or AUTORESET may result in unexpected START up of the drive system!!**

<b>F219</b> EEprom write protection under MODBUS control	<b>Selection: 0: deactivated</b> 1: activated	<b>Default setting: 1</b>
--	--	---------------------------

Please note that **F219**, the EE-prom write protection it is activated by default (to prevent EE-prom from getting destroyed due to repetitive write operations). With this configuration all data sent by MODBUS are stored in the RAM only and get lost after power-down.

If inverter works with continuously varying parameter values, like speed reference, it is recommended, to work in the RAM only.

<b>F220</b> Memory function for speed and rotation direction in case of power-down	<b>Selection: 0: deactivated</b> 1: activated	<b>Default setting: 0</b>
--	--	---------------------------

Valid in case of internal speed reference (**F113**), (**F155 – F156**)

<b>F224</b> F-min handling	<b>Selection: 0: f&lt;F-min: STOP</b> 1: f<F-min: RUN with F-min	<b>Default setting: 0</b>
----------------------------	---	---------------------------

<b>F277</b> Acceleration time 3 (sec.)	<b>Range: 0,1 – 3000sec.</b>	<b>Default setting: depending on inverter size</b>
<b>F278</b> Deceleration time 3 (sec.)		
<b>F279</b> Acceleration time 4 (sec.)		
<b>F280</b> Deceleration time 4 (sec.)		

## 10) Parameter group 300: Digital I/O configuration

Following digital I/O channels are available on E2000 inverters:

I/O	Inverter size I1-I3 (up to 15 kW)	Inverter size I4-I6 (above 15 kW)
Digital inputs	6 (DI1...DI6)	8 (DI1...DI8)
Digital outputs	1 (DO1) Open Collector 100 mA / 24 V	2 (DO1, DO2) Open Collector 100 mA / 24 V
Relay output	1 Switch over contact 2 A 230V	1 Switchover contact 5 A 230V
Pulse input	DI1 to configure as pulse input	DI1 to configure as pulse input

Parameters **F300-F302** (for outputs) and **F316-F323** (for inputs) allow assignation of various functions to digital I/O channels

Function mapping for digital output channels:

<b>F300</b> Relais output	Mapping for functions : <b>0.....45</b> See table below	Default setting <b>1 (error)</b>
<b>F301</b> DO1 Digital output 1		Default setting <b>14 (Inv. enable)</b>
<b>F302</b> DO2 Digital output 2		Default setting <b>5 (START)</b>

Value	Function	Description
0	No function	No function assigned
1	Inverter error	The output is active in case of inverter error
2	Freq. threshold 1	If output frequency reaches the threshold, the output will be activated, threshold, including hysteresis programmable with parameters <b>F307, F308, F309</b>
3	Freq. threshold 2	
4	Inverter disable	Free-STOP command on terminals (system in inertia)
5	Inverter START-1	Inverter in START mode, motor runs, (frequency > 0 Hz)
6	DC Brake	Inverter in DC-Brake mode
7	Rampset 2 selection	Second Accel/Decel. ramp set has been selected
8	Counter final value	Internal counter: The value, set by <b>F314</b> has been reached
9	Counter intermediate	The counter is in the range, delimited by <b>F315</b> and <b>F314</b>
10	Inverter overload WARNING	In case of inverter overload, a warning is set, after half the switch off delaytime has passed. Load reduction to cancel, otherwise overload trip ( <b>OL1</b> )
11	Motor overload WARNING	Early warning in case of motor overload – similar function as (10) – if no load reduction, overload trip with ( <b>OL2</b> ) in the display
12	Temp. Ramp stop	Acce./Decel ramp temporarily stopped (Limiting function activated <b>F607...F610</b> )
13	Inverter OK	Inverter is powered on and ready without any error
14	Inverter START - 2	Inverter enabled, similar to 5 but also active with F=0 (final stage enabled)
15	Target freq. reached	Acce./Decel. ramp finished (final freq. reached) (hysteresis to set in <b>F312</b> )
16	WARNING overtemp.	At 80% of the temperature switch-off limit, inverter may trip with ( <b>OH</b> ) if no cooling
17	Current limit	Inverter has reached the current limit, programmable in <b>F310</b> and <b>F311</b>
18	Analogue signal interruption	Analogue input signal below the programmable threshold, (see <b>F741/742</b> and <b>F400/406</b> )
19	Lack of water	Lack of water, detected via motor curren (delayed) (see <b>FA26, FA27</b> ) – Idling protection
20	Prealarm lack of water	Motor-current fallen below the programmed value (see <b>F754, F755</b> ).
21	Modbus-controlled	Output controlled by MODBUS: Set code: <b>2005H = 1</b> , Reset code: <b>2005H=0</b>
22	Modbus-controlled	Output controlled by MODBUS: Set code: <b>2006H = 1</b> , Reset code: <b>2006H=0</b>
23	Modbus-controlled	Output controlled by MODBUS: Set code: <b>2007H = 1</b> , Reset code: <b>2007H=0</b>
24	Watchdog	Signal on programmed watchdog input missing
25-29	Reserved	
30	Slave-Pump RUN	Pump control modus: The slave pump has been activated
31	Masterpump	Pum control modus: The inverter controlled pump is running
32	Pressure alarm	Pum control modus: The pressure is beyond the limits, set by <b>FA03</b>
42	Reserved	
43	MODBUS Timeout warning	Modbus data not valid (see F907), reset via digital input ( <b>60</b> )
45	Freeze alarm	Signal set with environment temperature below 0 °C
59	oPEn	oPEn Signal has been triggered



## 10) Parameter group 300: Digital I/O configuration

<b>F303 Configuration DO1 as pulse output</b>	<b>Selection: 0: digital output 1: Pulse output</b>	<b>Default setting 0</b>
---	---	--------------------------

**F303=1:** Output **DO1** is configured as fast pulse signal output, with maximum frequency of 50kHz. Signal configuration through parameter **F449 - F453**.

### Activation and configuration of the "S" shaped ramp

<b>F304 Initial progression</b>	<b>Range: 2.0...50%</b>	<b>Default setting 30%</b>
<b>F305 Final progression</b>		
<b>F306 "S" shaped ramp activation</b>	<b>Selection: 0=Linear ramp 1="S" ramp</b>	<b>Default setting 0</b>

### Frequency threshold setting

<b>F307 Frequency threshold 1 (Hz)</b>	<b>Range: F112 - F111 (Hz)</b>	<b>Default setting 10Hz</b>
<b>F308 Frequency threshold 2 (Hz)</b>		<b>Default setting 50Hz</b>
<b>F309 Hysteresis</b>	<b>Range: 0...100%</b>	<b>Default setting 50 %</b>

This are frequency thresholds for signalling through programmable digital outputs - function assignation: **2 / 3**.  
Hysteresis to subtract from threshold value

### Current threshold

<b>F310 Current threshold (A)</b>	<b>Range: 0...1000 A</b>	<b>Default setting rated current</b>
<b>F311 Hysteresis current thresh.</b>	<b>Range: 0...100%</b>	<b>Default setting 10%</b>

Current threshold, signalled through programmable digital outputs - function assignation: **17**.  
Hysteresis to subtract from threshold value

<b>F312 Hysteresis to end- frequency (Hz)</b>	<b>Range: 0.00...5.00 Hz</b>	<b>Default setting 0.00</b>
---	------------------------------	-----------------------------

Valid for the "end of ramp" message through digital outputs – output function assignation: **15**.  
Hysteresis to subtract from threshold value

### Internal counter programming

<b>F313 Divisor for input pulses</b>	<b>Range: 1...65000</b>	<b>Default setting 1</b>
<b>F314 Final counter value</b>	<b>Range: F315...65000</b>	<b>Default setting 1000</b>
<b>F315 Intermediate counter value</b>	<b>Range: 1...F314</b>	<b>Default setting 500</b>

Programmable values, for counter status messaging signals, through digital outputs – functions assigned **8 / 9**  
Function **8**: Output pulse is generated, at the counters final value  
Function **9**: Output activated after the intermediate value is reached, deactivated at counters final value

## Function mapping for digital input channels DI1 – DI6(8)

F316 Function assignment to DI1	Function mapping: 0...61	Default setting <b>11</b> (JOG-forward)
F317 Function assignment to DI2		Default setting <b>9</b> (EMERGENCY-STD1 EXT.)
F318 Function assignment to DI3		Default setting <b>15</b> (TERMINAL "FORWARD")
F319 Function assignment to DI4		Default setting <b>16</b> (TERMINAL "REVERSE")
F320 Function assignment to DI5		Default setting <b>7</b> (RESET)
F321 Function assignment to DI6		Default setting <b>8</b> (STD1-DISABLE)
F322 Function assignment to DI7		Default setting <b>1</b> (START)
F323 Function assignment to DI8		Default setting <b>2</b> (STOP)

**Attention:** One function can be assigned to one single digital input only (no multiple inputs) If a function is already assigned to a certain input (factory set), the assignment must be deleted (set assignment to 0), before assigning to another input.

Table: Functions of digital inputs

VALUE	Function	DESCRIPTION
0	No function	No function assigned, for unused inputs
1	START function	The input starts the drive system – same as "RUN" on keypad
2	STOP function	Input stops the system – same as "STOP" on keypad
3	Fix-frequency K1	15-Fix-programmed frequencies are selectable (see table below 300-1)
4	Fix-frequency K2	
5	Fix-frequency K3	
6	Fix-frequency K4	
7	RESET	General reset, error reset – same as "STOP/RESET" on keypad
8	STOP-DISABLE	"Free STOP" system stops with inertia (logical inversion: F324)
9	EMERGENCY STOP	Ext. Emerg. STOP signal, <b>ESP</b> on display (signal logic: F325)
10	RAMPSTOP	Inverter holds the actual frequency, independent from other signals (except STOP signal) – ramps are stopped
11	JOG forward	JOG control, see F124, F125 and F126 for parametrizing
12	JOG reverse	
13	Motorpotentiometer	Motorpotentiometer-function, to increase/decrease frequency, (with internal speed reference F203=0 / 5, control parameter: F113, F210, F211).
14	Motorpotentiometer	
15	Terminal "FWD"	Assignment of terminal function "FWD", "REV", and "X" (see two/three wire control – parameter F208)
16	Terminal "REV"	
17	Terminal "X"	
18	BIT1 Ramp set	Selection of Acce./Decel. ramp set (BIT1) – (see table 300-2)
19	Reserved	--
20	M / n	Speed / Torque control mode selection
21	Reference source	Selection of different speed reference sources - combinations (see F207)
22	Counter input	DIxx works as counter input
23	Counter reset	To set the internal counter value to 0
24-29	Reserve	
30	Lack of WATER	IF FA26=1, this input will set the inverter in alarm mode <b>EP1</b> will show up on the display
31	Water OK	To reset the inverter alarm mode, caused by function 30
32	FIRE pressure	To select "Fire Mode" pressure setpoint (parameter FA58).
33	FIRE MODE	Activation of the "FIRE MODE" (FA59)
34	BIT2 Ramp set	Selection of Accel. / Decel. ramp set (BIT2) – (see table 300-2)
35	Parameterset (BIT1)	Selection of three different parameter-set (BIT1) – (see Tab. 300-3)
36	Parameterset (BIT2)	Selection of three different parameter-set (BIT2) – (see Tab. 300-3)
37	NTC / NO	Motor heath monitoring via NTC / NO contact (KLIXON)
38	PTC / NC	Motor heath monitoring via PTC / NC contact (KLIXON)
42	oPEn	Inverter disabling input
49	PID-STOP	Input causes temporary STOP of the internal PID controller
51	Alternative motor	Switch over to alternative motor parameters (FE00=2)
53	Watchdog	Watchdog control-pulse input – if missing, watchdog error occurs
60	RS485 Timeout reset	To reset timeout error signal (dig. output assignment 42)
61	START/STOP	General RUN/STOP signal (static)

## Fixed-frequencies selection – table 300-1

K4	K3	K2	K1	Frequency	Programming parameter
6	5	4	3		
0	0	0	0		
0	0	0	1	Fixed-frequency 1	F504/F519/F534/F549/F557/F565
0	0	1	0	Fixed-frequency 2	F505/F520/F535/F550/F558/F566
0	0	1	1	Fixed-frequency 3	F506/F521/F536/F551/F559/F567
0	1	0	0	Fixed-frequency 4	F507/F522/F537/F552/F560/F568
0	1	0	1	Fixed-frequency 5	F508/F523/F538/F553/F561/F569
0	1	1	0	Fixed-frequency 6	F509/F524/F539/F554/F562/F570
0	1	1	1	Fixed-frequency 7	F510/F525/F540/F555/F563/F571
1	0	0	0	Fixed-frequency 8	F511/F526/F541/F556/F564/F572
1	0	0	1	Fixed-frequency 9	F512/F527/F542/F573
1	0	1	0	Fixed-frequency 10	F513/F528/F543/F574
1	0	1	1	Fixed-frequency 11	F514/F529/F544/F575
1	1	0	0	Fixed-frequency 12	F515/F530/F545/F576
1	1	0	1	Fixed-frequency 13	F516/F531/F546/F577
1	1	1	0	Fixed-frequency 14	F517/F532/F547/F578
1	1	1	1	Fixed-frequency 15	F518/F533/F548/F579

Please note: binary selection K1...K4 (F500=1) – for direct selection via K1...K4, use fixed-frequency 1, 2, 4 and 8  
Direct selection of only 3 fixed frequencies: K1....K3 (F500=0)

## Accel./Decel. ramp selection - table 300-2

BIT1 Function assignation 18	BIT2 Function assignation 34	Accel./Decel. Ramp-set	Programming parameter
1	0	Ramp set 1	F114 / F115
0	0	Ramp set 2	F116 / F117
1	1	Ramp set 3	F277 / F278
0	1	Ramp set 4	F279 / F280

F324 "STOP - DISABLE" logic selection (8)	Selection: 0=LOW active (NPN) 1=HIGH active (PNP)	Default setting 0
F325 "EMERGENCY -STOP EXTERN" logic (9)		Default setting 0
F326 Watchdog delay time	Range: 0,1...30.000 sec.	Default setting 10,0 sec
F327 Watchdog STOP mode	Selection: 0=free STOP 1=ramp STOP	Default setting 0
F328 Digital input filter factor	Range: 1...100	Default setting 10

## Logic inversion of digital inputs:

F340 To invert the digital input logic	0: disabled 1: DI1 inverted 2: DI2 inverted 4: DI3 inverted 8: DI4 inverted 16: DI5 inverted 32: DI6 inverted 64: DI7 inverted 128: DI8 inverted	Default setting: 0
--	--	--------------------

To invert the logic of one digital input. To invert the logic of more inputs, the sum of the single inputs must be stored on this parameter (z.B. DI4 and DI6: 8+32=40)

F300....F339 Diagnostic function	See chapter 19 - Diagnostic
----------------------------------	-----------------------------

## 11) Parameter group 400: Analogue I/O channel configuration

Two different control boards are used in EP66 inverters:

Inverter power-range up to 15 kW - I1 - I3  
 Inverter power-range 18,5 – 90 kW - I4 – I6

Both control boards offers independent analogue input/output channels. Each of them can be adapted to various input/output signals – all configuration must be done by software/hardware setting

Details and instruction for hardware setting: see chapter 5) *Control hardware and IO/ channel configuration*


Following instruction describes, how to set software parameters

Configuration of analogue speed reference channels **AI1, AI2, AI3** (A3 = potentiometer on keypad):

<b>F400</b> Range definition <b>AI1</b> – lower limit (V)	Range 0.00V...F402	Default setting: 0.00V
<b>F401</b> Assigment lower limit <b>AI1</b>	Range: 0...F403	Default setting: 1.00
<b>F402</b> Range definition <b>AI1</b> – upper limit (V)	Range: F400...10.00V	Default setting: 10.00V
<b>F403</b> Assigment upper limit <b>AI1</b>	Range: (1.00, F401)...2.00	Default setting: 2.00
<b>F404</b> Gain factor <b>AI1</b>	Range: 0.0...10.0	Default setting: 1.0
<b>F405</b> AI1 Filter factor <b>AI1</b>	Range: 0.1...10.0	Default setting: 0.10

The speed range is defined by upper and lower limits, the area in between corresponds to 100% (example: F400=2, F402=8, 2...8V correspond to 0...100%)

Parameter F401 and F403 are used to move the range limits (in %). Rules: 0 = -100%, 1 = 0%, 2 = +100%. (example: F401=0, F403=2 then 100% signal (the range between upper and lower limit) correspond to -100%...+100% reference). In this case 0...10V input signal corresponds to -50 Hz...0Hz...+50 Hz).

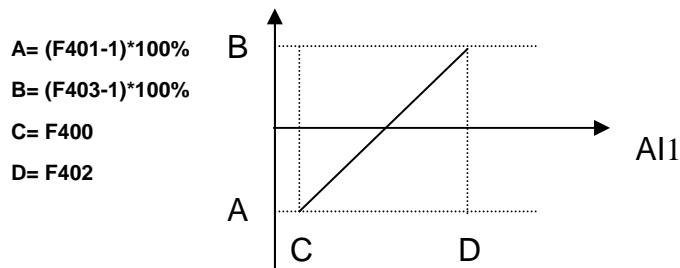

Configuration examples:

Speed reference channel selected: **AI1 - F203=1**,  
**F-max:F111=50 Hz, F-min:F112=0Hz**  
 All other: default set

Speed reference	Output frequency	F400	F401	F402	F403	F404	Hardware setting
0...10V	0Hz...+50 Hz	0.00V	1.00	10.00V	2.00	1.0	0...10V
0...10V	-50Hz...0Hz...+50Hz	0.00V	0.00	10.00V	2.00	1.0	0...10V
0...10V	-50Hz...0Hz	0.00V	0.00	10.00V	1.00	1.0	0...10V
0...10V	20Hz...50 Hz	0.00V	1.40	10.00V	2.00	1.0	0...10V
-10V...+10V	-50Hz...0Hz...+50 Hz	0.00V	0.00	10.00V	2.00	1.0	+/-...10V
0...20mA	0Hz...50Hz	0.00V	1.00	10.00V	2.00	1.0	0...20mA
4...20mA	0Hz...50Hz	2.00V	1.00	10.00V	2.00	1.0	0...20mA

11) Parameter group 400: Analog I/O configuration

**Same configuration for AI2**

<b>F406 Range definition AI2 – lower limit (V)</b>	Range 0.00V...F402	Default setting: 0.00V
<b>F407 Assignment lower limit AI2</b>	Range: 0...F403	Default setting: 1.00
<b>F408 Range definition AI2 – upper limit (V)</b>	Range: F400...10.00V	Default setting: 10.00V
<b>F409 Assignment upper limit AI2</b>	Range: (1.00, F401)...2.00	Default setting: 2.00
<b>F410 Gainfactor AI2 (%)</b>	Range: 0.0...10.0	Default setting: 1.0
<b>F411 Filter factor AI2</b>	Range: 0.1...10.0	Default setting: 0.10

<b>F418 0 HZ Dead band 0 Hz AI1</b>	Range: +/- 0...0.50V	Default setting: 0.00
<b>F419 0 HZ Dead band 0 Hz AI2</b>	Range: +/- 0...0.50V	Default setting: 0.00

0 Hz dead band: If frequency crosses 0Hz range (depending on signal range setting), 0 Hz output frequency will result, within the 0 Hz dead band.

<b>F437 Analog filter hysteresis</b>	Range: 1...100	Default setting: 10
--------------------------------------	----------------	---------------------

Higher hysteresis value will result in a more stable system, but with longer reaction time on changing speed reference signal

### Pulse speed reference signal input configuration:

Configuration is done in the same way, as for analogue speed reference signal. DI1 is predestinated as pulse signal input channel. DI1 selection is done automatically, if pulse reference signal is selected as speed reference source. Maximum input frequency: 50 kHz.

<b>F440</b> Min. pulse frequency (kHz)	Range: 0.00...F442	Default setting: 0.00 kHz
<b>F441</b> Assignment min. frequency	Range: 0.00...2.0	Default setting: 1.00
<b>F442</b> Max. pulse frequency (kHz)	Range: F440...50.00 kHz	Default setting: 10.00 kHz
<b>F443</b> Assignment min. frequency	Range: Max (1.00, F441) ...2.00	Default setting: 2.00
<b>F445</b> Filter factor pulse input	Range: 0...100	Default setting: 0
<b>F446</b> 0 Hz dead-band	Range: 0...+/- F442	Default setting: 0.00

- Range configuration and dead band selection will be done in the same way, as for analogue input signals


### Non-linear characteristic for analogue channels

A non-linear characteristic can be assigned to analogue input channels **AI1** and **AI2**. Programming is done in sense of the table below

<b>F460</b> Characteristic <b>AI1</b>	Selection: 0=linear 1=non-linear	Default setting: 0
<b>F461</b> Characteristic <b>AI2</b>	Selection: 0=linear 1=non-linear	Default setting: 0
<b>F462</b> input level 1 for <b>AI1</b>	Range: F400 - F464	Default setting: 2.00V
<b>F463</b> Assignment input level 1 (%)	Range: F401 - F465	Default setting: 1.20
<b>F464</b> input level 2 for <b>AI1</b>	Range: F462 - F466	Default setting: 5.00V
<b>F465</b> Assignment input level 2 (%)	Range: F463 - F467	Default setting: 1.50
<b>F466</b> input level 3 for <b>AI1</b>	Range: F464 - F402	Default setting: 8.00V
<b>F467</b> Assignment input level 3 (%)	Range: F465 - F403	Default setting: 1.80
<b>F468</b> input level 1 for <b>AI2</b>	Range: F406 - F470	Default setting: 2.00V
<b>F469</b> Assignment input level 1 (%)	Range: F407 - F471	Default setting: 1.20
<b>F470</b> input level 2 for <b>AI2</b>	Range: F468 - F472	Default setting: 5.00V
<b>F471</b> Assignment input level 2 (%)	Range: F469 - F473	Default setting: 1.50
<b>F472</b> input level 3 for <b>AI2</b>	Range: F470 - F412	Default setting: 8.00V
<b>F473</b> Assignment input level 3 (%)	Range: F471 - F413	Default setting: 1.80

Assignment of intermediate points, in the same way as for endpoints

(0= -100%, 1=0%, 2=+100%)

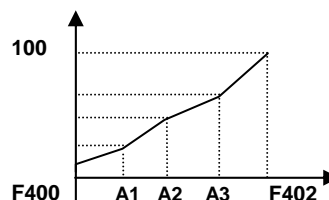



**Analogue output configuration AO1, AO2**

<b>F423</b> Signal type configuration output <b>AO1</b> current/voltage signal	Selection: 0=0...5V 1=0...10V, 0...20mA * 2=4...20mA *	Default setting: 1
<b>F424</b> Inverter output frequency assigned to minimum output signal on <b>AO1</b>	Range: 0.0...F425	Default setting: 0.05 Hz
<b>F425</b> Inverter output frequency assigned to maximum output signal on <b>AO1</b>	Range: F424...F111	Default setting: 50.00 Hz
<b>F426</b> Gain factor <b>AO1</b>	Range: 0...120%	Default setting: 100

\*) The DIP-SWITCH U/I must be set, to get current signal on AO 1 output – see chapter 5) *Control hardware and IO/channel configuration*

<b>F427</b> Signal type configuration output <b>AO2</b> current signal only	Selection: 0=0...20 mA 1=4...20mA	Default setting: 0
<b>F428</b> Inverter output frequency assigned to minimum output signal on <b>AO2</b>	Range: 0.0...F429	Default setting: 0.05 Hz
<b>F429</b> Inverter output frequency assigned to maximum output signal on <b>AO2</b>	Range: F428...F111	Default setting: 50.00 Hz
<b>F430</b> Gain factor <b>AO2</b>	Range: 0...120%	Default setting: 100

<b>F431</b> Assignment of operating parameters to <b>AO1</b>	Selection: 0=Motor frequency 1=Motor-current normalized on 2xI-n 2=Motor-voltage (normalized on 230/400V) 3=A11 4=A12 5=Impulse input 6=Torque – normalized to m-n 7=Set via MODBUS 8=Target frequency 9=Calculated speed 10=Torque (motoric)	Default setting: 0
<b>F432</b> Assignment of operating parameters to <b>AO2</b>		Default setting: 1

Assignment motor current: The full range corresponds to 0...2x inverter rated current

Assignment motor voltage: The full range corresponds to the inverter rated voltage (230V/400V)

<b>F433</b> Multiplier for motor voltage meter	Range: 0.01...5* rated value	Default setting: 2.0
<b>F434</b> Multiplier for motor current meter		Default setting: 2.0
<b>F437</b> Filter factor analogue output	Range: 1...100	Default setting: 10

**Pulse output DO1:**

Digital output terminal DO1 can be programmed via F303 as pulse signal output – configuration is made in a similar way, as for analogue outputs

<b>F449</b> Max. frequency pulse output <b>DO1</b>	Range: 0.00...50.00 kHz	Default: 10.00 kHz
<b>F450</b> 0-point offset (%)	Range: 0.0...100.0 %	Default: 0.0%
<b>F451</b> Multiplier	Range: 0.00...10.00	Default: 1.00
<b>F453</b> Assignment of operating parameters to <b>DO1</b>	Selection: 0=Motor frequency 1=Motor-current normalized on 2xI-n 2=Motor-voltage (normalized 230/400V) 3=A11 4=A12 5=Impulse input 6=Torque – normalized to m-n 7=Set via MODBUS 8=Target frequency 9=Calculated speed 10=Torque (motoric)	Default setting: 0

## 12) Parameter group 500: Fixed-frequency, automatic cycling frequencies

Up to 15 fixed-frequencies are selectable on E2000+ inverters, including individual ramp and direction setting. Automatic cycling sequence for up to 8 fixed-frequencies can be set, including ramp, direction, run- and pausing time.

Set parameter **F203=4 (F204=4)**, to select fixed frequency mode:

<b>F500</b> Fixed-frequency mode selection	Selection:	Default: 1
	0: 3 Fixed frequencies are available - direct terminal selection	
	1: 15 Fixed frequencies available, binary coded (K1, K2, K3, K4 - terminal) 2: Up to 8 Fixed frequencies – auto-cycling mode	

RUN/STOP control in fix.freq. mode: If (F208=0) via keypad, or via dig input, function assignment: **61**.  
alternative: F208=1/2, FWD/REV mapping for dig. input required

Activation of fixed frequency controlmode: **F203=4 (F204=4)**

F203	F500	Fixed frequency mode	Description
4	0	3 Fixed frequencies direct selection	To combine with analogue control, fixed-frequencies have priority
4	1	15 Fixed frequencies binary selection	To combine with analogue control, fixed-frequencies have priority
4	2	Up to 8 auto-cycling fixed frequencies	Independent mode, no manual frequency control is possible during cycle, except STOP command – F501, F502, F503 are the auto-cycling parameters

Auto-cycling parameter:

<b>F501</b> Number of different frequencies for auto-cycling function	Selection: 2...8	Default setting: 7
<b>F502</b> Number of automatic cycles	Range: 0...9999 0 = Endless cycling	Default setting: 0
<b>F503</b> Status after cycle completed	Selection: 0: Stop 1: Keep last valid frequency	Default setting: 0

Programming of the individual fixed-frequencies:

	Acceleration ramp fixed-frequencies 1 - 15 (0,1...3000sec.)	Deceleration ramp fixed-frequencies 1 - 15 (0,1...3000sec.)	Rotation fixed-frequencies 1 - 15 – (0=FWD, 1=REV)	Auto-cycle - duration for fixed-frequencies 1 - 8 (0,1...3000sec.)	Auto-cycle – pausing time for fixed-frequencies 1 - 8 (0,1...3000sec.)	
<b>F504</b> Fixed-frequency 1 (Hz)	<b>F519</b>	<b>F534</b>	<b>F549</b>	<b>F557</b>	<b>F565</b>	Default setting: Accel./Decel. time, depending on inverter model 0.2 - 4.0KW: 5.0 sec. 5.5 - 30KW: 30.0 sec. >30kW: 60 sec.  Range for F504 – F518: F112 .....F 111
<b>F505</b> Fixed-frequency 2 (Hz)	<b>F520</b>	<b>F535</b>	<b>F550</b>	<b>F558</b>	<b>F566</b>	
<b>F506</b> Fixed-frequency 3 (Hz)	<b>F521</b>	<b>F536</b>	<b>F551</b>	<b>F559</b>	<b>F567</b>	
<b>F507</b> Fixed-frequency 4 (Hz)	<b>F522</b>	<b>F537</b>	<b>F552</b>	<b>F560</b>	<b>F568</b>	
<b>F508</b> Fixed-frequency 5 (Hz)	<b>F523</b>	<b>F538</b>	<b>F553</b>	<b>F561</b>	<b>F569</b>	
<b>F509</b> Fixed-frequency 6 (Hz)	<b>F524</b>	<b>F539</b>	<b>F554</b>	<b>F562</b>	<b>F570</b>	
<b>F510</b> Fixed-frequency 7 (Hz)	<b>F525</b>	<b>F549</b>	<b>F555</b>	<b>F563</b>	<b>F571</b>	
<b>F511</b> Fixed-frequency 8 (Hz)	<b>F526</b>	<b>F541</b>	<b>F556</b>	<b>F564</b>	<b>F572</b>	
<b>F512</b> Fixed-frequency 9 (Hz)	<b>F527</b>	<b>F542</b>	<b>F573</b>			
<b>F513</b> Fixed-frequency 10 (Hz)	<b>F528</b>	<b>F543</b>	<b>F574</b>			
<b>F514</b> Fixed-frequency 11 (Hz)	<b>F529</b>	<b>F544</b>	<b>F575</b>			
<b>F515</b> Fixed-frequency 12 (Hz)	<b>F530</b>	<b>F545</b>	<b>F576</b>			
<b>F516</b> Fixed-frequency 13 (Hz)	<b>F532</b>	<b>F546</b>	<b>F577</b>			
<b>F517</b> Fixed-frequency 14 (Hz)	<b>F532</b>	<b>F547</b>	<b>F578</b>			
<b>F518</b> Fixed-frequency 15 (Hz)	<b>F533</b>	<b>F548</b>	<b>F579</b>			


Warning: Function REV (assignment **16**) with F208=2 inverts rotation

### 13) Parameter group 600: DC-Brake control / Aux. functions

**DC-Brake function parameters:**

<b>F600</b> DC-Brake function activation	Selection: 0: DC-Brake deactivated 1: DC injection before START 2: DC injection after STOP 3: Before START and after STOP	Default setting 0
<b>F601</b> Frequency threshold for DC-injection	Range: 0.2...5.0 Hz	Default setting 1.00 Hz
<b>F602</b> Intensity DC-Brake START	Range: 0...100%	Default setting 10
<b>F603</b> Intensity DC-Brake STOP		
<b>F604</b> DC-Brake duration START	Range: 0.0 - 10.0 sec.	Default setting 0.5 sec.
<b>F605</b> DC-Brake duration STOP		

DC Brake can be used as an alternative to ramp controlled STOP (F209=2). Intensity is controlled by (F603), duration by (F605).

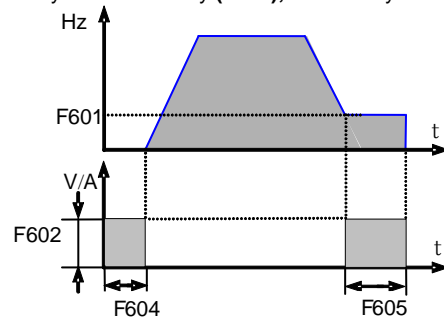

**Attention!! Improperly programmed DC-Brake function may result in inverter overcurrent trip and/or motor overheating**

**In case of braking by DC injection all kinetic energy will be dissipated in the motor rotor. Repeatedly use of the DC brake function may result in motor overheating**

Message "DC-Brake active" may be configured through digital output – assignment code 6

### Current- Voltage limiting functions

Limiting functions for current and voltage are available in standard E2000 inverters

**Current limiting function:** To program a motor current threshold. If motor current reaches the threshold (F608) during acceleration, the acceleration ramp will delay, until current drops below the limit. If current exceed the limit at target frequency (ramp completed), the frequency will be reduced, if necessary, down to the minimum frequency.

Current limiting function is always deactivated during deceleration ramp.

**Voltage limiting function:** To limit the DC-link voltage increase, due to energy regeneration during deceleration phase. If voltage reaches the limit (F609), the limiting function will stretch the deceleration ramp.

The limiting status of the inverter can be signaled through any programmable digital output. Assignment code: 12

<b>F607</b> Activation limiting functions	Selection: 0 deactivated 1..2: reserved 3: current/voltage 4: voltage 5: current	Default setting: 3
<b>F608</b> Current limit (% rated current)	Range: 60...200 %	Default setting: 160 %
<b>F609</b> DC voltage limit (% rated voltage)	Range: 60...200 %	Default setting: 140 %
<b>F610</b> Max. duration if limiting status (sec.)	Bereich: 0.1...3000.0 sec.	Default setting: 5.0 sec.

If limiting status of the inverter takes longer than time, set in F610, the system will stop, signaled by OL1 on the display

**Brake Chopper control (internal brake chopper)**

<b>F612</b> Max. duty-cycle chopper	Range: 0...100 %	Default setting: 100 %
-------------------------------------	------------------	------------------------

**"Catch on the fly" function: To get already spinning motor controlled (V/Hz mode only)**

<b>F613</b> Activation of the function	Selection: 0: Function deactivated 1: Always active 2: Active after POWER_ON	Default setting: 0
<b>F614</b> Scan process starting from:	Selection: 0: Last memorized frequency 1: Starting from f-max 2: Starting from 0HZ	Default setting: 0
<b>F615</b> Scan speed	Range: 1...100	Default setting: 20

<b>F620</b> Benschopper Deaktivierung	Range: 0,0...3000 sec.	Default setting: 5,0 sec.
---------------------------------------	------------------------	---------------------------

**F620=0,0:** Brake chopper may activate in STOP mode as well (if DC voltage rises), if **F620>0:** brake chopper function will deactivate in STOP mode after the time in F620.

**DC-voltage control**

<b>F631</b> DC-voltage control setting	Selection: 0: Active 1: Deactivated	Default setting: 0
<b>F632</b> Nominal voltage for DC-control	Range: 200....800 V	Default: 380V DC / 700V DC
<b>F633</b> DC-control frequency adaption band (Hz)	Range: 0,01...10 Hz	Default: 5,00 Hz

IF **F631=1:** The inverter will try to keep DC-voltage constant for different regenerating load conditions (during deceleration ramp or in case of motor generator function). Reduction of braking torque, or frequency adaption

**Parameter Kopieroptionen**

<b>F638</b> Parameter Kopy	Selection: 0: Kopy function disabled 1: Enabled, with identical powersize/voltage range 2: Always enabled	Default setting: 1
<b>F639</b> KopyCode	3000....3499	READ ONLY
<b>F638</b> Parameter selection for copy function	Selection: 0: All parameter 1: Motor parameter (F8xx) excluded	Default setting: 1

Genauere Anleitung: Beschreibung Kopierstick

**Attenuation function to prevent from torque oscillation (motor vibration at low frequencies)**

<b>F641</b> Anti-oscillation-function activation (for inverters <SIZE 7 only)	Range 0: deaktiviert 1%....100% activated	PWR range depending
---	--	---------------------

It works in V/Hz mode only (**F137=0,1,2**), "Catch on the fly" function to deactivate (**F613=0**)  
PWM mode to set on "RANDOM" (**F159=1**)

**HotKey Configuration**

<b>F643</b> Function programming of the "HOT-KEY" (*)	Selection: 0: Key inactive 1: JOG FWD 2: JOG REV 3: LOCAL/REMOTE	Default setting: 0
---	---	--------------------

**Main display configuration**

<b>F645</b> Selection of operating parameters, to display in line 1 and 2	Selection: 0.....33 Description see table	Default setting: 0
---	--	--------------------

F645	Operating parameter	Description
0	Output frequency	
1	Speed	
2	Speed setpoint	
3	Motor current	
4	Motor voltage	
5	DC-Voltage	
6	PID Setpoint	
7	PID Feedback	
8	Heatsink temperature	
9	Counter value	
10	Calculated speed	
11	Primary reference	
12		
13	Secondary reference	
14		
15	I-Q	
16	I-D	
17	Torque	
18	Torque setpoint	
19	Motor power	
20	Output power	
21	Inverter status	
22	DI terminal status	
23	DO terminal status	
24	Cykle step	
25	AI1 terminal value	
26	AI2 terminal value	
27	Reserve	
28	Reserve	
29	Frequency Pulse input	
30	Frequency Pulse output	
31	Analogue output 1	
32	Analogue output 2	
33	Power on hours	

<b>F646</b> Backlight ON-time	Range: 0...100	Default setting: 100
-------------------------------	----------------	----------------------

F646=100: Backlight always ON

<b>F647</b> Language selection	Selection: 0: Chinese 1: English 2: German	Default setting: 2
--------------------------------	--	--------------------

### Power drop compensation

<b>F657</b> Activation of the power drop compensating function	Selection: 0: deactivated 1: activated	Default setting: 0
<b>F658</b> Compensation ramp: Accel.	Range: 0,0.....3000sec. – 0,0=F114	Default setting: 0,0 sec
<b>F659</b> Compensation ramp: Decel.	Range: 0,0.....3000sec. – 0,0=F115	Default setting: 95
<b>F660</b> Voltage threshold to start compensation function	Range: 230V Inverter: 215V.....F661 400V Inverter: 400V.....F661	Default: 230V Inverter: 250V 400V Inverter: 450V
<b>F661</b> Voltage threshold to stop compensation function	Range: 230V Inverter: F660.....300V 400V Inverter: F660.....530V	Default: 230V Inverter: 270V 400V Inverter: 480V

In case if power drop (short interruptions), the inverter try to compensate the DC voltage. If the voltage falls below the threshold, programmed in **F660**, the inverter try to keep the DC voltage constant, performing controlled deceleration (inertial energy feed back). If DC voltage reaches the value in **F661**, the inverter will continue with normal operation, heading to the target frequency. Accel./Decel. ramp, programmed in **F658** and **F659** are in function during the compensation process.

### Independent motorvoltage control via separate setpoint

For special applications, the motor voltage may be controlled independently from output frequency (F137=4)

<b>F671</b> Source for voltage setpoint	Selection: 0: Intern - F672 1: AI1 2: AI2 3: Reserved 4: MODBUS - 2009H 5: Pulse input 6: PID 7...10: Reserviert	Default setting: 0
<b>F672</b> Internal voltage setpoint	Range: 0,0.....100%	Default setting: 100%
<b>F673</b> Lower limit motor voltage (%)	0%...F674	Default setting : 0%
<b>F674</b> Upper limit motor voltage (%)	F673...100%	Default setting : 100%
<b>F676</b> Voltage rise timet (sec.)	0.0....3000	Default setting : 5.0
<b>F676</b> Voltage drop time (sec.)	0.0....3000	Default setting : 5.0

<b>F677</b> STOP mode for independent motor voltage control	Selection: 0: Voltage and frequency drop simultaneously 1: Voltage drops first 2: Frequency drops first	Default setting: 0
---	--	--------------------

## 14) Parameter group 700: Error handling and protection functions

### Programmable delay for STOP- DISABLE with STOP signal through terminal

<b>F700</b> Delay selection	Selection: 0: immediate STOP/DISABLE 1: with delay	Default setting: 0
<b>F701</b> Delay time setting (sec.)	Range: 0.0...60.0 sec.	Default setting: 0.0 sec.

only for signal through terminal (digital input) (F201=1/2/4, F209=1)

### Fan control mode

<b>F702</b> Fan control mode setting	Selection: 0: temperature-controlled 1: ON with inverter on power 2: ON with inverter in START mode	Default setting: 2
--------------------------------------	---	--------------------



### Inverter- / Motor over-load protection

Free programmable threshold values for warning signal before inverter/motor overload fault.  
Digital outputs, to program for warning messages (function mapping code 10 / 11)

<b>F704</b> Threshold for warning INVERTER OVERLOAD (%) 10	Range: 50 - 100%	Default: 80 %
<b>F705</b> Threshold for warning MOTOR OVERLOAD (%) 11	Range: 50 - 100%	Default: 80 %
<b>F706</b> Threshold for INVERTER overload trip (%)	Range: 120 - 190%	Default: 150 %
<b>F707</b> Threshold for motor overload trip (%)	Range: 20 - 100%	Default: 100 %

% values refer to relative motor / inverter rated values  
All warnings are delayed, depending on overload grade  
Warning for motor overload depends on working frequency too

Following graphics, to show warning delay characteristic:

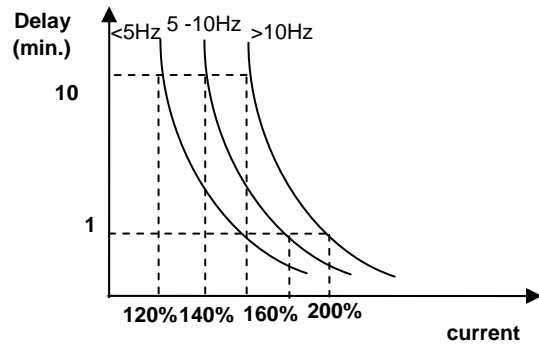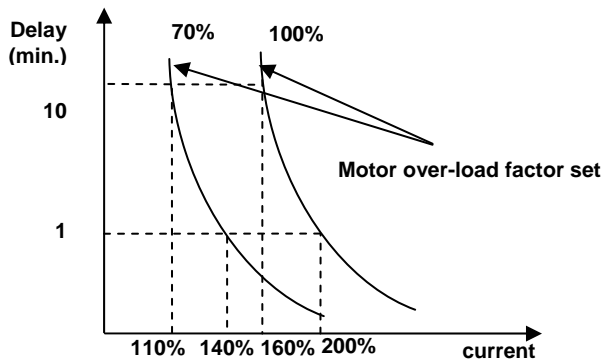



## ERROR history

### Error codes **ON DISPLAY** (error memory code)

CODE	Description	Reason	Remedy
OC (2)	Over-current – hardware detected	Too short ramps, short circuit on output motor defect, system blocked, wrong motor parameter setting	Increase Accel/Decel ramp time Check cabling / motor Check mechanical system Reduce BOOST Check motor parameter setting
OC1 (16)	Over-current – software detected		
OC2 (67)	Over current – software detected		
GP (26)	Ground protection error	Short circuit to ground	Check cable / motor
OL1 (5)	Inverter overload	Overload	Reduce load Check for right dimensioning
OL2 (8)	Motor overload	Overload	
OE (3)	DC-link over-voltage	Input power over-voltage Too high inertia Deceleration ramp too short Improper PID controller parameter	Check for correct supply voltage Inverter rated voltage correct?? Use larger brake resistors Increase deceleration time
PF1 (4)	Input phase-loss	One input-phase missing	Check power supply
PF0 (17)	Phase-unbalance output	Motor-phase / cabling interrupted	Check cabling / check motor
LU (6)	Undervoltage	Voltage on DC_Link too low	Check power supply
OH (7)	Inverter overheat	Environment temperature too high Poor cabinet heat-exchange Inverter / heatsink polluted PWM frequency too high Motor cable too long	Check for environment / working conditions Insert all parameters correctly Check for correct inverter mounting
OH1 (35)	Motor overheat	Motor PTC signal triggered	
AErr (18)	Analogue signal interruption	The analogue signal value is below the lower limit, programmed in <b>F4xx</b> parameters	Inspect control cabling Insert correct parameters for analogue signal lower limit Measure reference signal source
EP (20) EP2 (20) EP3 (19)	Inverter under-load / idling	Idling Lack of water Mechanical system broken	Check mechanical drive system Reestablish water supply
nP (22)	Pump control: Pressure beyond limits	Pressure beyond limits Inverter in SLEEP mode	Insert correct pump controller parameters – open water flow
CE (45)	MODBUS time-out	MODBUS signal missing	Check MODBUS cabling / source – MODBUS parameter setting
ESP (11)	External emergency	The external emergency signal has been triggered	
ERR0	Parametrizing error	Parameter change not accepted	Stop inverter for parameter setting
ERR1	Wrong password	No or wrong password input Parameter change not allowed	Insert correct password
ERR2 (13)	Autotuning error	Motor can not free rotate during dynamic testing cycle	Separate motor from drive system
ERR3 (12)	Overcurrent in STOP condition	Hardware failure	Visual inspection of internal cabling Contact EURA service-center
ERR4 (15)	Current sensor error	No current signal on control board	Visual check of internal cabling, contact EURA service-center
ERR5 (23)	PID ERROR	PID controller error, due to improper PID parameter	Set PID parameter correctly
ERR6 (49)	Watchdog Timeout	Timeout caused by missing watchdog signal	Check signal on dig. input - assign digital input to watchdog function
EEP (47)	EEPROM error	EEPROM write/read error	Replace control board
oPEn	Inverter disable	oPEn input has been triggered	----
CE1 (53)	Keypad error	Keypad disconnected	Check keypad cable

#### Inverter general fault message through digital output:

Function assignation code **1**: Inverter error message

Function assignation code **13**: Inverter OK message

**Error memory readout:**

F708 Last fault	<b>Fault code: see table above</b>	F711 Frequency at last fault (Hz) F712 Current at last fault (A) F713 DC-Link voltage at last fault (V)
F709 Fault last but one		F714 Frequency at fault last but one (Hz) F715 Current at fault last but one (A) F716 DC-Link voltage at fault last but one (V)
F710 Fault last but two		F717 Fault last but two (Hz) F718 Current at fault last but two (A) F719 DC-Link voltage at fault last but two (V)

**Error event counters:**

F720 Overcurrent	<b>OC</b>	
F721 Overvoltage	<b>OE</b>	
F722 Overtemperature	<b>OH</b>	
F723 Overload	<b>OL1</b>	

**Protection functions – configuration**

Activation of phase-loss, under-voltage and temperature monitoring

<i>F724</i> Input phase-loss monitoring	Selection: 0: deactivated 1: activated	Default setting: 1 (T2/T3 models)
<i>F725</i> Under-voltage reset	Selection: 1: manual reset 2: autoreset	Default setting: 2
<i>F726</i> Over-temperature monitoring	Selection: 0: deactivated 1: activated	Default setting: 1
<i>F727</i> Output phase-loss monitoring	Selection: 0: deactivated 1: activated	Default setting: 1

**Delay for inverter error trip**

<i>F728</i> Delay phase-loss detection (sec.)	Range: 0.1 - 60.0 sec.	Default setting: 0.5 sec.
<i>F729</i> Delay for under-voltage detection (sec.)	Range: 0.1 - 60.0 sec.	Default setting: 5.0 sec.
<i>F730</i> Delay for over-temperature detection (sec.)	Range: 0.1 - 60.0 sec.	Default setting: 5.0 sec.
F732 Threshold for under-voltage detection (V) (DC-Link voltage)	Range: 0.1 – 450V	230V inverter: 215 V 400V inverter: 400 V

**Overcurrent detection via software **OC1****

<i>F737</i> Software controlled overcurrent detection	Selection: 0: deactivated 1: activated	Default setting: 0
<i>F738</i> Software current limit (rated current unit)	Range: 0.50 - 3.00	Default setting: 2.5
F739 SW over-current inverter-trip counter <b>OC1</b>		

## 14) Parameter group 700: Error handling and protection functions

### Analogue signal interruption detection

<b>F741</b> Analogue signal interruption – fault handling mode	<b>Selection 0: deactivated</b> 1: STOP and <b>AErr</b> on display 2: STOP without any message on display 3: Inverter continue running with f-min 4: Reserved	Default setting: 0
<b>F742</b> Threshold for detection (%)	Range: 1...100 %	Default setting: 50%

#### Message via digital output (function code 18)

If **F400** / **F406** set lower than 0.01V interruption detection is deactivated (a minimal value of 1V is recommended)

Detection threshold is referred to lower limits for analogue input signals, set in parameters **F400** / **F406**

### Overheat warning level

<b>F745</b> Warning threshold (%)	Range: 0...100%	Default setting: 80
-----------------------------------	-----------------	---------------------

Heatsink over-temperature warning (message via digital output (function code 16))

### Temperature depending PWM reduction

<b>F745</b> Threshold for automatic PWM reduction °C	Range: 60...72°C	Default setting: 65°C0
<b>F747</b> Temperature depending carrier frequency reduction	<b>Selection 0: deactivated</b> 1: activated	Default setting: 1

With temperature depending PWM frequency-reduction activated (**F747=1**), inverter will start to decrease PWM frequency gradually, as heatsink reaches the temperature set in **F746**

If PWM frequency is configured for "RANDOM" (**F159=1**), temperature depending PWM adaption is always deactivated

**ATTENTION:!! If sinus output filters are used, the automatic PWM reduction function must be deactivated F747=0**

### Idling detection

<b>F754</b> Threshold for idling detection (%)	Range: 0...60 sec.	Default setting: 0.5 sec.
<b>F755</b> Delay time for idling detection (sec.)	Range: 0...60 sec.	Default setting: 0.5 sec.

Message via digital output (function code 20)

### Earth fault detection

<b>F760</b> Ground short monitoring	<b>Selection 0: disable</b> 1: enable	Default setting: 1
-------------------------------------	--	--------------------

### Reversing mode setting

<b>F761</b> Reversing mode (F=0 / F-START)	<b>Selection 0: through F=0</b> 1: through F-start (F109)	Default setting: 0
--	--	--------------------

**F761=0:** Reversing goes through f=0 (with deathtime **F120**)

**F761=1:** Reversing goes through f=Start (**F109**), (without deathtime **F120**)

## 15) Parameter group 800: Autotuning – Motor data programming

EP66 inverter are designed to drive standard asynchronous motor and Permanent Magnet synchronous motors as well

Smart AUTOTUNING functions help for easy and quick setup

Basic data for Asynchronous and synchronous motors

<b>F800</b> Automatic motor-data measurement (AUTOTUNING)	Selection: 0: AUTOTUNING deactivated 1: START dynamic AUTOTUNING 2: START static AUTOTUNING	Default setting: 0
<b>F801</b> Motor-rated power (kW)	Range: 0.2...1000 kW	
<b>F802</b> Motor-rated voltage (V)	Range: 1...440 V	
<b>F803</b> Motor-rated current (A)	Range: 0.1...6500 A	
<b>F804</b> Number of poles (p) (read only!!)	Automatically calculated	
<b>F805</b> Rated speed (rpm)	Range: 1...30000 U/min	
<b>F810</b> Motor-rated frequency (Hz)	Range: 1.0...300.0 Hz	Default setting: 50.00Hz


After correct input of the data, reported on the table above, intelligent AUTOTUNING functions can be used, to measure, and memorize all unknown motor data.

**Attention: All motor data must be programmed exactly, as reported on motor nameplate. Especially for SENSORLESS VECTOR OPERATION, precise motor data entry is mandatory, to guarantee reliable function of the drive**


Other specific data may be measured with AUTOTUNING function:

**F800=0:** No AUTOTUNING, after parameter F801...F803, F805 and F810 are set, standard values are chosen for remaining parameters

**F800=1:** Dynamic AUTOTUNING – motor without load. After input of motor nameplate data in **F801...F805** and **F810**, the process can be started in the following way:

Set **F800=1**, press  key; The automatic process starts now, „**TEST**“ shown on display, after a few seconds, the motor will accelerate and decelerate, with ramps, programmed in F114 and F115. After completion of the cycle, all motor data will be stored, and **F800** will reset to 0

**F800=2:** Static AUTOTUNING, if there is no way to separate the motor from the load, static data measurement is available – the motor will not rotate during the cycle, and it is not allowed, to rotate it. Following, to start the static cycle:

Set **F800=2**, press  key; The automatic process starts, „**TEST**“ shown on display, after a few seconds it will terminate; All values for rotor resistance main inductivity and leakage inductivity are stored automatically on parameters F806 to F808, **F800** will reset to 0.

### Autotuning results for ASYNCRONUS motors

<b>F806</b> Stator resistance (Ohm)	Range: 0.001...65.00 Ohm	
<b>F807</b> Rotor resistance (Ohm)	Range: 0.001...65.00 Ohm	
<b>F808</b> Leakage inductivity (mH)	Range: 0.01...650.0 mH	
<b>F809</b> Main inductivity (mH)	Range: 0.1...6500 mH	

If parameter **F801** (Motor rated power) is changed, all parameters **F806...F809** are reset to default values, a following AUTOTUNING process, as described above may be used for fine tuning.



**SENSORLESS VECTOR speed controller (for asynchronous motor only)**

<b>F812</b> Start excitation time (sec.)	Range: 0...30.0 sec.	Default setting: 0.3
<b>F813</b> Proportional gain in frequency range 1 KP1	Range: 1...100	Default setting: 30
<b>F814</b> Integration time in frequency range 1 KI1	Range: 0.01...10.00	Default setting: 0.5
<b>F815</b> Proportional gain in frequency range 2 KP2	Range: 1...100	Default setting: Depending on inv. model
<b>F816</b> Integration time in frequency range 2 KI2	Range: 0.01...10.00	Default setting: 1.00
<b>F817</b> Range 1 end frequency	Range: 0...F111	Default setting: 5.00 Hz
<b>F818</b> Range 2 start frequency	Range: F817...F111	Default setting: 50.00 Hz
<b>F819</b> Controller precision	Range: 50...200	Default setting: 100
<b>F820</b> Speed loop filter constant	Range: 0...100	Default setting: 0
<b>F844</b> Idle current (A)	Range: 0,1 A...F803	Default setting: depending on size

F817, F818: Parameter for frequency depending PID parameter selection



**ATTENTION!!** Improper setting of speed regulating parameters may result in system instability. This may cause malfunction of the machine and / or damage of mechanical parts

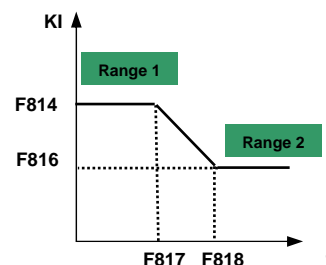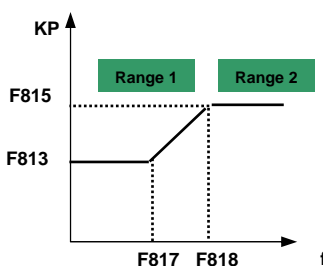

It is highly recommended to keep factory default parameters, slight modification, to optimize the system must be done with caution.

**Parameter for permanent magnet synchronous motor control (F106=6)**

After input of basic motor parameters (F801...F810), this parameters ma be input manually, or using AUTOTUNING procedure as described above:

<b>F870</b> Motor feed back electrical force	V/1000 rpm	
<b>F871</b> Induktivity D-axis (Ohm)		
<b>F872</b> Induktivity Q-axis (Ohm)		
<b>F873</b> Stator resistance (Ohm/Phase)		
<b>F876</b> Idling current (% rated current)		Default setting 20%
<b>F877</b> Frequency compensation idle current (%)		Default setting 0%
<b>F878</b> Threshold idle current compensation (Hz)		Default setting 10Hz%
<b>F880</b> Scan-rate controller		Default setting 0,2 sec.

## 16) Parametergroup 900: RS485 hardware and interface parameters

Please refer on specific MODBUS manual, for protocol, control algorithm, control registers, and other details

<b>F900</b> Inverter adresss	Selection: 1...255: fixed addresses 0: adress set via BUS	Default setting: 1
<b>F901</b> RS485 operation mode	Selection: 1: ASCII protocol 2: RTU protocol	Default setting: 2
<b>F902</b> Number of STOP bit	Selection: 1 - 2	Default setting: 2
<b>F903</b> Parity check	Selection 0: no check 1: ODD parity 2: EVEN parity	Default setting: 0
<b>F904</b> Baudrate	Selection: 0: 1200 1: 2400 2: 4800 3: 9600 4: 19200 5: 8400 6: 57600	Default setting: 3
<b>F905</b> MODBUS Time-out	Range: 0.0.....3000 sec.	Default: 0.0 sec
<b>F907</b> M-BUS Time-out warning	Range: 0.0.....3000 sec.	Default: 0.0 sec
<b>F930</b> Keypad TimeOut	Range: 0.0.....10 sec.	Default: 1.0 sec

**F905:** MODBUS time-out, in case of missing MODBUS command within the timeframe, set in **F905** inverter will STOP for safety reason and **CE** will appear on the display. For **F905=0**, the safety function is disabled.

**F907:** MODBUS time-out warning. If **F907>0**, and MODBUS signal is missing for the time, set by **F907**, the inverter will send an error warning trough a programmable digital output (mapping code **43**).


This signal may be reset via digital input (mapping code **60**).

**F930:** Keypad timeout: If activated (**F930>0**), in case the keypad is disconnected, the inverter stops after the delay set in **F930** **CE1** error message

### Hardware MODBUS - interface :

All EURA Drives inverter are equipped with a unique RS485 connector. This port is used for inverter control via MODBUS and for parametrizing the inverter, using PC software or COPY STICK.

The picture below shows the pin-out of the 4 pole connector

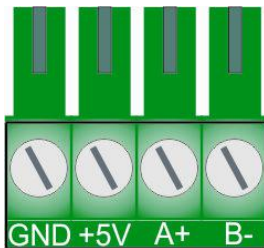

An auxiliary power supply, based on microprocessor ground delivers 50 mA / 5V

The MODBUS connector is located right hand of the control connector bloc

## 17) Parameter group A00: PID controller parameter

An integrated PID-controller is available on standard EP66 inverters. It is suitable for simple closed loop control projects. For more demanding projects, like Booster stations using multipump control, cascade control or Master/Slave interaction, specific hard-/software options are available.

<b>FA00</b> Controller configuration	Selection: 0: closed loop control – single pump control 1: Master/Slave Mode 2: Master/Slave with interchange	Default setting: 0
--------------------------------------	---	--------------------

**FA00=0:** Suitable for standard closed loop control projects (single pump pressure control).

**FA00=1:** Simple dual pump cascade mode control, variable, slave pump fixed speed (direct grid connected)

**FA00=2:** Simple dual pump cascade mode control, variable, slave fixed speed, with pump interchange (time set by **(FA25)**)

### Channel configuration for set-point and feed-back (see graphic on following page)

<b>FA01</b> PID set-point channel	Selection: 0: internal reference (value in <b>FA04</b> ) 1: Analogue input AI1 2: Analogue input AI2 4: Frequency (pulse input)	Default setting: 0
<b>FA02</b> PID feed-back channel	Selection: 1: Analogue input AI1 2: Analogue input AI2 3: Frequency (pulse input) 4: Reserved 5: Motor current 6: Output power 7: Output torque	Default setting: 1

<b>FA03</b> Upper controller limit (% of set-point)	Range: 0.0...100.0 %	Default setting: 100.0
<b>FA04</b> Internal set-point value (%)	Range: FA05....FA03 %	Default setting: 50.0
<b>FA05</b> Lower controller limit (% of set-point)	Range: 0.0...100.0%	Default setting: 0.0

If the controller works beyond the limits in **FA03 - FA05** inverter will be disabled and **(nP)** on display

<b>FA06</b> PID controller polarity	Selection: 0: Positive 1: Negative	Default setting: 1
-------------------------------------	---------------------------------------	--------------------

Negative setting e.g. for pressure, flow control

### Sleep mode activation

<b>FA07</b> Automatic sleep mode	Selection: 0: activated 1: deactivated	Default setting: 1
<b>FA09</b> Frequency threshold for sleep mode activation	Range: between F112...F111	Default setting: 5.00 Hz
<b>FA10</b> Time delay for sleep mode activation (sec.)	Range: 0...500 sec.	Default setting: 15 sec.
<b>FA11</b> Delay-time for restart from sleep mode	Range: 0...3000 sec.	Default setting: 3.0 sec.

If the inverter runs for a programmed time, (set by **FA10**) below the minimum frequency, (set by **FA09**), it will stop and enter in sleep mode, displayed as **nP**. (feed-back value must stay within programmed limits FA03-FA04).

If feed back (pressure) falls below the value in **(FA05)**, inverter will restart again, after the delay-time in **(FA11)**

<b>FA12</b> Maximum working frequency in PID	Range: FA09....Fa111 (Hz)	Default setting: 50 Hz
--	---------------------------	------------------------


This parameter limits the maximum working frequency in PID mode

<b>FA18</b> Variable set-point allowed	Selection: 0: deactivated 1: activated	Default setting: 1
--	---	--------------------

If **FA18=0:** It is not possible, to change the fixed set-point in **(FA04)** during controller operation



17) Parameter group A00: PID setup

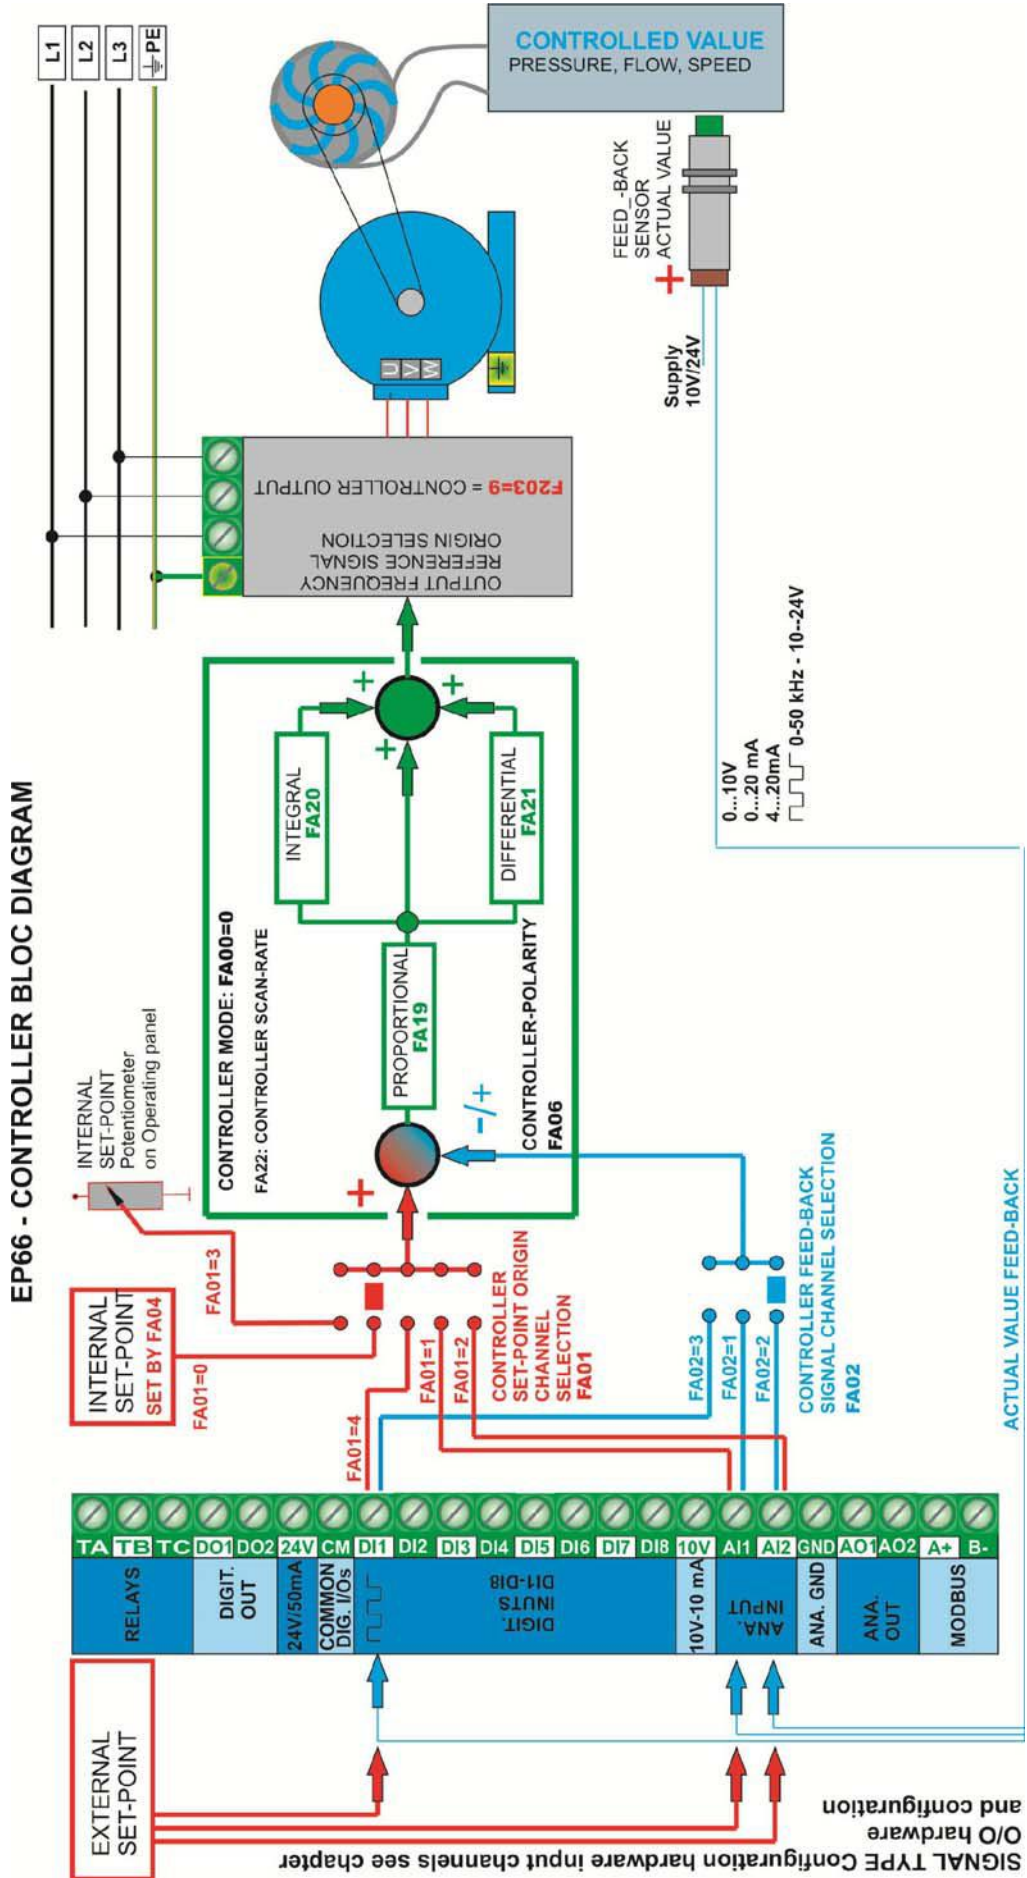

### PID controller parameter setting

FA19 Proportional gain <b>P</b>	Range: 0.00...10.00	Default setting: 0.3
FA20 Integration time <b>I</b> (sec.)	Range: 0.1...100.0 sec.	Default setting: 0.3 sec.
FA21 Differential time <b>D</b> (sec.)	Range: 0.00...10.00	Default setting: 0.0 sec.
FA22 Controller cycle time / scan-rate (sec.)	Range: 0.1...10.0 sec.	Default setting: 0.1 sec.

### Reversing lock for negative controller results

FA23 Reversing lock	Selection 0: Reversing not allowed 1: Reversing allowed	Default setting: 0
---------------------	--	--------------------

### Master / Slave interchange

FA24 Interchange time: units	Selection: 0: hours 1: minutes	Default setting: 0
FA25 Interchange time setting (hours / min.)	1....9999	Default setting: 100 h

### Idling / lack of water protection

FA26 Lack of water protection concept	Selection: 0: No protection 1: Sensor signal through digital input 2: Controller algorithm 3: Motor idling current detection	Default setting: 0
FA27 Current limit for lack of water detection (% of rated current)	Range: 10...150 %	Default setting: 80%
FA28 Recheck delay time (sec.)	Range 0.0...3000 sec.	Default: 60 sec.
FA66 Delay time for lack of water message (FA26=3)	Range: 0...60 sec.	Default setting: 2 sec.

**FA26=1:** Lack of water is triggered through digital input (function assignation code **30**) – it will stop the inverter and display **EP1**. The „Water OK“ signal through a different digital input (function assignation code **31**) will reset the system. FA26=1: there is no delay for fault trigger.

**FA26=2:** In case the controller reaches the maximum frequency, and the motor current still remains below the value in **FA27**, the controller will interpret the situation as lack of water. **EP2** will show up on the display. The inverter will stop immediately.

**FA26=3:** Detection via motor current measuring only. If the motor current falls below the value in **FA66**, the fault will be triggered with delay, set in **FA66**. Inverter will stop and **EP3** will show up on the display.

**FA28** Recheck time, timeframe for the inverter to recheck, if lack of water condition still persists, before it restarts. It is anytime possible to reset the system, pressing.



### Controller dead band +/- % of the set point

FA29 Dead band setting (% of set-point)	Range: 0.0 - 10.0 %	Default setting: 2.0
---	---------------------	----------------------

If the feed-back (actual value) stays within the dead band, the controller does not make any activity, and it keeps the output frequency constant. The FA29 parameter is used also for starting/stopping the fixed speed pump – see below

### Dual pump booster control (one pump inverter controlled, one pump fixed speed)

FA30 Delay-time to start inverter pump (sec.)	Range: 2.0 - 999.9 sec.	Default setting: 20.0
FA31 Delay-time, to start fixed speed pump (sec.)	Range: 0.1 - 999.9 sec.	Default setting: 30.0
FA32 Delay-time to stop fixed speed pump (sec.)	Range: 0.1 - 999.9 sec.	Default setting: 30.0

If the feed-back value (actual value) exceeds the limits, given by FA29, the fixed pump will be started or respectively stopped. Start/Stop delay time is set by **FA31** and **FA32**.

**PID controller secondary parameter set**

<b>FA38</b> Proportional gain (2) <b>P</b>	Range: 0.00...10.00	Default setting: 0.3
<b>FA39</b> Integration time (2) <b>I</b> (sec.)	Range: 0.1...100.0 sec.	Default setting: 0.3 sec.
<b>FA40</b> Differential time (2) <b>D</b> (sec.)	Range: 0.00...10.00	Default setting: 0.0 sec.
<b>FA40</b> PID parameter switchover mode	Selection: 0: no switchover 1: reserved 2: depending on PID deviation	Default setting: 0

**Reversing lock for negative controller results**

<b>FA42</b> Switchover threshold 1	Range: FA05...FA43	Default setting: 0
<b>FA43</b> Switchover threshold 1	Range: FA42...FA03	Default setting: 0

For PID deviation below **FA42**, first PID parameter set is used, above **FA43** second PID parameter set is activated, between **FA42** and **FA 43** parameter values are interpolated.

**Notfunktionen**

<b>FA59</b> Notbetriebsarten	Auswahl: 0: deaktiviert 1: FIREMODE 1 2: FIREMODE 2	Werkseinstellung: 0
<b>FA60</b> Frequenz für Notbetrieb	Bereich F112...F111	Werkseinstellung: 50 Hz
<b>FA58</b> Druck für Notbetrieb	Bereich 0.0....100%	Werkseinstellung: 80%

Der Notbetrieb wird über entsprechend zugeordnetes Klemmsignal aktiviert (33), alle Schutzmechanismen im Umrichter werden unterdrückt, automatischer Restart im Fehlerfalle ist aktiviert.

FIREMODE 1 Umrichter läuft mit der durch den Sollwert bestimmten Frequenz

FIREMODE 2, Umrichter läuft mit der, in Parameter **FA60** vorgegebenen Frequenz

Druck-Notbetrieb wird durch entsprechend programmierten Eingang aktiviert (32)

<b>FA62</b> Reset options	Selection: 0: no RESET possible 1: via trigger input	Default setting: 0
---------------------------	---	--------------------

Wenn FA62=1: Umrichter kehrt wieder in den Normalmodus zurück, wenn Firemode Ansteuerung deaktiviert wird

## 18) Parameter group C00: Speed / Torque control

Two different control modes are available on EP66 inverters: **Speed-control** mode and **Torque-control** mode

<b>FC00</b> Speed / Torque control mode selection	Selection: 0: Speed control 1: Torque control 2: Speed/Torque – terminal selected	Default setting: 0
---	---	--------------------

**FC00=0:** The output frequency is set by the speed reference value. Torque depends on the load. Torque limit can be set by parameter **FC28...FC35**

**FC00=1:** Torque controlled by set-point value. Speed depends on the load condition. Maximum speed can be limited by parameter **FC22...FC25**

**FA00=2:** A digital input signal is used, to switch over between the two control modes (function assignment code: **20**)

<b>FC01</b> Delay-time for speed/torque switchover (sec.)	Range: 0,0....1,0 sec.	Default setting: 0,1 sec.
---	------------------------	---------------------------

<b>FC02</b> Torque ramp-up/down time	Range: 0,1....100 sec.	Default setting: 1 sec.
--------------------------------------	------------------------	-------------------------

Torque rise/fall time 0...100%

### Set-point origin for torque control

<b>FC06</b> Set-point origin for torque control	Selection: 0: Internal setting FC09 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3 4: Pulse signal input 5: Reserved	Default setting: 0
---	--	--------------------

<b>FC07</b> Torque range, referred to rated motor torque	Range: 0.0...3,000	Default setting: 3,000
<b>FC09</b> Internal torque reference value (%)	Range: 0...300.0 %	Default setting: 100 %

**FC07:** Torque range, corresponding to 0-100% set-point signal

**FC09:** Internal torque set-point value

### Torque boost for low frequencies (additional torque for heavy startup condition)

<b>FC14</b> Torque increase signal origin	Selection: 0: Internal set FC17 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3 4: Pulse signal input 5: Reserved	Default setting: 0
---	--	--------------------

<b>FC15</b> Torque increase in (%) motor rated torque	Range: 0.0...0,5	Default setting: 0,5
<b>FC16</b> Frequency threshold for torque BOOSTS (%) f-max.	Range: 0...100 %	Default setting: 10 %
<b>FC17</b> Internal setting for torque BOOST value	Range: 0..50,0%	Default setting: 10 %

**FC15:** 100% of torque BOOST signal correspond to the % of rated motor torque value, set in FC15

**FC16:** The threshold for torque boost

18) Parameter group C00: Speed / Torque control

Speed limiting for inverter, working in torque control mode:

<b>FC22</b> Speed limiting set-point origin forward	Selection: 0: Set by FC23 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3 4: Pulse signal input 5: Reserved	Default setting: 0
<b>FC23</b> Internal speed limiting value forward	Range: 0...100 %	Default setting: 10%
<b>FC24</b> Speed limiting set-point origin reverse	Selection: 0: Set by FC25 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3	Default setting: 0
<b>FC25</b> Internal speed limiting value reverse	Range: 0...100 %	Default setting: 10%

(All values are referred to f-max –F111)

Torque limiting for inverter working in speed control mode

<b>FC28</b> Torque limiting signal source motor mode	Selection: 0: Set via FC30 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3 4: Pulse signal input 5: Reserved	Default setting: 0
<b>FC29</b> Reference: 100% of limiting signal to motor rated torque	Range: 0,0....3,000	Default setting: 3,000
<b>FC30</b> Internal torque limiting value motor mode (%)	Range: 0....300% %	Default setting: 200%

(All referred on motor rated torque)

<b>FC33</b> Torque limiting signal source generator mode	Selection: 0: Set via FC35 1: Analogue input AI1 2: Analogue input AI2 3: Analogue input AI3 4: Pulse signal input 5: Reserved	Default setting: 0
<b>FC34</b> Reference: 100% of limiting signal to motor rated torque	Range: 0,0....3,000	Default setting: 3,000
<b>FC35</b> Internal torque limiting value generator mode (%)	Range: 0....300% %	Default setting: 200%

(All referred on motor rated torque)


+

Torque / Current limit for field wakening area

<b>FC 48</b> Activation of secondary limiting	Selection: 0: Limiting fixed 1: Depending on frequency threshold	Default setting: 0
<b>FC49</b> Sekundary torque/current limit (%)	Range: 50...200 %	Default setting: 120%
<b>FC50</b> Start transition frequency (Hz)	Range: 1.0 Hz...FC51	Default setting: 15 Hz
<b>FC51</b> End transition frequency (Hz)	Range: FC50...F111 Hz	Default setting: 30 Hz

In V/Hz mode: To limit motor current in the field wakening area

In SLV mode: To limit torque in the field wakening area

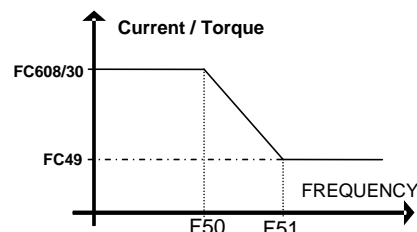





## 19) EP66 Diagnostic tools

### Analogue/Digital input status monitoring

<p><b>F330</b></p> <p>Digit input Digital output Analogue input Analogue output</p>	<p>The logical status of digital I/O channels is shown in 8+3 graphical blocs (dark=ON) The value of the analogue inputs is displayed from 0...4096 Analogue outputs are displayed from 0...100 %</p>
---	---

### Digital/Analogue output status stimulation

<p><b>F335</b> Relays output</p> <p><b>F336</b> DO1</p> <p><b>F337</b> DO2</p>	<p>Using keys  and  the digital outputs can be switched ON/OFF</p>
<p><b>F338</b> AO1</p> <p><b>F339</b> AO2</p>	<p>Using keys  and  it is possible to set the analogue outputs in the range from 0.....4096</p>

<b>H000</b>	Frequency setpoint (STOP) / output frequency (RUN)
<b>H001</b>	Speed setpoint (STOP) / actual speed (RUN)
<b>H002</b>	Motor current
<b>H003</b>	Motor voltage
<b>H004</b>	DC-Link voltage
<b>H005</b>	PID controller feed-back
<b>H006</b>	Heatsink temperature
<b>H007</b>	Counter
<b>H008</b>	Calculated speed
<b>H009</b>	PID controller setpoint
<b>H012</b>	Output power
<b>H013</b>	Torque
<b>H014</b>	Torque setpoint
<b>H017</b>	Step number with autocycling fixed frequencies
<b>H018</b>	Frequency pulse input
<b>H019</b>	Feed-back (Hz)
<b>H020</b>	Feed-back (r/min)
<b>H021</b>	Monitoring AI1
<b>H022</b>	Monitoring AI2
<b>H025</b>	Power on hours
<b>H026</b>	Operating hours
<b>H027</b>	Frequency pulse input (Hz)
<b>H028</b>	
<b>H029</b>	
<b>H030</b>	Primary setpoint (Hz)
<b>H031</b>	Secondary setpoint (Hz)

## 20) Options

### Options build inside the inverter:

There is an area inside the inverter for customer specific options. Four threaded M4 holes are available to fix a mounting plate.

**Attention!! Build in options should not generate excessively heat**

### Options on the cover

There is a flat area on the cover, used to build in additional control elements, like main/emergency switch, START/STOP selector, potentiometer.

If there it is necessary to drill holes in the cover, it is important, to guarantee the integrity of the IP66 protection degree. This must be done by professional mounting and use of proper components.


**Attention!! EURA does not take any responsibility in case of unprofessional modification of the inverter, or use of inappropriate optional components**

Following components have been tested and approved by EURA. This components are available through the EURA optional program

Framesize	Main- /Emergency switch	RUN/STOP selector ON/OFF	RUN/STOP selector ON/OFF/ON	Potentiometer	Switch label
I1	SONTHEIMER NLO16/3ZM/Z33IP67	EATON M22 WRK / K10	EATON WRK3 / K20	EATON M22 R4k7	EATON M22S-ST-X
I2	SONTHEIMER NLO40/3ZM/Z33IP67				
I3	SONTHEIMER NLO63/3ZM/Z33IP67				

### EMC Options:

EMC class C3 is standard for all EP66 inverters. For use in residential area, a C1 filter kit is available. The motor cable length should not exceed 10 meter. A proper shielded motor cable is required. The additional filter kit fits inside the inverter, it may be used in combination with SONTHEIMER main switch as well.

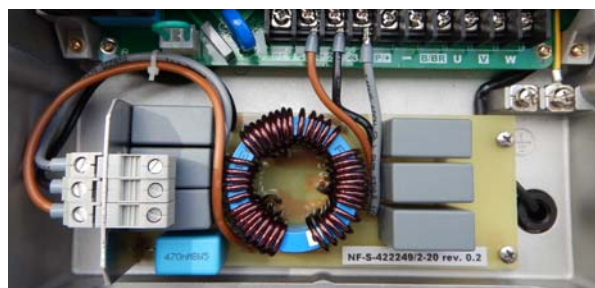

Following EMV components have been approved and certified for EMC class C1:

Framesize	C1 Filter kit	Motor cable:
I1	EPA NF-S422249/1-11	LAPPKABEL ÖLFLEX SERVO2YSLCY-JB - 2,5 mm
I2	EPA NF-S422249/2-20	LAPPKABEL ÖLFLEX SERVO2YSLCY-JB - 4,0 mm
I3	EPA NF-S422249/3-37	LAPPKABEL ÖLFLEX SERVO2YSLCY-JB - 6,0 mm

**Attention!! All additional filter components (input/output) must be approved by EURA Drives. Mounting must be done by professional people.**

**In case of not professional installation or use of improper components, EURA Drives cannot guarantee for the proper filter class, and will not assume any responsibility for damage on the inverter or on other components of the system. Warranty will become void in this case.**



---

# EURA Drives GmbH

---

Mühlenweg 143  
22844 Norderstedt (Germany)

---

Tel.: +49 40 589 7950 0  
Fax.: +49 40 589 7950 29

---

[www.euradrives.eu](http://www.euradrives.eu)