

# CO<sub>2</sub>-regulator / ES 899



Combined CO<sub>2</sub> and temperature regulator  
for duct mounting

**Controls a fan unit according to  
temperature and CO<sub>2</sub> level.**

ES 899 is a CO<sub>2</sub> and temperature regulator for a wide range of applications. It has two independent 0-10V output signals. A linear output based on current CO<sub>2</sub> level, and a regulation output designed for control of e.g. a damper or EC-motor.

The regulator also has integrated RS485 Modbus communication.

## **Description:**

ES 899 measures CO<sub>2</sub> and temperature levels and controls a fan unit or a damper according to the set points.

It also can be used as independent CO<sub>2</sub> sensor with a linear 0-10V output voltage or as ON/OFF controller with an optional external 0-10V set point relay unit.

The CO<sub>2</sub> sensor uses the widely used ABC algorithm, which ensures long life without calibration. Only the room cannot be used constantly, but must regularly get sufficient airflow to lower the CO<sub>2</sub> to fresh air level.

The required CO<sub>2</sub> and temperature levels are adjusted on the CO<sub>2</sub> and °C knobs. The speed of the regulator loop is adjustable on the *Air Change Rate* knob.

The light indicates if the CO<sub>2</sub> or the temperature levels in the room have exceeded set levels. The light flashes if the CO<sub>2</sub> level exceeds 50ppm or the temperature exceeds the set point with 1°C. The indicator light will turn into constant light when the level is back to normal.

## **CO<sub>2</sub> linear output:**

The voltage varies linearly with the CO<sub>2</sub> level between 0 and 10V corresponding to 0 and 2000 ppm.

## **Regulation output:**

If the CO<sub>2</sub> level is above the CO<sub>2</sub> set point or the temperature above the temperature set point, the output signal will increase.

If the temperature knob is set to OFF the temperature regulator function is disabled.

To meet requirements from different types of ventilation systems, the speed of the regulator loop can be adjusted with the knob *Air-Change-Rate*. Voltage output range can be selected to 0-10V or 2-10V with a jumper.

## **Test feature:**

It is possible to force the output voltage to 10V by turning the 3 knobs fully clockwise. The indicator is flashing red while in test function.

## **Adjustment:**

The *Air-Change-Rate* knob adjusts how fast the output voltage increase from 0 to 10V when the CO<sub>2</sub> or temperature set point is exceeded. Turning clockwise will increase the speed of the regulation.

The °C potentiometer set the desired temperature. If you turn the control to OFF, the temperature regulation will be disabled.

The CO<sub>2</sub> knob set the desired CO<sub>2</sub> level.


When adjustments are completed, the front cover can be mounted to cover the knobs.

Jumper DP4 selects the output voltage range to 0-10V (default) or 2-10V. When DP4 (No jumper placed) the output is 0-10V (default). IF DP4 is closed (jumper in place) the output is 2-10V. NC is place holder for jumper. If jumper is missing entirely the output is 0-10V.

## Mounting:

The sensor is to be mounted on the ventilation duct.  
A 20mm hole is to be drilled for the sensor.  
Attach the bracket to the duct, using self-tapping screws.

NB! Be sure to place the sensor correctly in relation to the flow direction. (see drawing).  
Incorrect mounting may result in faulty CO<sub>2</sub> readings.

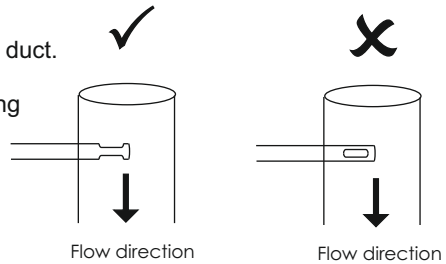

## IMPORTANT:

Cable transfer (glands / clamps) must fit tightly around cables/wires as leaks will result in less accurate CO<sub>2</sub> measurements.

## MODBUS


ModBus connection is placed under the cover, see drawing on next page.

**Important:** ModBus must be installed in accordance with the MOD-BUS standard. A termination resistor must be installed if required by the standard.

Jumper DP1, DP2 og DP3 are Node-ID selection for ES 899 MOD-BUS.

Node-ID-jumper (1=Jumper on, 0=No jumper):

DP1	DP2	DP3	Node-ID
1	1	0	2
1	0	1	3
1	0	0	4
0	1	1	5
0	1	0	102
0	0	1	103
0	0	0	104

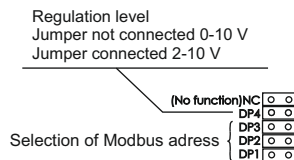


### Available data:

Register adresse	Description
3x0000	CO <sub>2</sub> Level(0-2000)
3x0001	Temperature(-40 +460 = 0-50°)
3x0002	Regulation output (0-255 = 0-10V)
4x0000	Air-Change-Rate set point (0-200 = slow-fast)
4x0001	Temperatur set point (170-270 =17-27°)
4x0002	CO <sub>2</sub> set point (500-1500)

If PLC-adressing is selected, 1 is added to the addresses above.

## Connection Example:

ModBus connection  
under cover

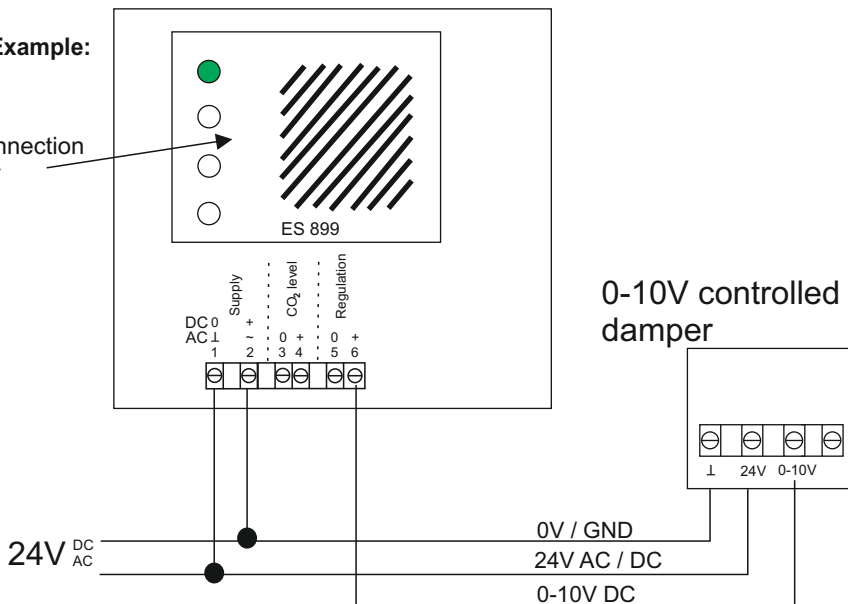

## Technical data:

Supply voltage:	DC: 24V ±10% 3VA AC: 24V ±10% 6,4VA
Measuring range CO <sub>2</sub> :	0 - 2000 ppm
Accuracy CO <sub>2</sub> :	±50ppm ved 500 ppm
Measuring range temperature:	0 - 50°C
Accuracy temperatur:	±0,5°C
CO <sub>2</sub> proportional output:	0-10V, 15mA
Regulation output:	PID based 0-10V / 2-10V, 15mA
Rs485 / MOD-BUS:	RTU, 19200 Baud, even parity, 1 stop bit
Operating temperature:	20 - 50°C
Enclosure:	IP 54 (box)
Dimensions (HxWxD):	Box: 120x122x55 mm - 120x122x171 (incl. sensor tube)

Maintenance free in households and office environments.

## The product complies with the following standard

EN 60730-1

Date: 20/09-2021  
Drawing: 950-206650 CO2Sensor\_ES899\_UK  
Drawn by: UP/AH/JEH/DC/df  
Rev.: 3.1  
Manufactured by: LS Control A/S  
Industrivej 12, DK-4160 Herlufmagle



**LSCONTROL**